

The Voltius Range of Boilers

The Ultimate Electric System Boiler Solution

INSTALLATION & TECHNICAL MANUAL



Voltius

**This Document MUST Be Left In The Possession Of The Property Owner On
Completion Of Installation Of This Product**

CONTENTS	Page
1. SAFETY	1
1.1 SYMBOL KEY	1
1.2 SAFETY PRECAUTIONS	1
1.3 GENERAL EXPLANATIONS	2
1.4 C.O.S.H.H	2
1.5 PREPARATION	2
1.5.1 Load Check	2
1.5.2 Boiler Location	2
1.5.3 Central Heating Installation	2
2. INTRODUCTION OF THE DEVICE	3
2.1 APPERANCE AND EXTERNAL DIMENSIONS	3
2.2 COMPONENTS OF THE BOILER	4
2.2.1 6-30 kW Models	4
2.2.2 32-40 kW Models	5
2.2.3 50-80 kW Models	6
2.2.4 100 kW Model	7
2.3 MAIN FEATURES OF THE BOILER	8
3. MOUNTING AND INSTALLATION	9
3.1 UNPACKING	9
3.1.1 Delivery Content	9
3.2 INSTRUCTIONS FOR MOUNTING	9
3.3 MINIMUM SPACES FOR INSTALLATION	9
3.4 WALL MOUNTING	10
3.5 HEATING SYSTEM INSTALLATION CONNECTIONS	11
3.6 CIRCULATION PUMP INFORMATION	13
3.6.1 Pump Data 6kW - 50kW Models	13
3.6.2 Pump Data 60kW - 100kW Models	17
3.7 BOILER INSTALLATION DIAGRAMS	18
3.7.1 Only Heating	18
3.8 ELECTRIC CONNECTION	19

3.8.1 Electricity Connection Precautions	19
3.8.2 Electricity Supply Connection	19
3.8.3 Electrical Connection Diagram 230V (Monophase) (6kW-15kW Models)	20
3.8.4 Electrical Connection Diagram 400V (3-phase) (18-40kW Models)	21
3.8.5 Electrical Connection Diagram 400V (3-phase) (50-60kW Models)	22
3.8.6 Electrical Connection Diagram 400V (3-phase) (80kW Model)	23
3.8.7 Electrical Connection Diagram 400V (3-Phase) (100 kW Model)	24
3.9 ROOM THERMOSTAT CONNECTION	25
4.COMMISSIONING	28
4.1 FILLING WATER TO THE SYSTEM	28
4.2 STARTING UP	29
5.USER INSTRUCTIONS	31
5.1 CONTROL PANEL	31
5.2 OPERATION INSTRUCTIONS	34
5.2.1 TURNING ON THE BOILER	34
5.2.2 BOILER OPERATION MODE SELECTION	34
5.2.3 SYSTEM SETTINGS	35
5.2.3.1 Date - Time Setting	36
5.2.3.2 Language Selection	36
5.2.3.3 WEEKLY TIMER	36
5.2.4 Weather Compensation	38
5.3 Service Settings Menu	40
5.4 ERROR CODES AND TROUBLESHOOTING	42
6.SAFETY SYSTEM OF THE DEVICE	43
6.1 RCD DEVICE (SHORT CIRCUIT RELAY)	43
6.2 HEATING TANK FLOAT WATER LEVEL SENSOR (H6)	43
6.3 LOW / HIGH WATER PRESSURE	43
6.4 OVERHEAT LIMIT THERMOSTAT	43
6.5 SAFETY THERMOSTAT	44
6.6 FROST PROTECTION	44
6.7 CENTRAL HEATING NTC SENSOR	44
6.8 HIGH WATER PRESSURE PROTECTION	44
6.9 CIRCULATION PUMP ANTI-JAMMING SYSTEM	44

7. TECHNICAL TABLE	45
8. MAINTENANCE	46
9. GUARANTEE CONDITIONS	46
10. EXPLODED VIEW (6-30 kW MODELS)	48
10.1 MAIN HEAT EXCHANGER GROUP DETAIL (6-30 kW MODELS)	49
10.2 RELAY BOARD GROUP DETAIL (6-30 kW MODELS)	50
10.4 EXPLODED VIEW PARTS LIST (6-30 kW MODELS)	51
11.EXPLODED VIEW (32-40kW MODELS)	52
11.1 MAIN HEAT EXCHANGER GROUP DETAIL (32-40 kW MODELS)	53
11.2 RELAY BOARD GROUP DETAIL (32-40 kW MODELS)	54
11.3 EXPLODED VIEW PARTS LIST (32-40 kW MODELS)	55
12. EXPLODED VIEW (50-80 kW MODELS)	56
12.1 MAIN HEAT EXCHANGER GROUP DETAIL (50-80 kW MODELS)	57
12.2 RELAY BOARD GROUP DETAIL(50-80 kW MODELS)	58
12.3 EXPLODED VIEW PARTS LIST (50-80 kW MODELS)	59
13. EXPLODED VIEW (100 kW MODEL)	60
13.1 MAIN HEAT EXCHANGER GROUP DETAIL (100 kW MODEL)	61
13.2 RELAY BOARD GROUP DETAIL (100 kW MODEL)	62
13.3 EXPLODED VIEW PARTS LIST (100 kW MODEL)	63
14. DECOMISSIONING	64
15. DISPOSAL	64
16. ERP PRODUCT FISCHE	64
16.1 ERP PRODUCT INFORMATION	65

1. SAFETY

1.1 SYMBOL KEY

 This symbol expresses the risk of serious personnel injury or death unless taking care of warnings.

 This symbol expresses the risks which can cause minor injuries or harms to the environment and goods.

1.2 SAFETY PRECAUTIONS

Do not open the protective cover of the device.

 Electric shock as a result of the contact with electrical items.

 Personnel injury like burnt as a result of contact with overheated surfaces or cut as a result of contact with sharp surfaces.

 **Do not remove the device from the place of mounting, do not disconnect the electrical or water connections. (Get in contact with an authorised engineer)**

 Electric shock as a result of the contact with electrical items.

Flood as a result of incorrect disconnection of water installation.

 **Protect the main electrical cable against damages.**

Electric shock danger as a result of contact with not isolated open wires.

 **Do not leave tools or other objects on the device.**

 Injury resulted from falling objects from device because of vibration.

Damage to the furniture or floor or animals resulted from falling objects from device because of vibration.

Do not climb on the device.

 Personal injury as a result of falling down with device or falling down of the device itself.

 Damage risk under device as a result of fall from the place installed.

 **Do not climb on unsteady objects like stool, chair or ladders for cleaning or maintenance.**

 Personal injury resulted from falling from height or cuts which can be caused from a rapid closing of the ladder.

 **Do not clean the device without firstly isolating the main power supply.**

Electric shock as a result of contact with electrical items.

 **Use the device for only heating the house and getting hot water.**

 Explosion and damage risk resulted from inappropriate use and overloading. Damage risk to the environment resulted from inappropriate use.

 **Do not allow children or adults who have limited physical or mental competence, or People lacking the knowledge about the operating instructions of the boiler to intervene with the device.**

Risk of damage to device resulted from misuse.

 Personal injury from burns, breathing smoke or poisoning.





Pay attention as to not damage any electric cables and water pipes inside the wall while making holes on wall for boiler mounting plate.



Electric shock as a result of the contact with electrical items.

Flood risk results from water pipe puncture.



Suitable cable types must be used in all electric connections.

Fire risk results from overheated cables due to incorrect type or size.

1.3 GENERAL EXPLANATIONS

The Voltius Electric Boiler provides wet central heating via conventional radiators or underfloor heating. Installation and services must be in accordance with current standards and Regulations. The Electric Heating Company Ltd is not responsible for damages caused from incorrect installation and usage.

Make sure the boiler is operated only to comply with the intended use of the boiler. Any usage which does not comply with the boiler's intended use may cause serious injury, death or harms to the environment and goods.

ATTENTION ; Do not allow unauthorised persons to tamper with or adjust settings or components within this product.

1.4 C.O.S.H.H

Materials used in the manufacture of this appliance are non-hazardous and no special precautions are required when fitting or servicing this appliance.

1.5 PREPARATION

1.5.1 Load Check

A load check should be taken into consideration when installing high output boilers. In some situations it may be a requirement to contact the local DNO.

1.5.2 Boiler Location

The boiler must be installed on a wall that will provide an adequate fixing, and should be installed in a location that the boiler and pipe-work are not subject to frost and damp conditions.

1.5.3 Central Heating Installation


Detailed recommendations are given in EN 12828 & BS 7593.

Pipes forming part of the useful heating surface should be insulated to prevent any potential heat loss or frost damage.

Drain valves should be fitted at the lowest point of the system pipe work in an accessible position.

2. INTRODUCTION OF THE DEVICE


2.1 APPERANCE AND EXTERNAL DIMENSIONS

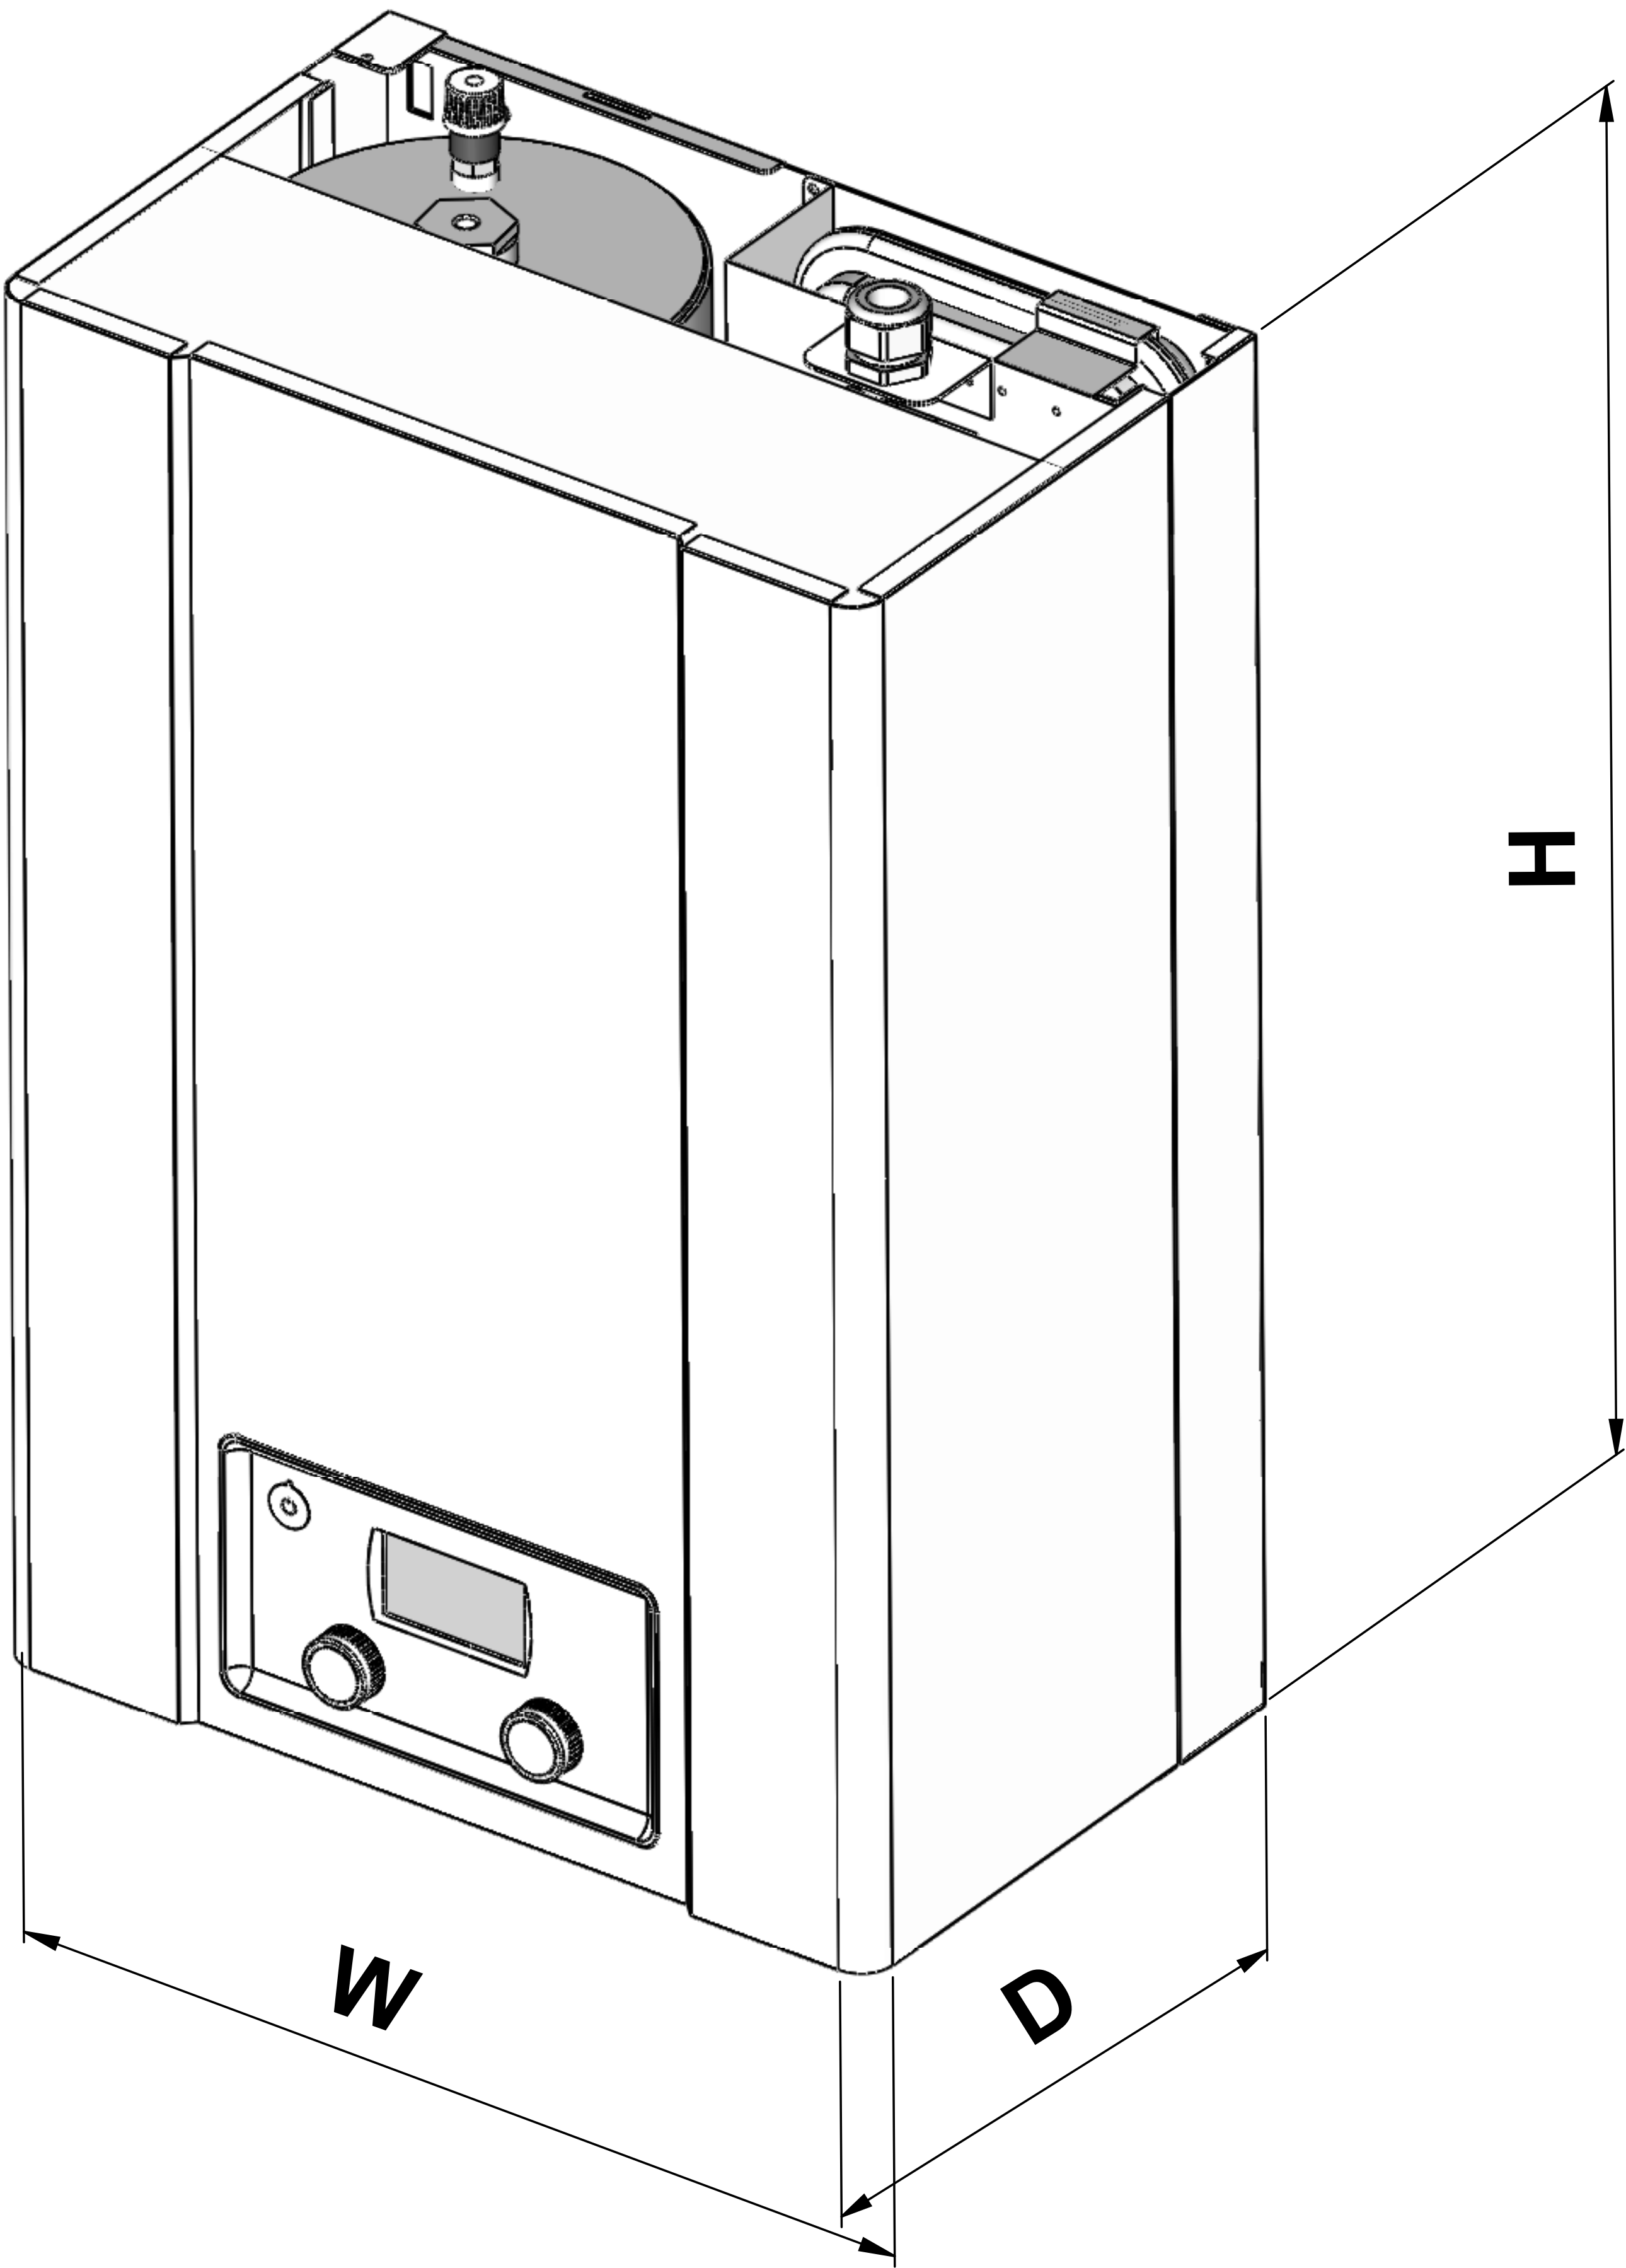

Model	W	D	H
6-30 kW	440	274	650
32-40 kW	435	320	740
50-100 kW	571	320	755

2.2 COMPONENTS OF THE BOILER

2.2.1 6-30 kW Models

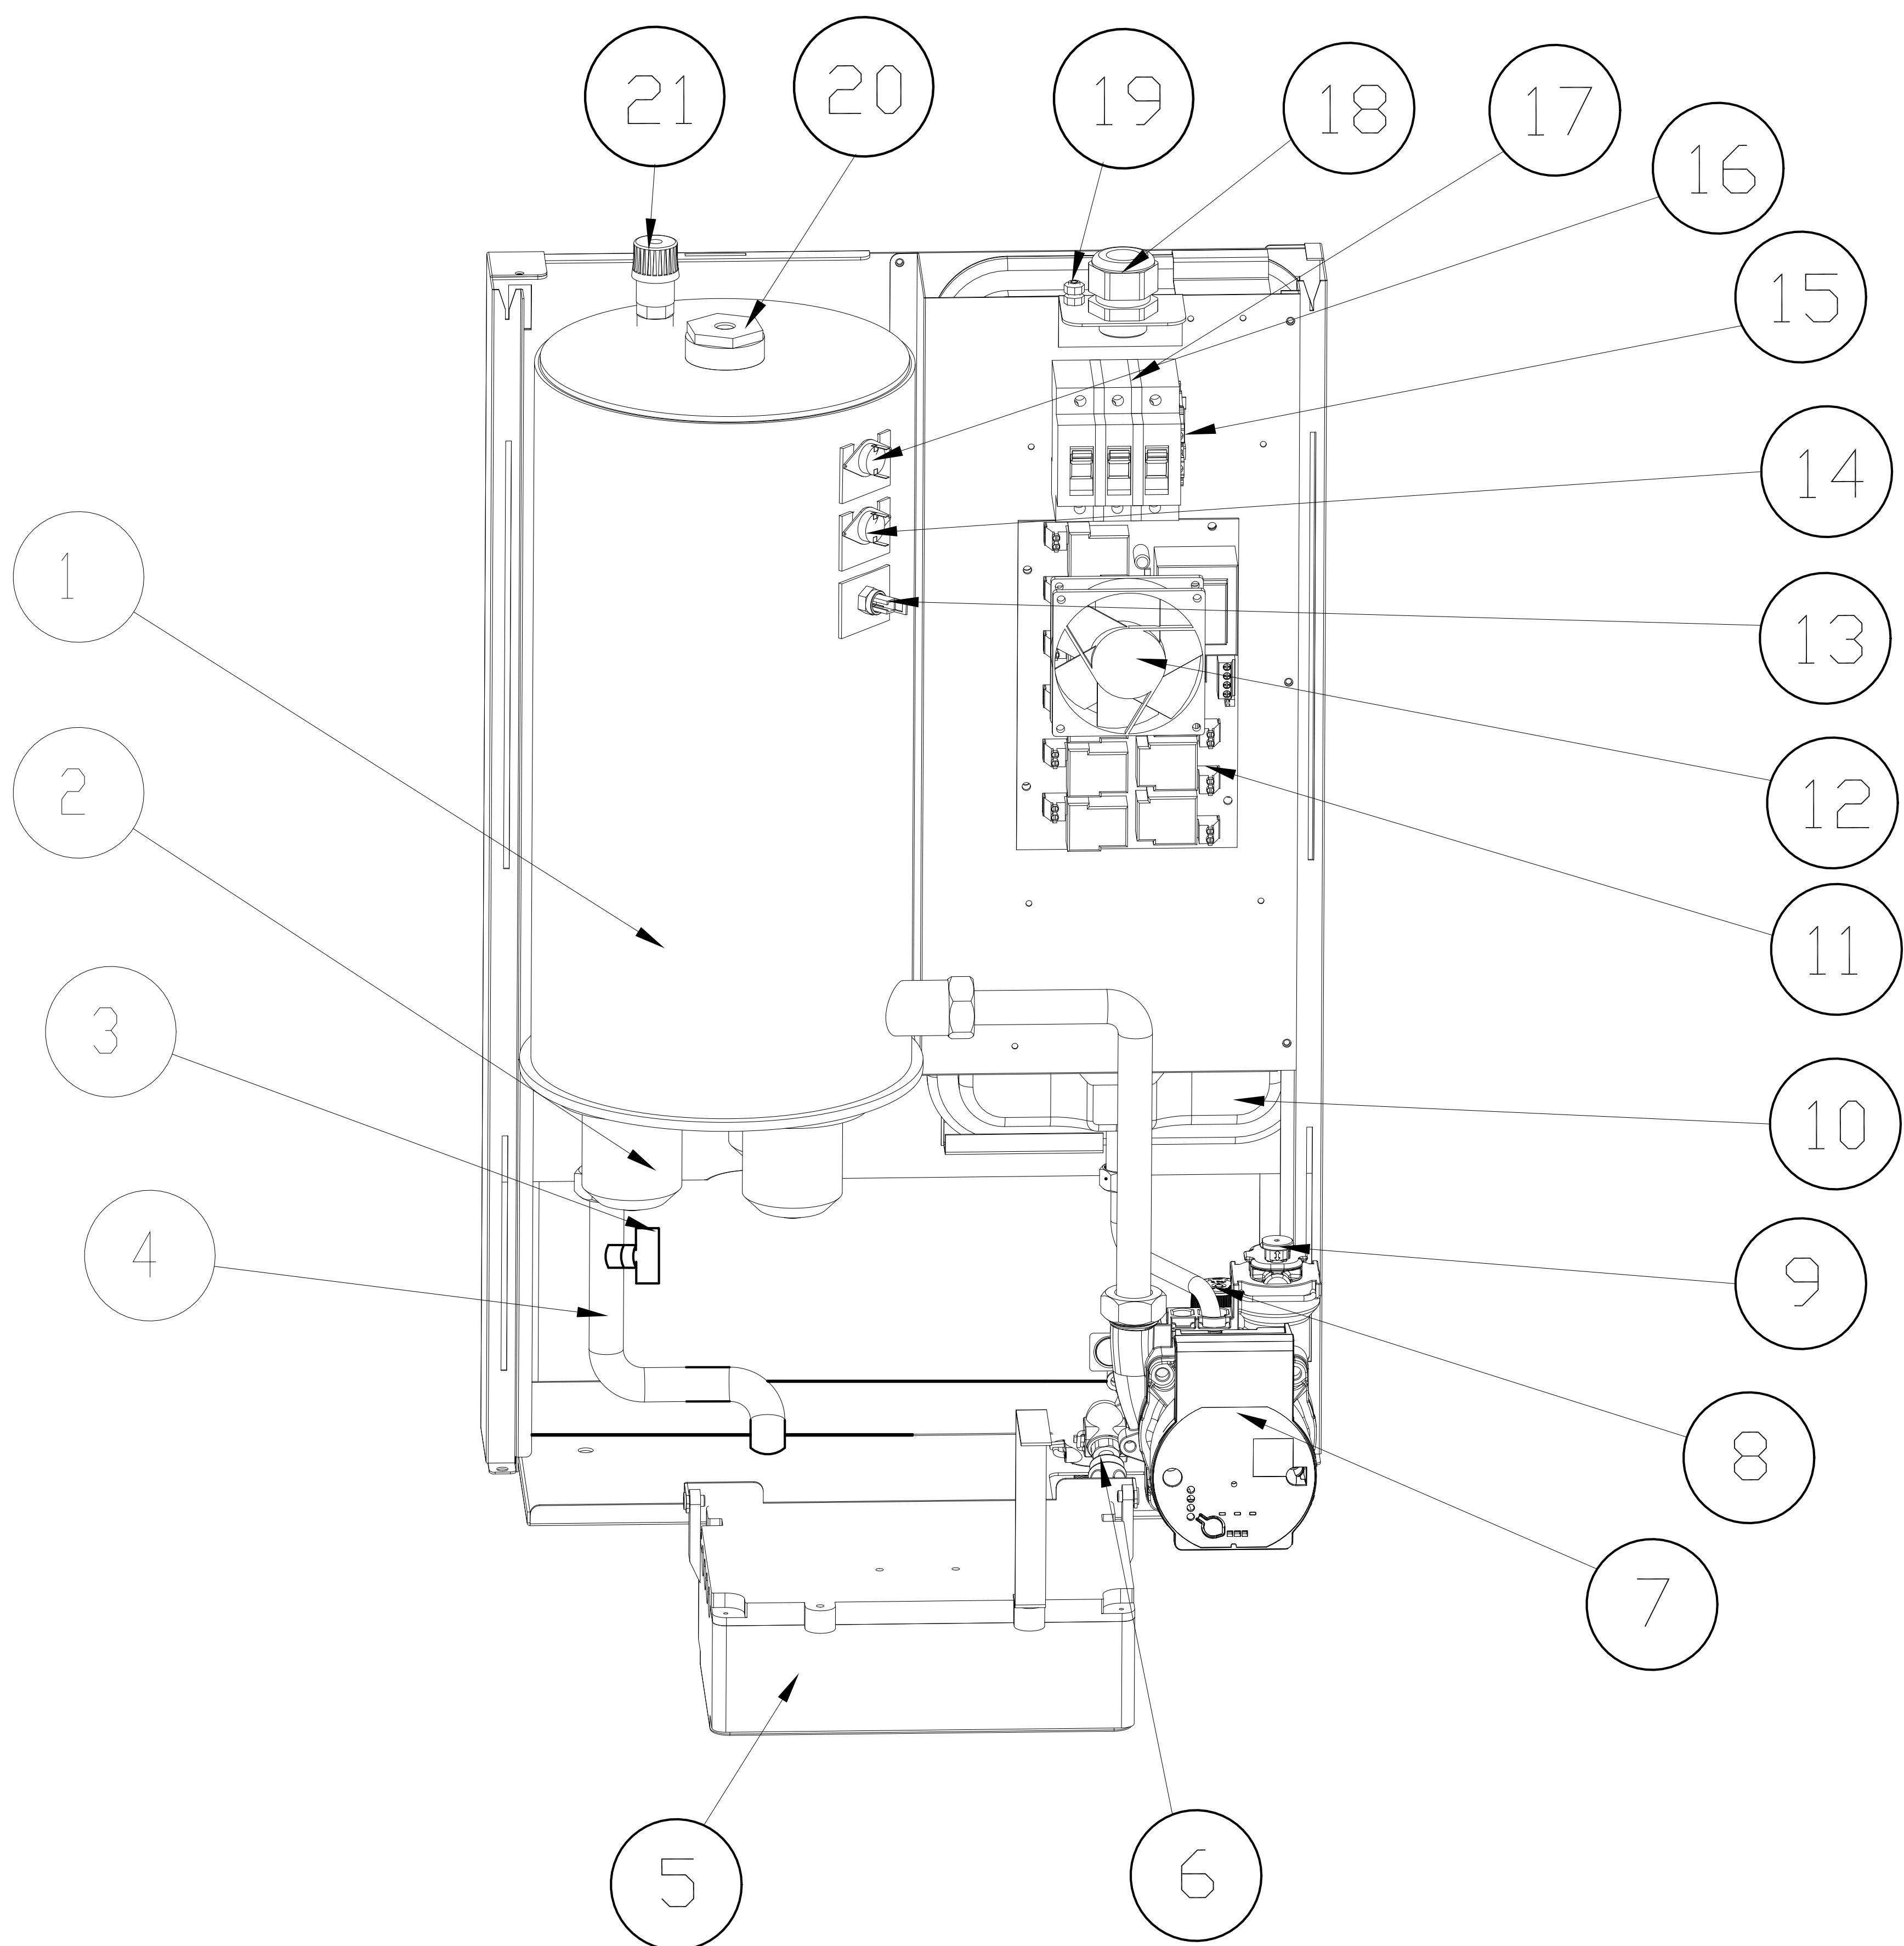


1. Main heat exchanger
2. Heating elements
3. Water pressure sensor
4. Flow copper pipe (heat only)
5. Control Panel and Mainboard
6. Filling valve
7. Circulation pump
8. Return manifold (heat only)
9. Auto air vent
10. Expansion tank
11. Relay board


12. Cooling fan for relay board
13. CH temperature sensor
14. Safety thermostat
15. Neutral cable terminal
16. Limit thermostat
17. RCD Device
18. Cable gland
19. Earth connection
20. Float level sensor
21. Manual air vent

- Drawings are for illustration purposes. Number of heating elements and some components may vary in different capacities of boilers.
- The manufacturer reserves the right to make changes to the parts used in the boilers.

2.2.2 32-40 kW Models

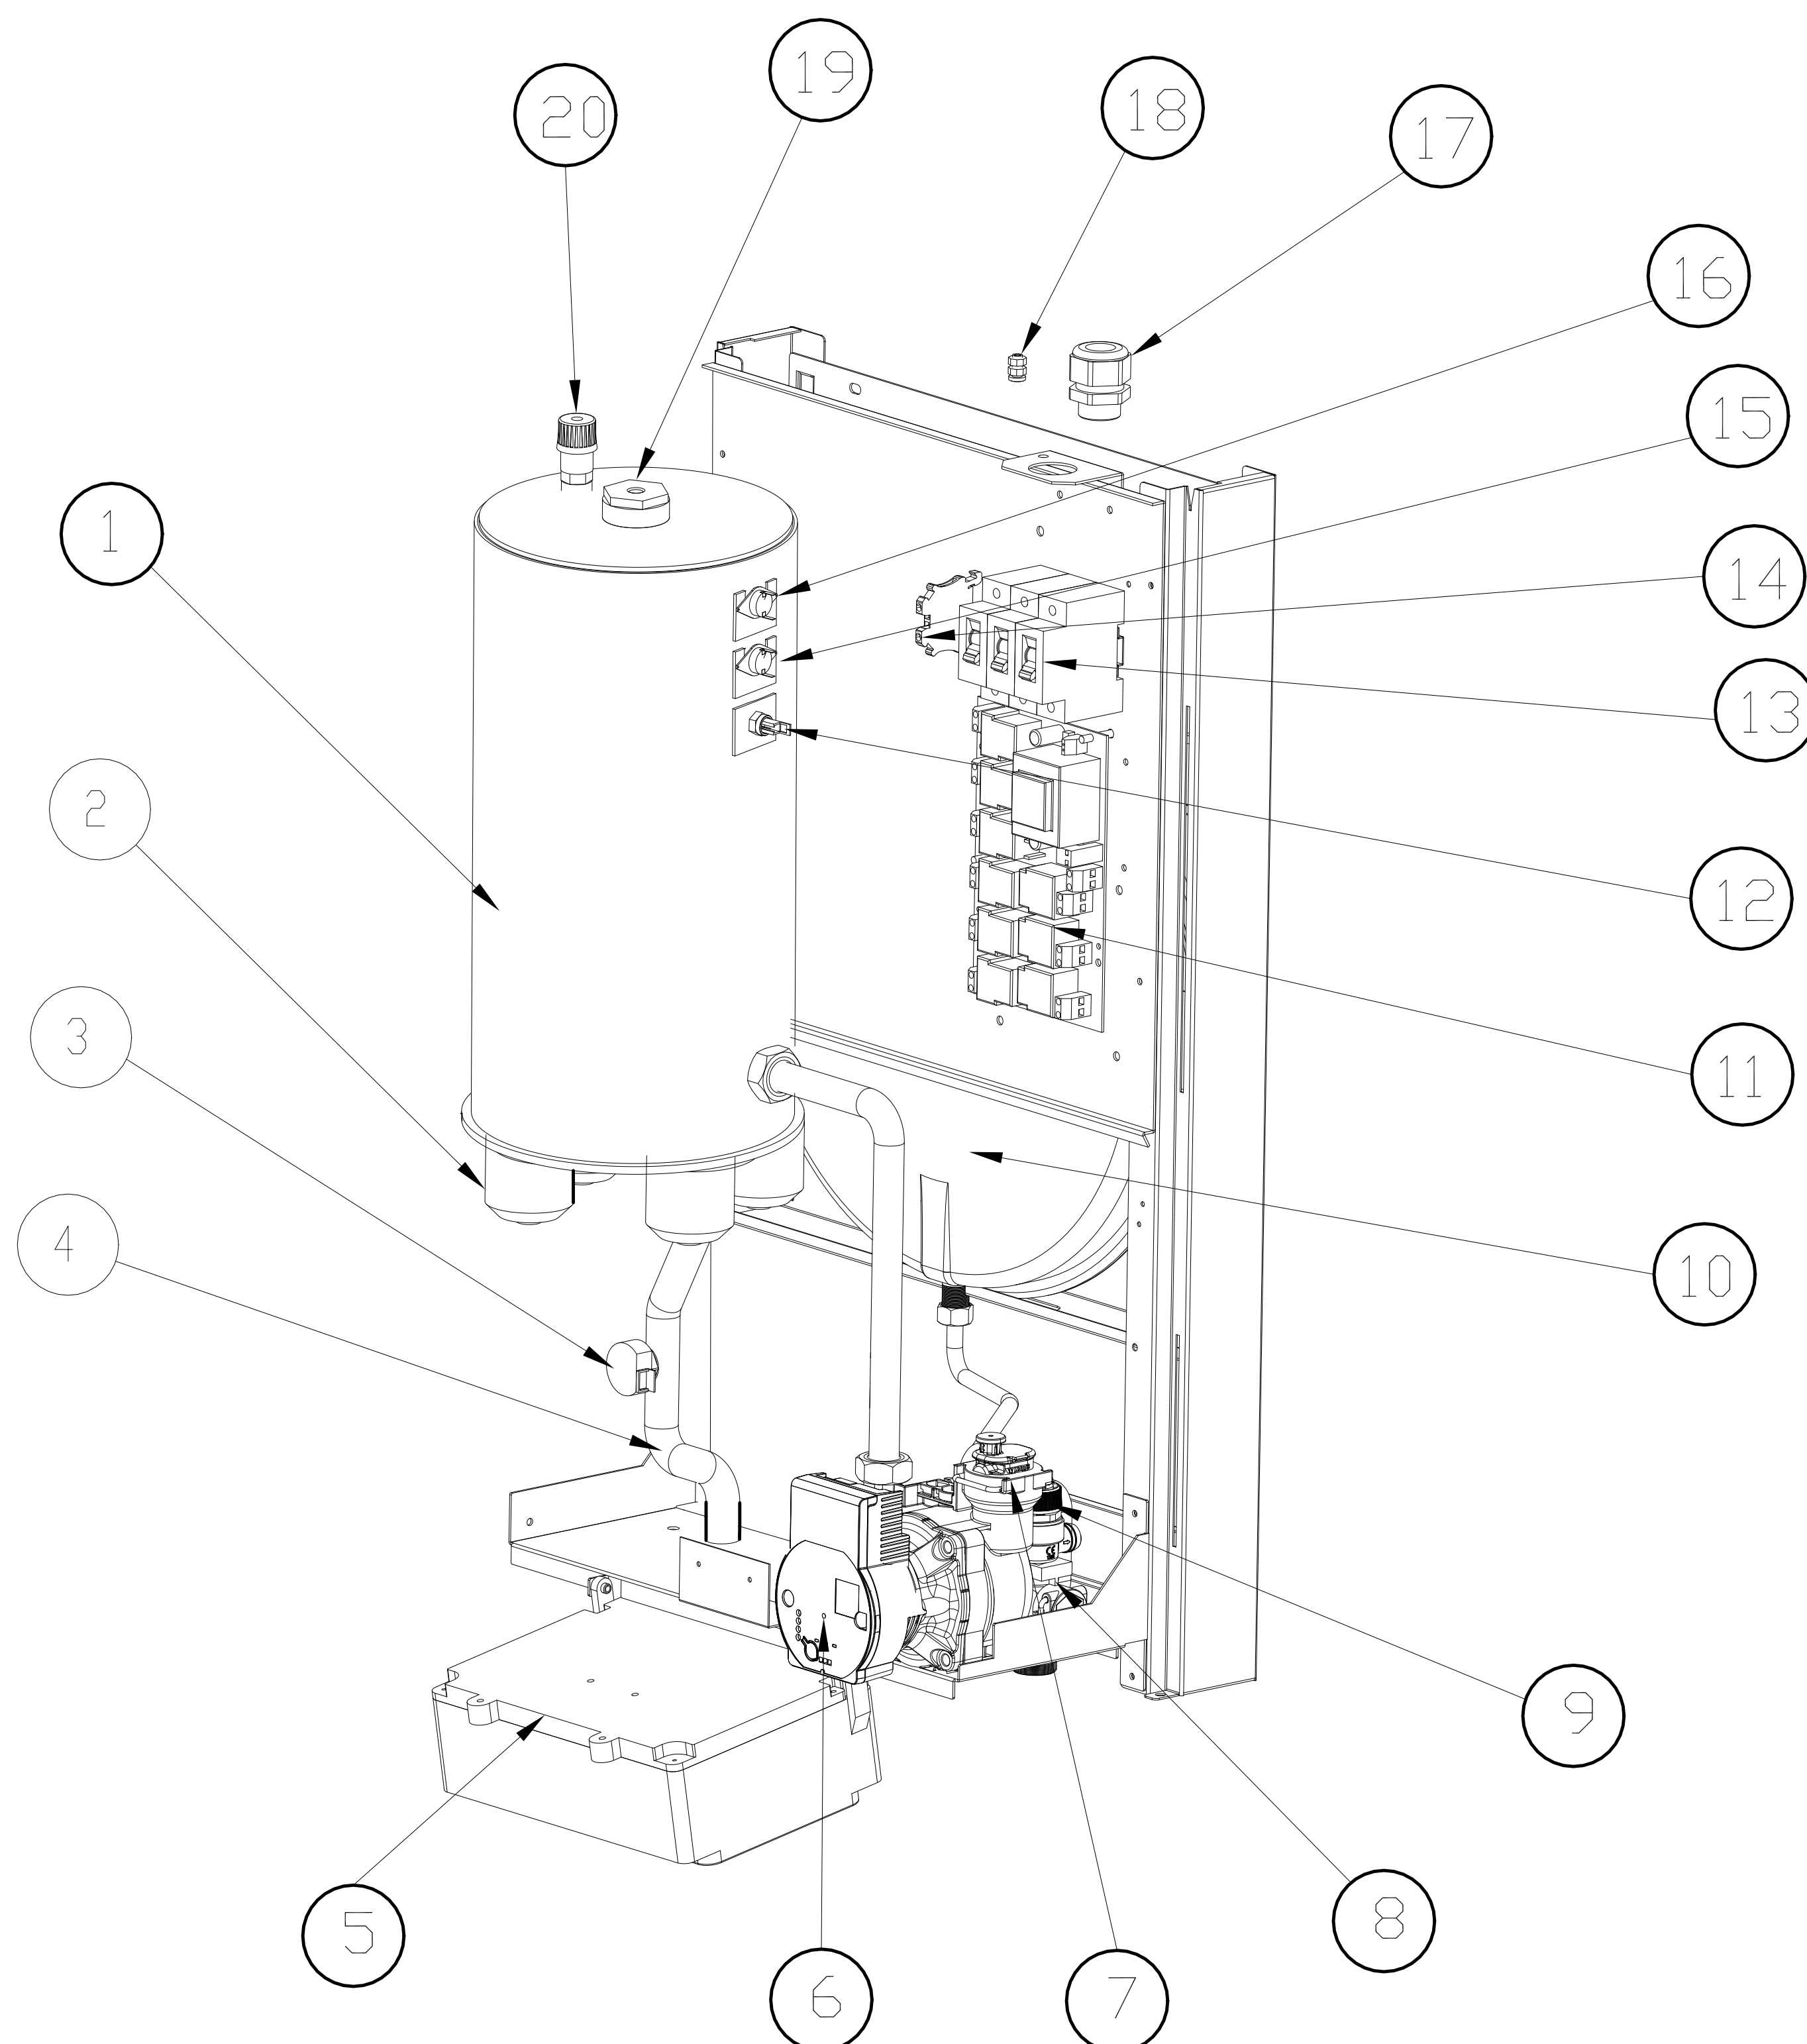


1. Main heat exchanger
2. Heating elements
3. Water pressure sensor
4. Copper flow pipe (heat only)
5. Control panel and Mainboard
6. Circulation pump
7. Automatic air vent
8. Return manifold (heat only)
9. 3 bar Safety valve
10. Expansion tank
11. Relay board
12. CH temperature sensor
13. RCD Device
14. Neutral cable terminal
15. Safety thermostat
16. Limit thermostat

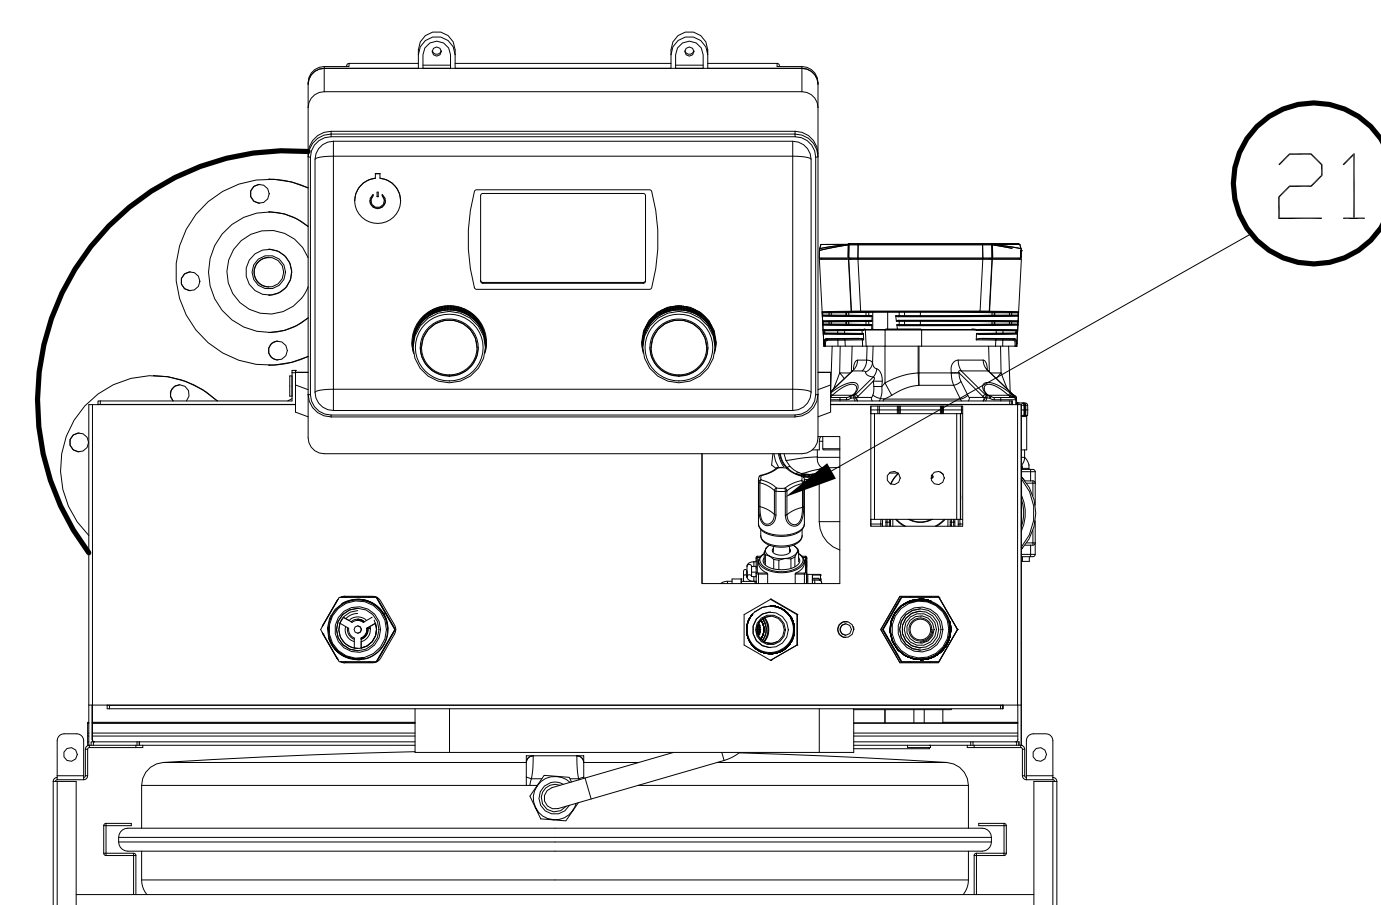

17. Cable gland
18. Earth connection
19. Float level sensor
20. Manual air vent
21. Filling valve


- Drawings are for illustration purposes. Number of heating elements and some components may vary in different capacities of boilers.
- The manufacturer reserves the right to make changes to the parts used in the boilers.

2.2.3 50-80 kW Models

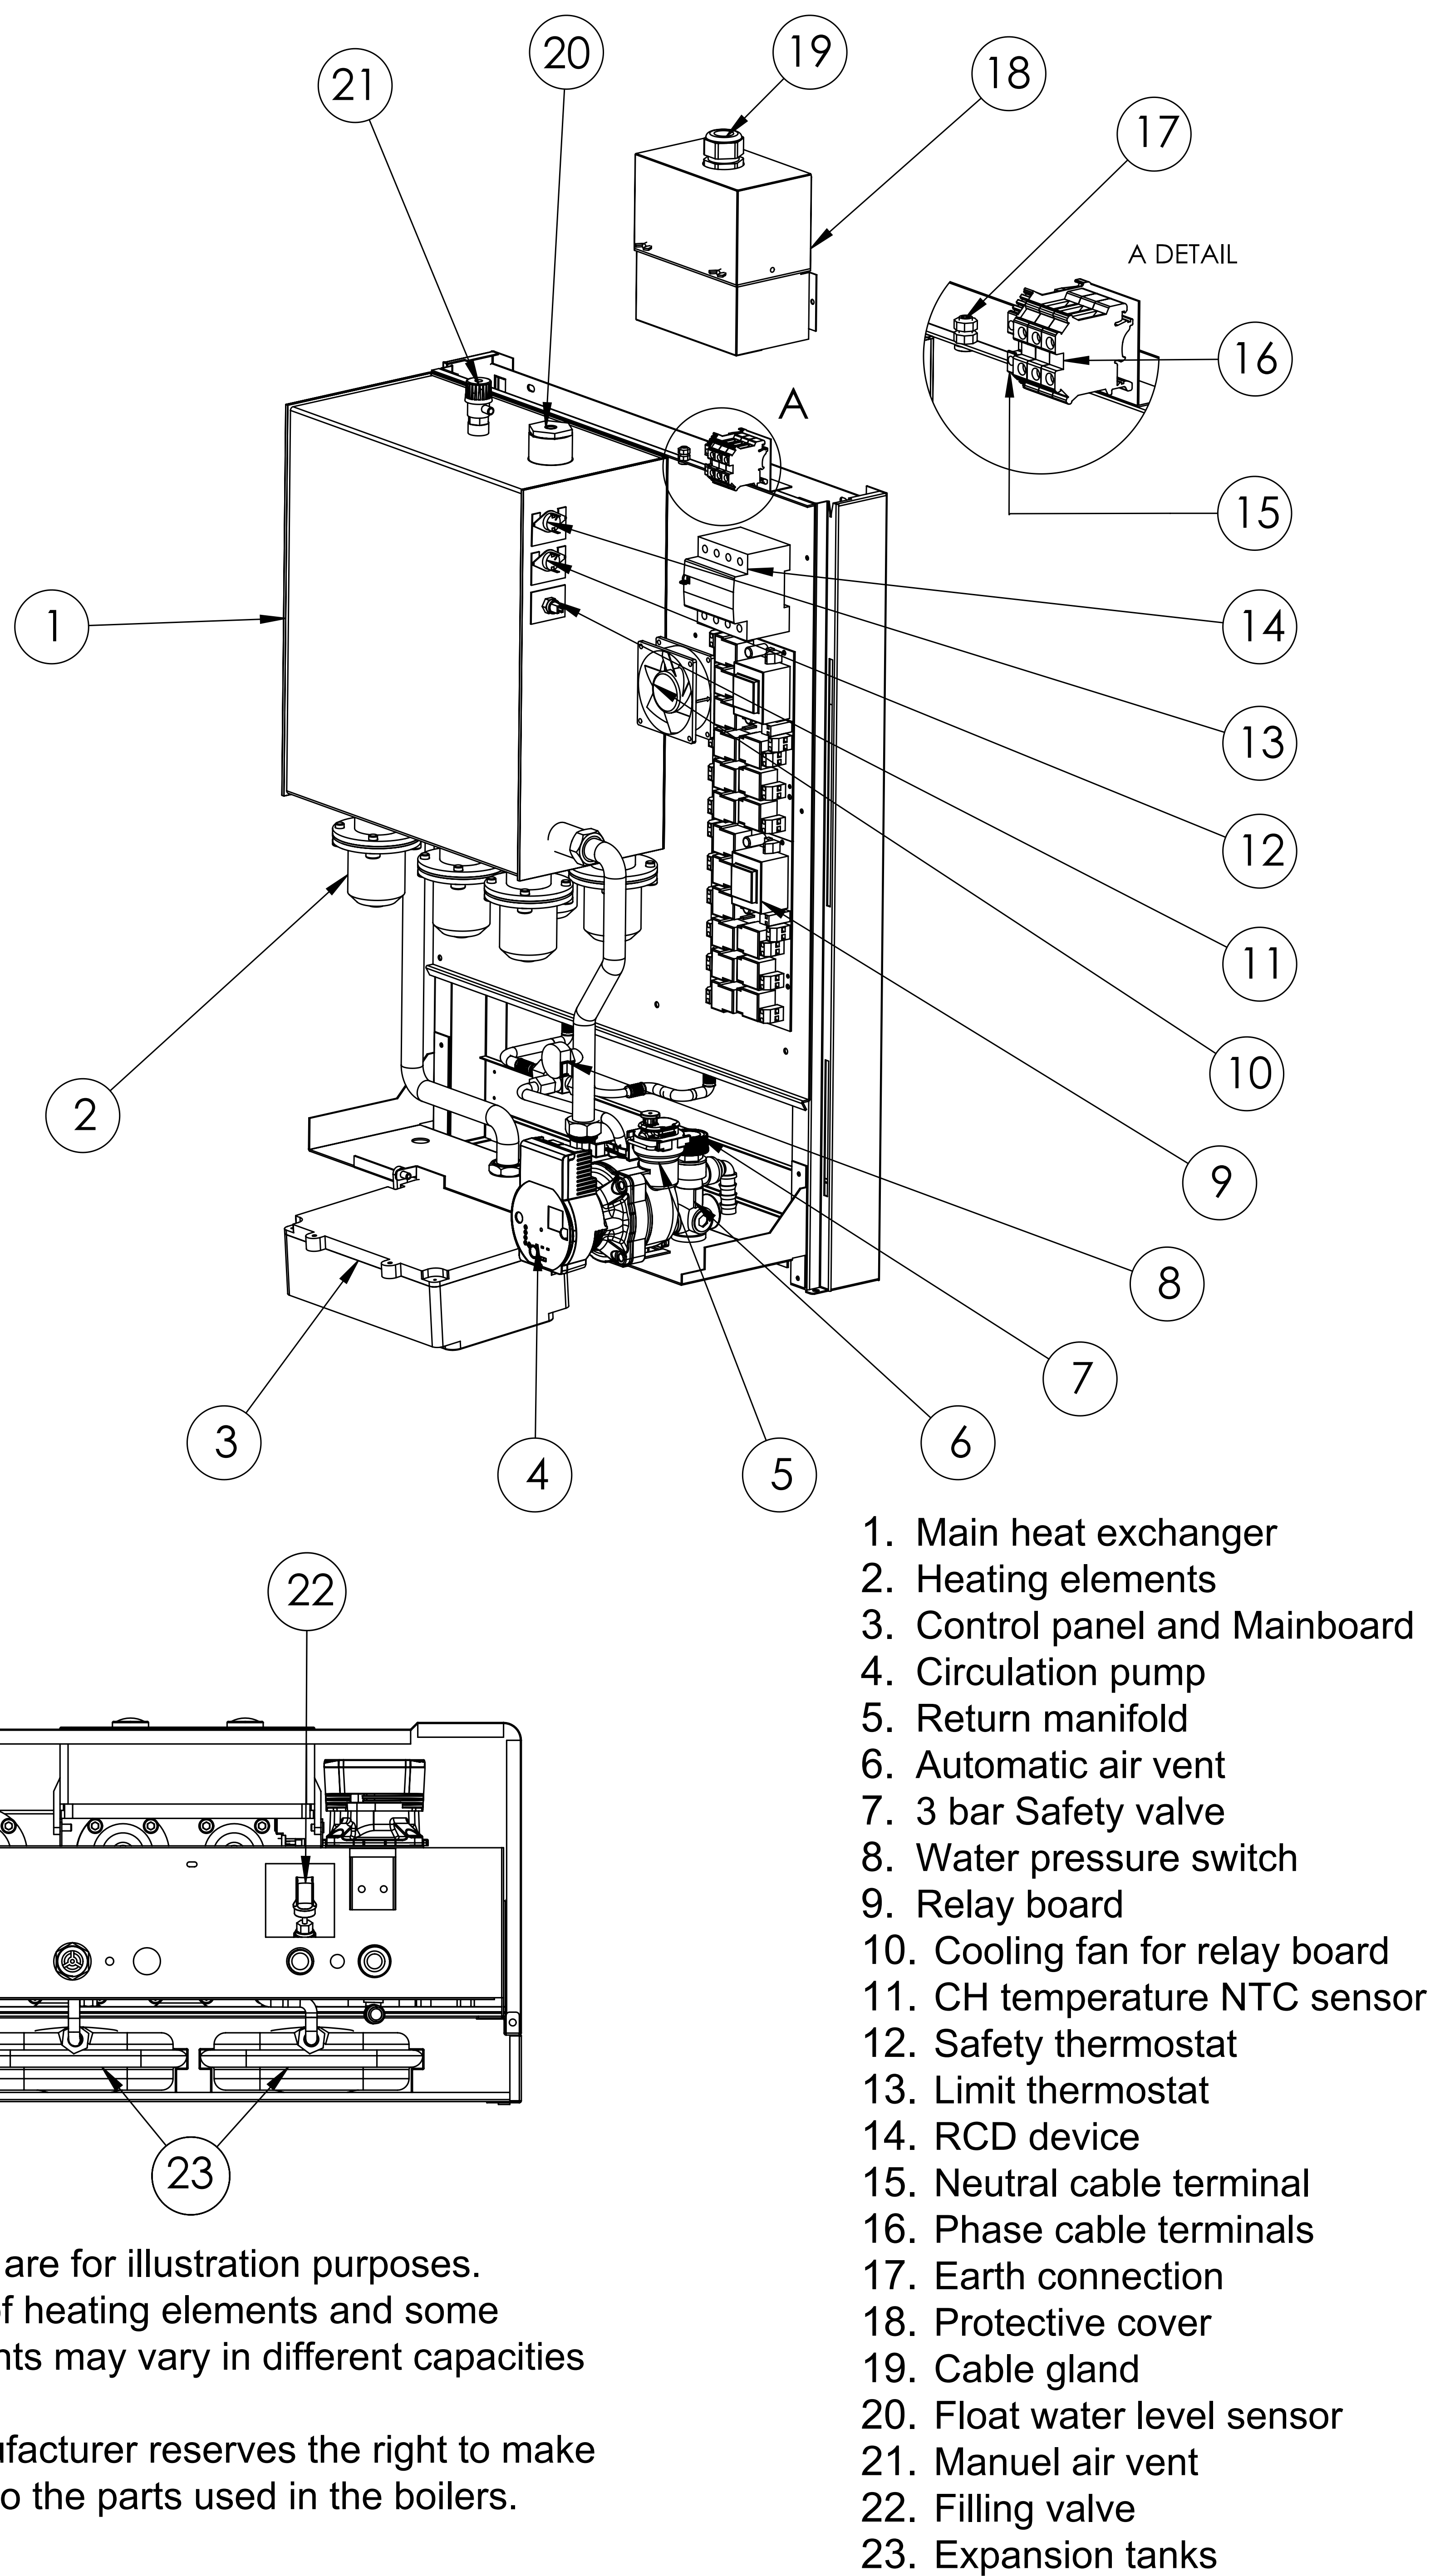

- Drawings are for illustration purposes. Number of heating elements and some components may vary in different capacities of boilers.
- The manufacturer reserves the right to make changes to the parts used in the boilers.

2.2.4 100 kW Model

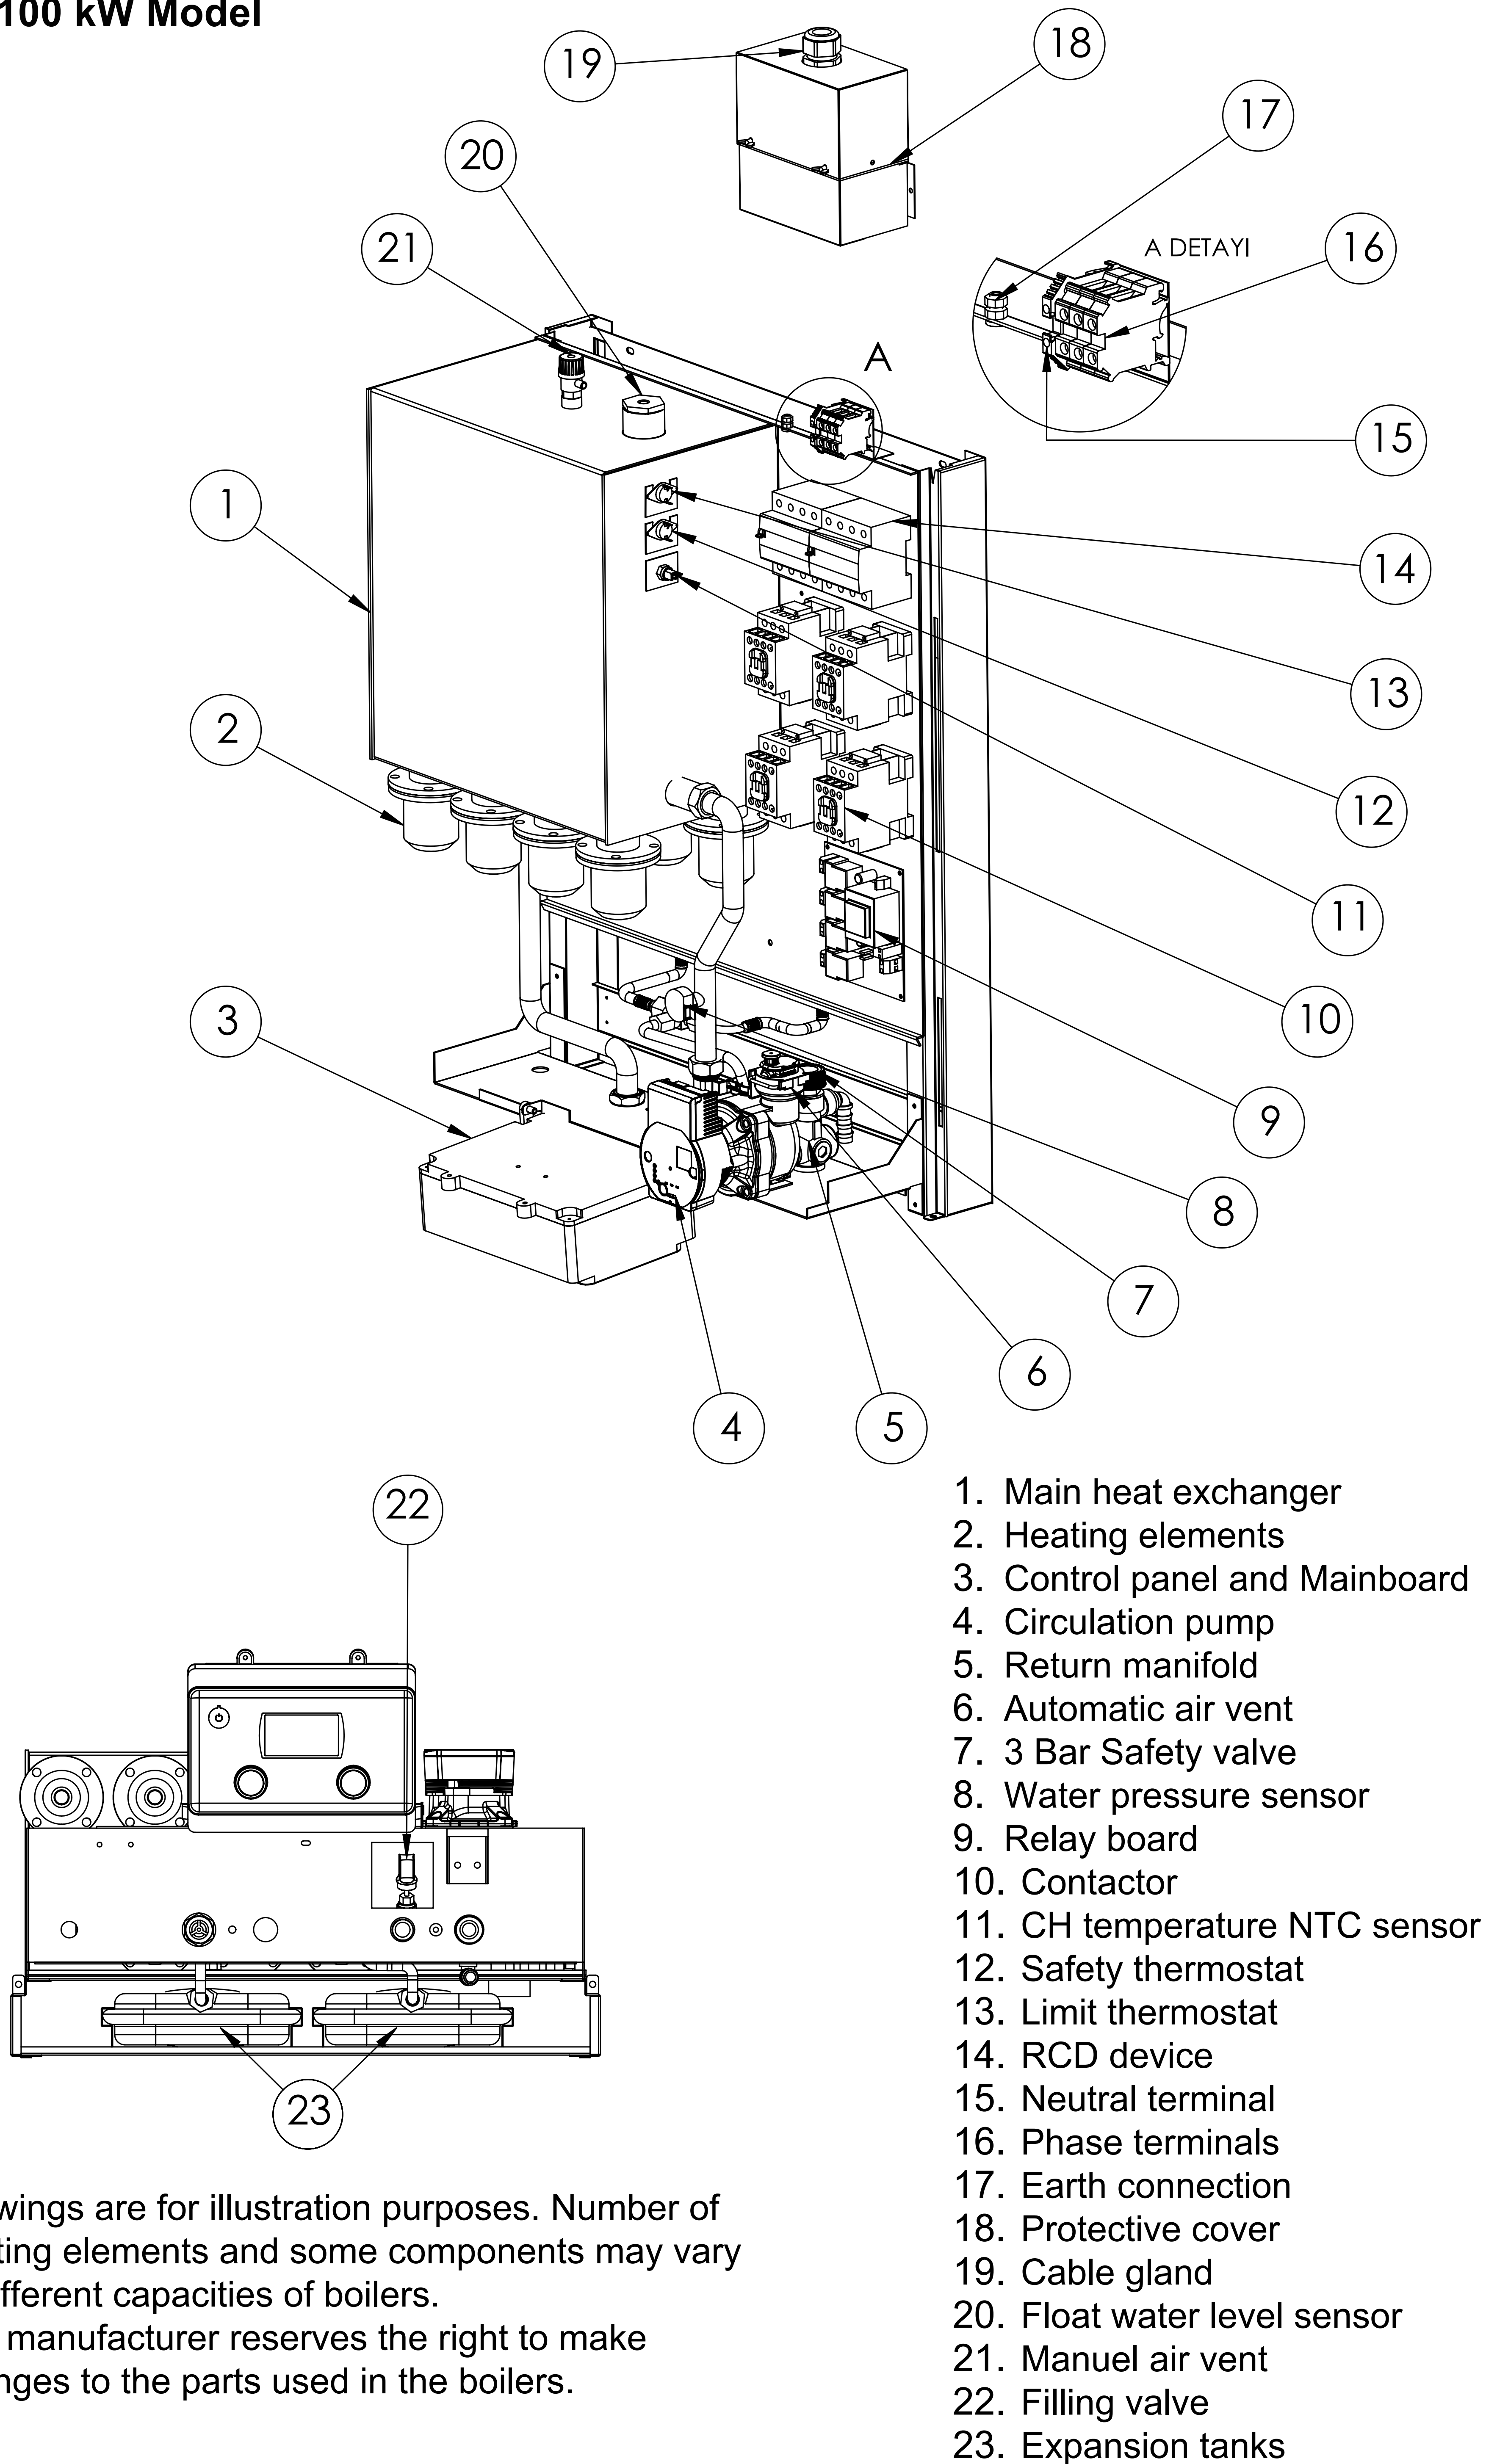


- Drawings are for illustration purposes. Number of heating elements and some components may vary in different capacities of boilers.
- The manufacturer reserves the right to make changes to the parts used in the boilers.

2.MAIN FEATURES OF THE BOILER

- The Voltius Electric Boiler uses only electricity as fuel for heating and is 100% environmentally friendly with Zero Carbon emissions.
- There is no heat loss in electric boilers. Unlike combustion systems with fossil fuels, there is no exhaust therefore there is no heat loss from the exhaust with hot fumes.
- The Voltius operates with 99% efficiency.
- With full automatic modulation, heating capacity of the boiler is adjusted according to the heating demand, ensuring maximum energy savings during operation.
- Mainboard with microprocessor and a large LCD screen enables enhanced control parameters and easy operation for the end user.
- Optional installation compliance pack provides a high level of automation, comfort and economy.
- Underfloor heating mode for safe and efficient underfloor heating applications.
- Adjustable maximum boiler capacity feature enables the boiler output to be adjusted on the LCD screen enabling the option to reduce the output of the boiler depending on climate or insulation levels of houses.
- Due to its quiet operation the boiler can be mounted in living areas easily.
- It offers an aesthetic look with its minimized dimensions and exterior design.
- Heating system can quickly enter the regime and heat the house rapidly.
- Protection against high pressures with 3 bar safety valve.
- Water pressure sensor shows system water pressure on the LCD screen also providing protection for low and high pressures.
- Energy efficient circulation pump provides energy savings in line with ErP regulation.
- Float water level sensor ensures the main heat exchanger is full and heating elements are prevented from operating without water.
- RCD (short circuit relay) provides electrical protection and safe operation.
- Electronic water temperature control with NTC system assures precise temperatures.
- Double safety measures against overheating with limit thermostat and safety thermostat.
- Anti-jamming system for the circulation pump. Pump Operates every 24 hours to prevent pump jamming.
- Automatic frost protection system.
- Wide capacity range, from 6kW upto 100kW.
- Weather Compensation via optional outdoor temperature sensor. Outdoor temperature is displayed on boiler LCD screen and system temperature is automatically adjusted to reduce energy consumption. **Outdoor Sensor Part Code: ASP0073**
- For boiler capacities greater than 40kW, a low loss header is required to separate the primary and secondary heating circuits. The primary circuit is from the boiler(s) to the low loss header vessel. For the secondary heating circuit an additional external expansion vessel and circulation pump is required according to the size and water volume of the heating installation.

3.MOUNTING AND INSTALLATION

3.1 UNPACKING

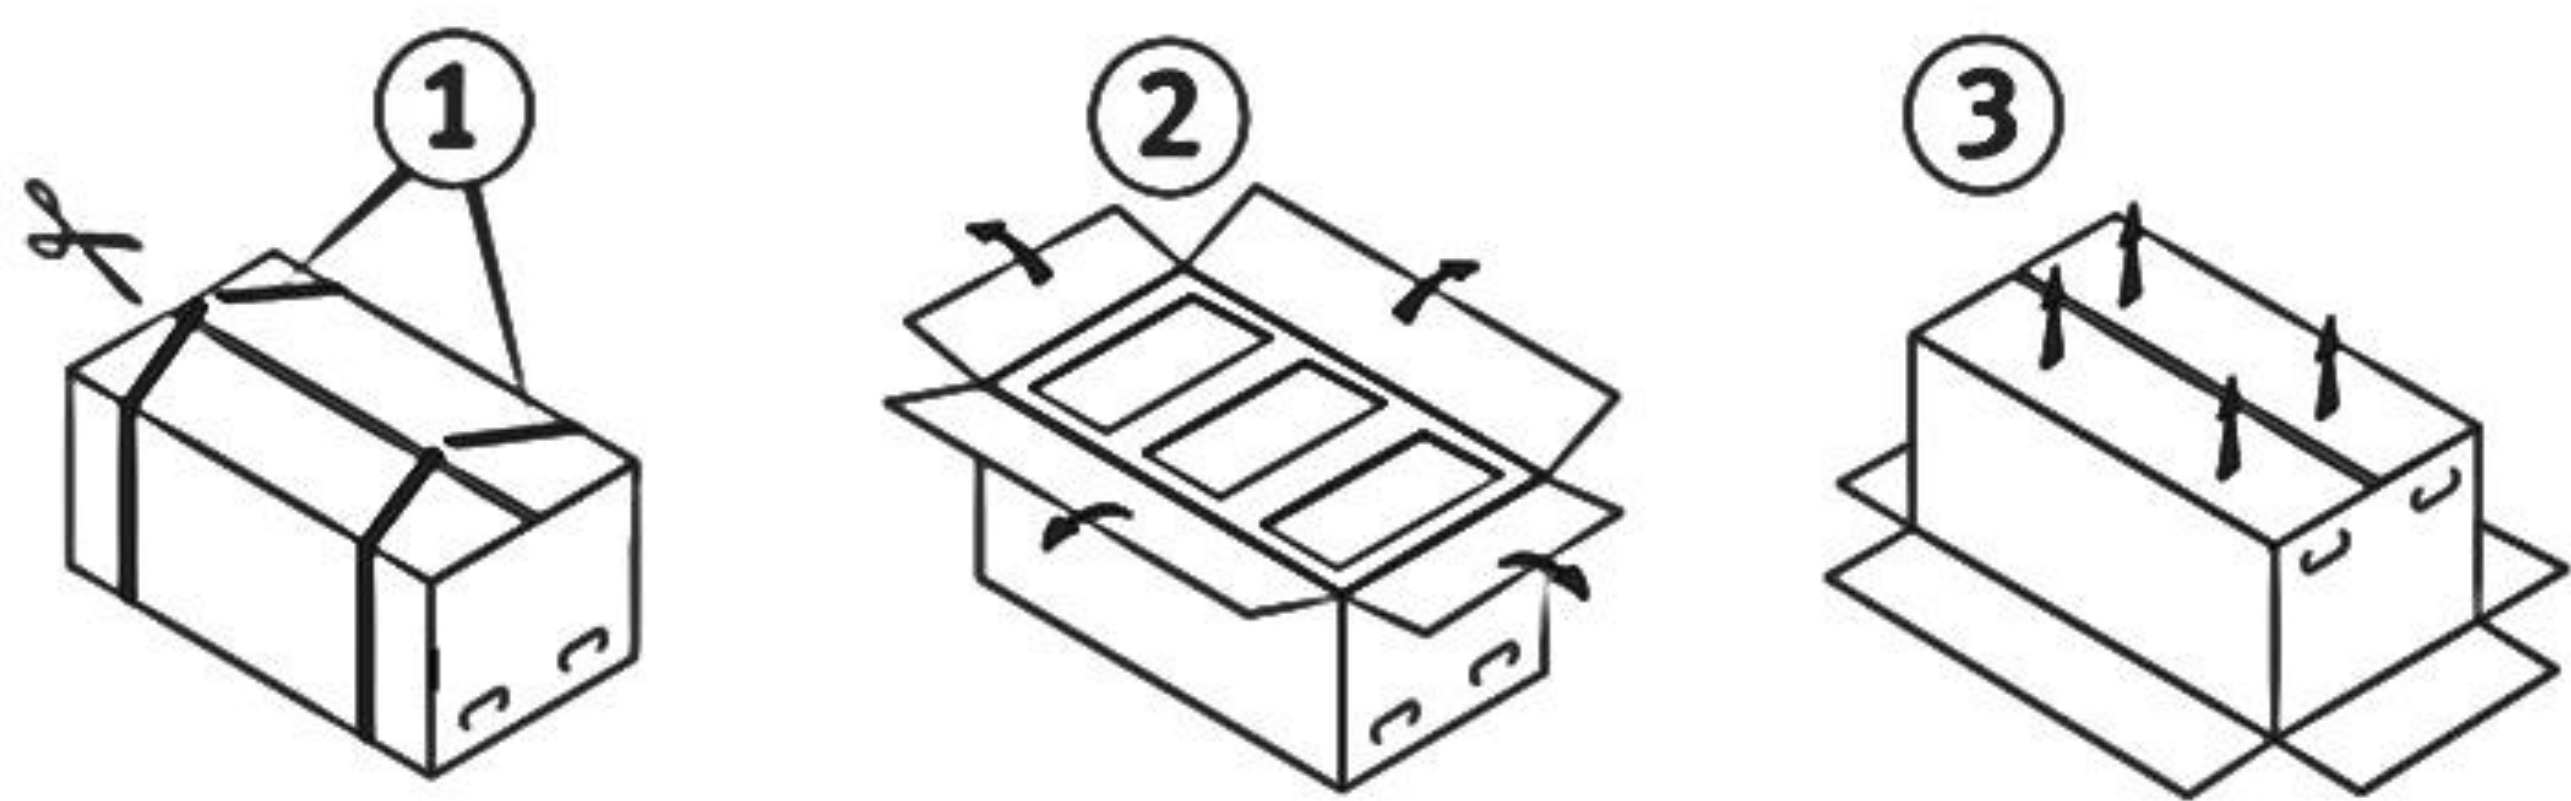

Open the box as seen in the above sketch. Place the box on the ground, arrows on the box pointing to the ground. Cut the cords or remove the staples, fold the lids of the box on each side and turn the box upside down. Pull the box upwards and remove it.

3.1.1 Delivery Content

6-40 kW	
QTY	DESCRIPTION
1	Electric Boiler
1	Wall Mounting Plate
1	Documents Pack
4	10x50 Wall Plug
4	M7x50 Screw

50-100 kW	
QTY	DESCRIPTION
1	Electric Boiler
1	Wall Mounting Plate
1	Documents Pack
4	10x50 Wall Plug
4	M7x50 Screw
1	Electrical terminal Cover

3.2 INSTRUCTIONS FOR MOUNTING

Boiler should not be installed in humid places such as bathrooms and areas that may be affected by rain water.

The boiler should be installed on strong walls that can carry it and perpendicular to the ground.


Sufficient space must be left around the boiler for the authorised engineer to intervene in the event of a technical breakdown or maintenance. You can find the minimum spaces required for installation in the below diagram.

Only use the wall plugs, screws and wall mounting plate supplied with the device during installation. The boiler must be installed vertically (upright position) and checked with a spirit level so that it can work properly after installation. Failure to do so will invalidate the warranty.

3.3 MINIMUM SPACES FOR INSTALLATION

At least the following space must be left in order to reach the internal parts of the device easily when a failure occurs or when maintenance is carried out.


Suggested space is the minimum and it is favorable to leave more space depending on the situation.

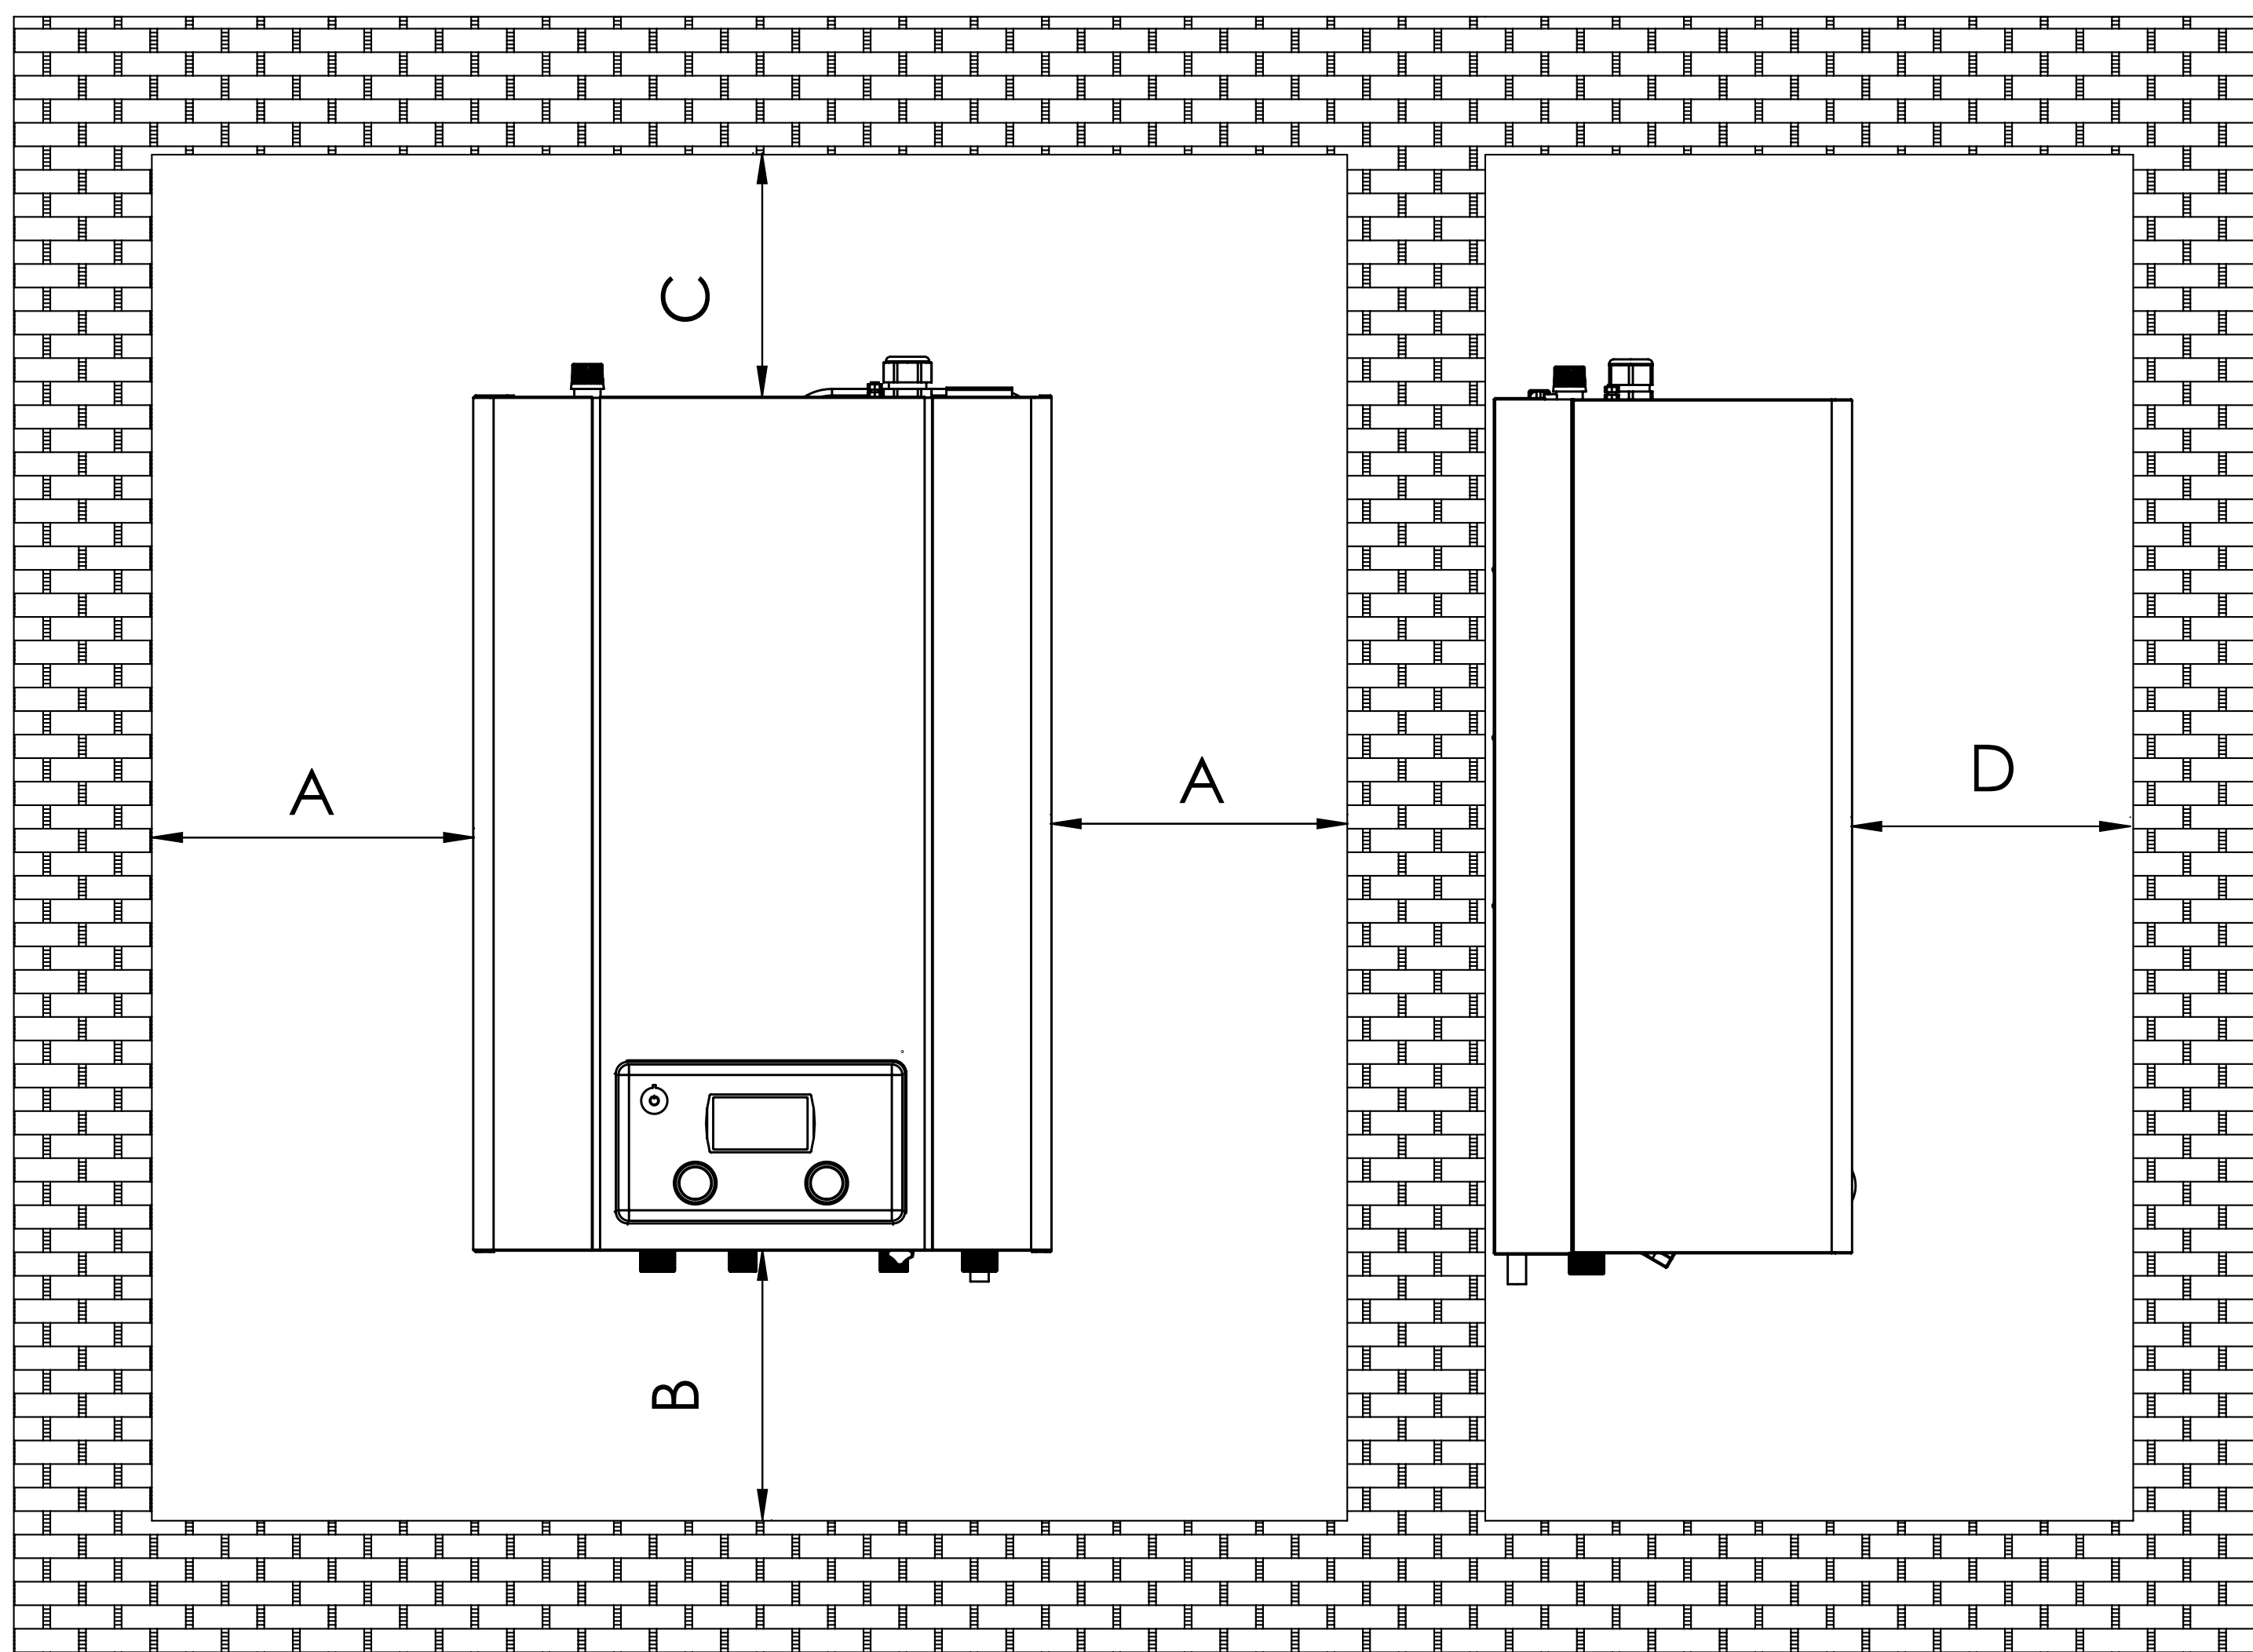

A: 150 mm
B: 300 mm

C: 400 mm
D: 450 mm

3.4 WALL MOUNTING

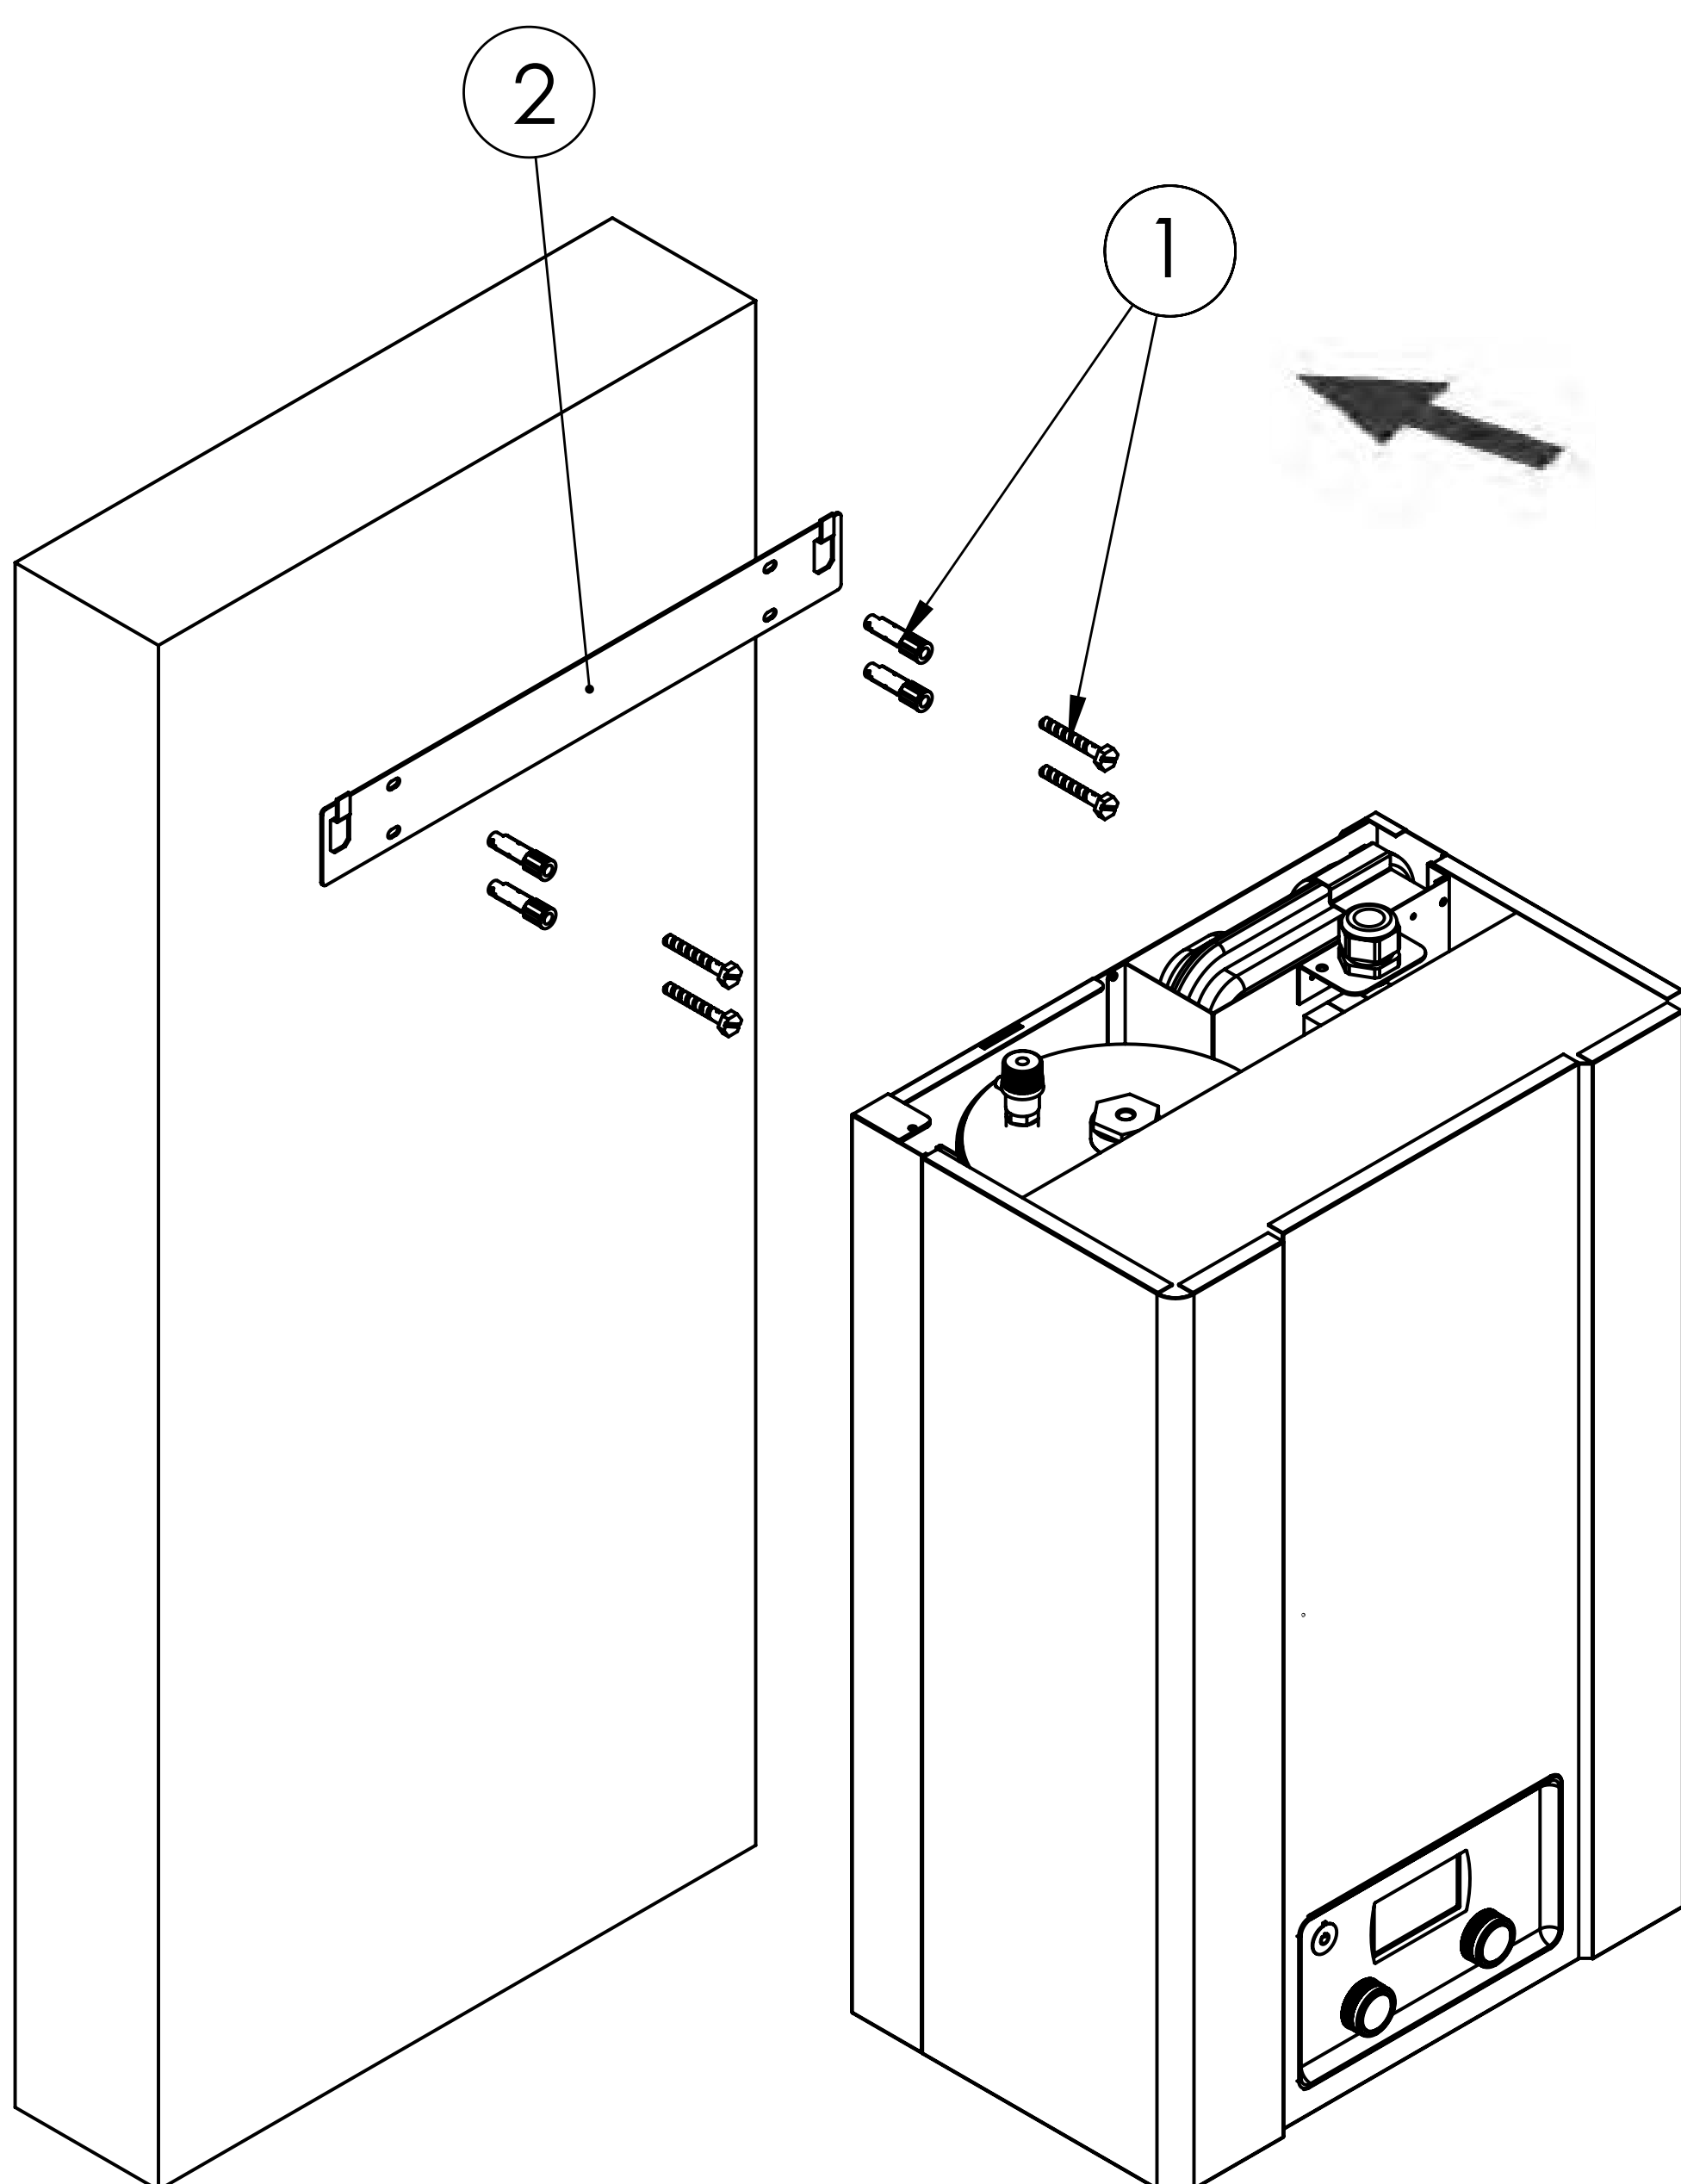

- Place the mounting plate parallel to the floor. (Check with spirit level).
- Mark the holes on the wall.
- Drill on the marked spots and insert the wall plugs.
- Place the wall mounting plate and fix it on the wall using the screws.
- Hang the boiler on the mounting plate.

1. Screws and plugs
2. Mounting plate

 Mind the electric cables and water pipes when drilling holes on the wall.

3.5 HEATING SYSTEM INSTALLATION CONNECTIONS

- The System fill connection on the bottom the boiler is intended for domestic systems and may only be connected to by means of a removable flexible braided hose connected to an isolation valve with integral double check valve.

For non-domestic sealed systems the filling connection on the bottom of the boiler should be capped and the filling arrangement connection to the system should be made by means of an approved filling device which meets fluid category 4 or fluid category 5 criteria inline with the UK Water Regulations.

- In order to provide a good circulation throughout the heating system, installation pipe diameters must be selected properly based on boiler output capacity and pipework resistance to prevent flow restrictions. When selecting the pipe diameter, pipe resistance above the capacity of the pump must be avoided. You can see the pump capacities from the pump pressure curve.
- With a conventional radiator system at least one bypass radiator should be installed, this would normally be the radiator installed within the same room as the room thermostat. Where all radiators are fitted with thermostatic valves an automatic bypass should be installed between the flow and return on the heating circuit.
- An Automatic Bypass Valve is required to be installed between the flow and return on boiler <40kW which are not using hydraulic separation.
- Insulation : We recommend that all pipework is insulated where practical. Especially the primary pipework within a boiler cupboard. This will reduce heat loss and protect the cupboard from high temperatures.
- Full bore isolation valves **MUST** be installed in order to isolate the boiler for future maintenance and repairs. EHC offer a valve kit which is sold separately.

Pressure Relief Valve

The Voltius Range of boilers have an internal 3 bar pressure relief valve with an inlet and outlet connection of 15mm. The purpose of this device is to safe guard against over pressurisation of the of the system. The pressure relief valve should be piped to allow for the safe and unrestricted means of dischard of the system water.

With regards to the 100kW Voltius boiler an additional 3 bar pressure relief valve with inlet and outlet connection size of 3/4" requires to be installed on the flow pipework within a maximum distance of 300mm from the base of the boiler.


When installing the Voltius boiler as part of a cascade to achieve a higher overall output for larger installations consideration should also be given for the addition of a pressure relief valve located on the primary pipework configuration. This pressure relief valve should be selected to achieve a satisfactory rate of discharge based on the total output capacity of all boilers present.

3.5 HEATING SYSTEM INSTALLATION CONNECTIONS (Cont)

CAUTION ! : During installation ; A magnetic filter **MUST** be installed on the return pipework below the boiler. Failure to install and maintain a suitable filter will invalidate the boiler warranty.

CAUTION ! : The system must be flushed to ensure that no debris is trapped in the system. Failure to do so may lead to boiler failure which will not be covered by manufacturer's warranty. Where existing radiators and pipework is used, a power flush must be carried out to remove debris. After flushing inhibitor **MUST** be added to the system as per the manufacturers instructions. For underfloor heating systems or systems operating below 55 Degrees biocide should also be added to the system.

- Central heating pipe connections must be made according to the boiler installation diagrams in this manual. Make sure to remove the plastic caps before making the pipe connections. Inlets and outlets are clearly marked with blue and red caps on the bottom of the boiler.
- The water hardness in the central heating installation should be no more than 200ppm. Where the water hardness is greater than 200ppm a suitable scale reducer should be installed. Failures caused by improper water in the system are not covered by warranty.

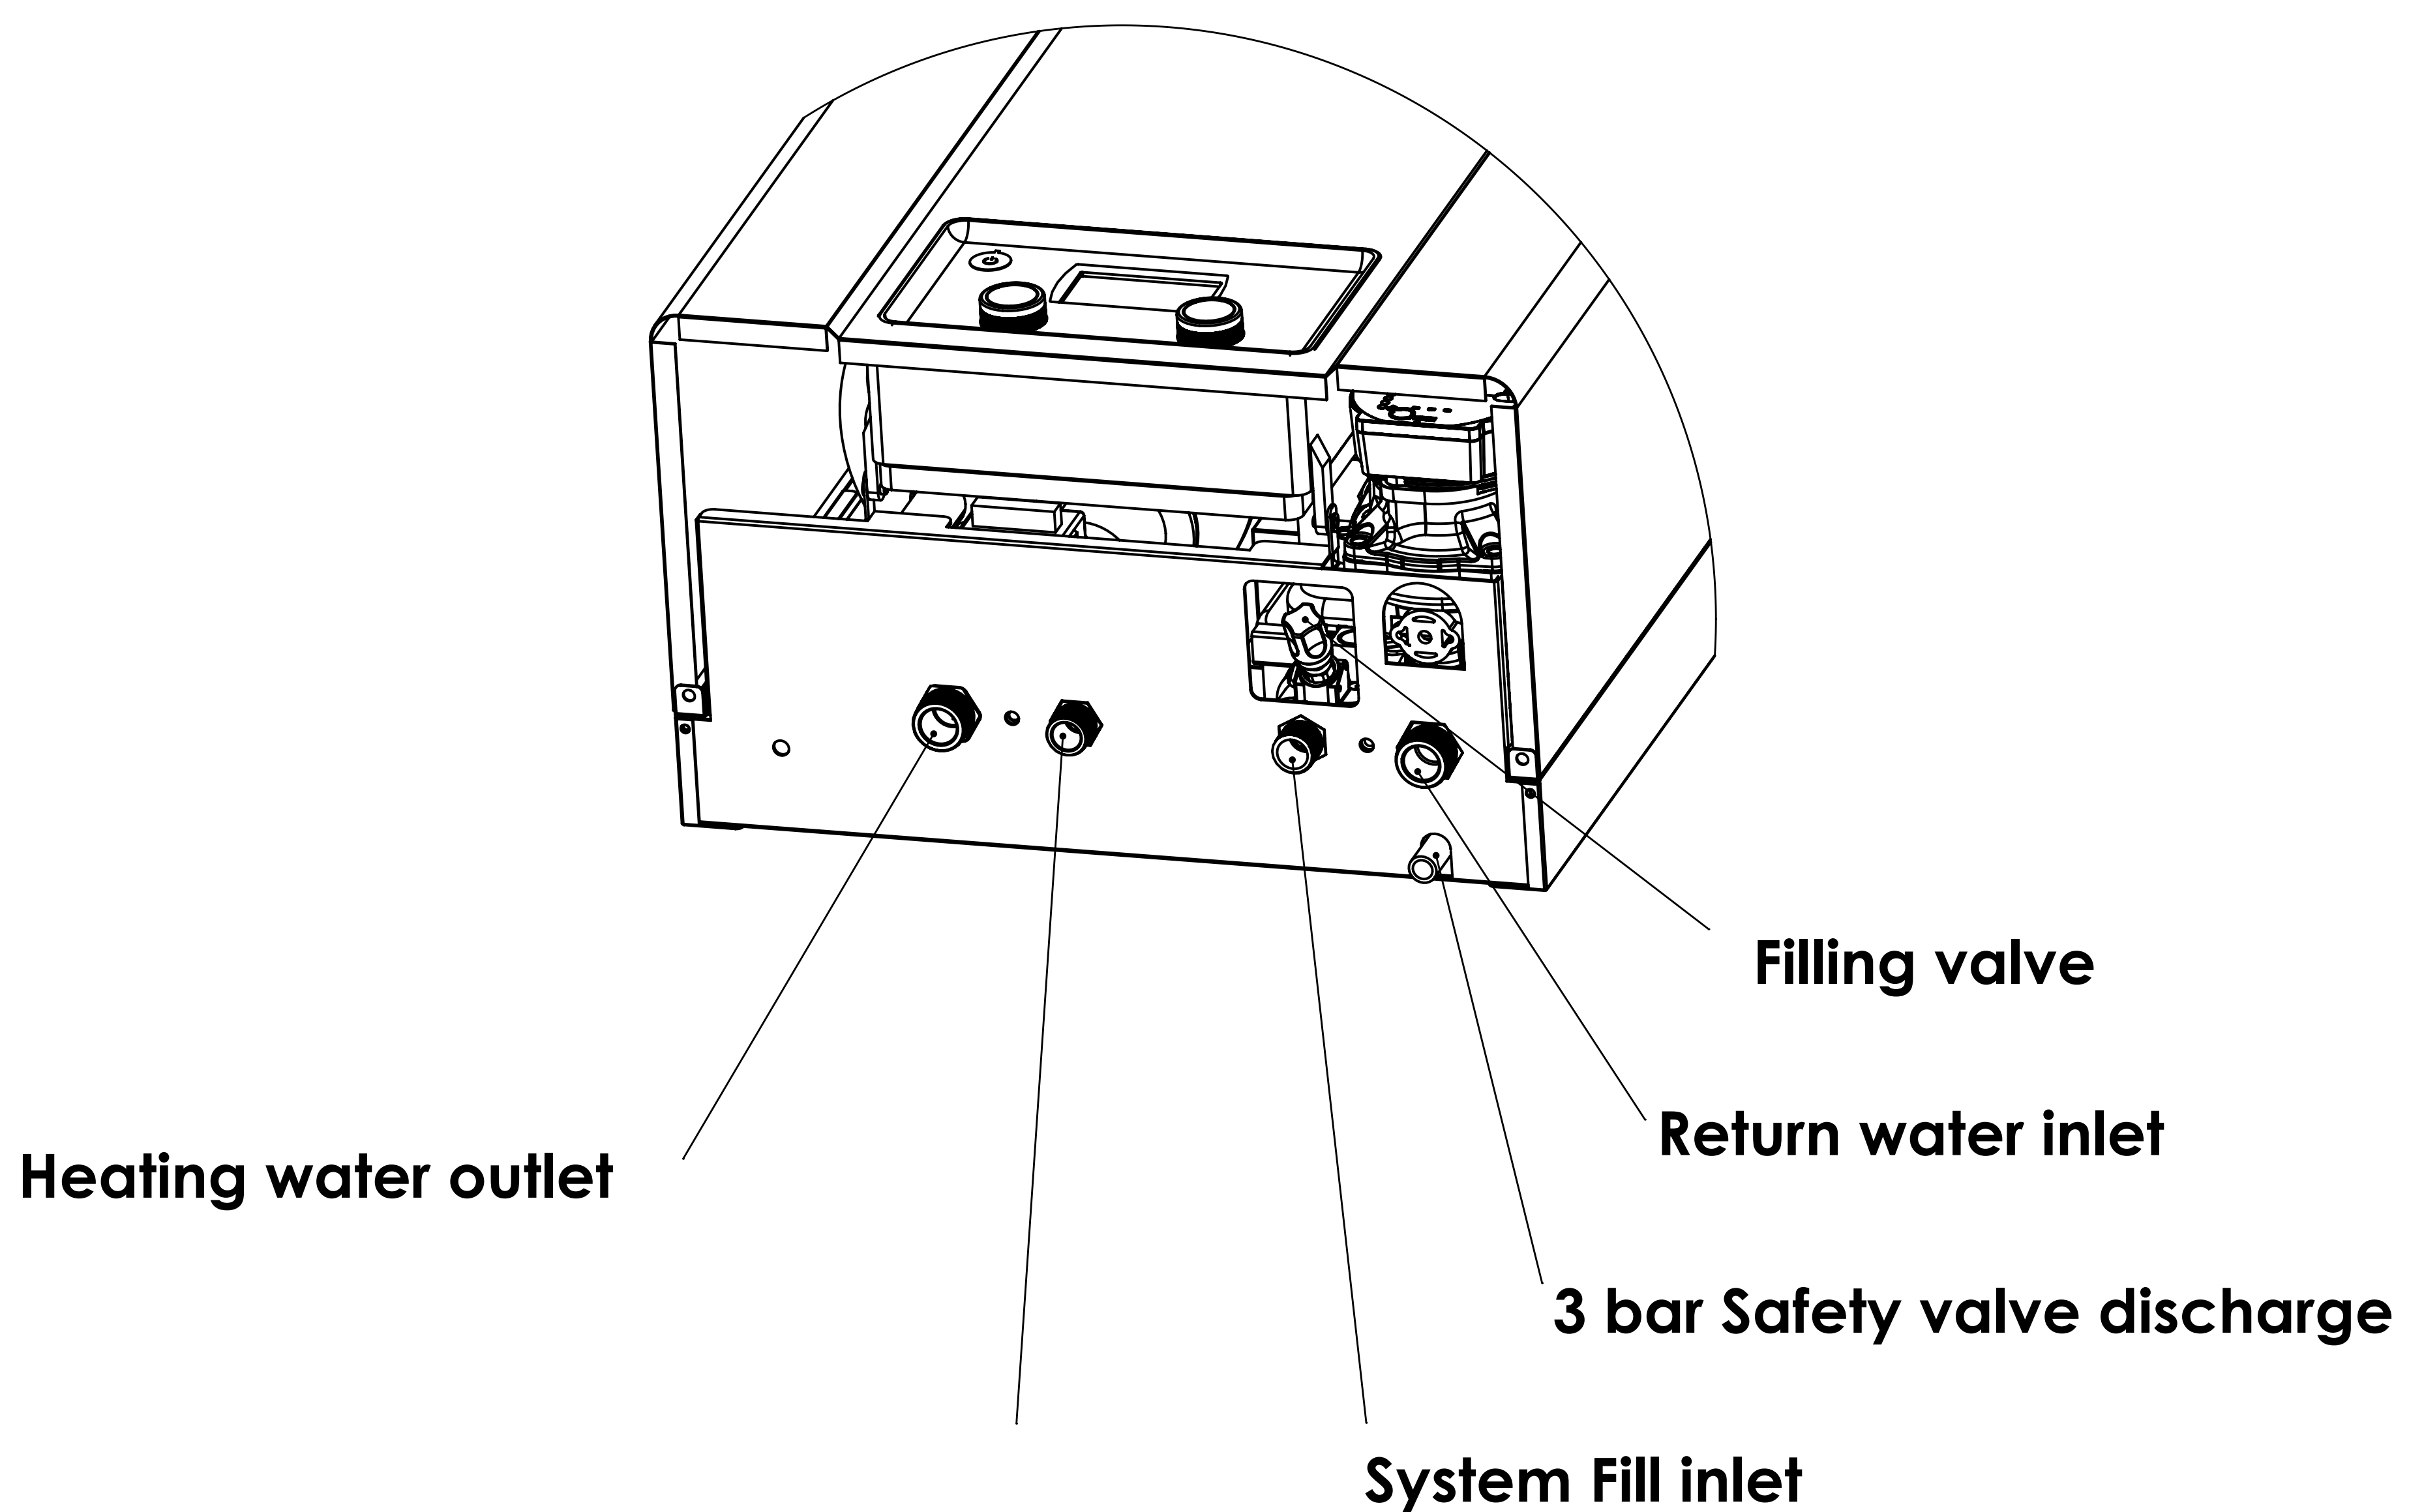

3.6 CIRCULATION PUMP INFORMATION

3.6.1 Energy Efficient Pump


Indicator Lights (Leds)



- Signal display
- LED is lit up in green in normal operation
- LED lights up/flashes in case of fault



- Display of selected control mode $\Delta p-v$, $\Delta p-c$ and constant speed

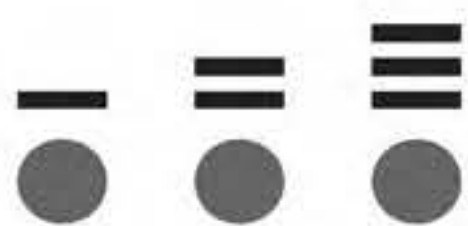


- Display of selected pump curve (I, II, III) within the control mode



- LED indicator combinations during pump venting function, manual restart and key lock



Operating button

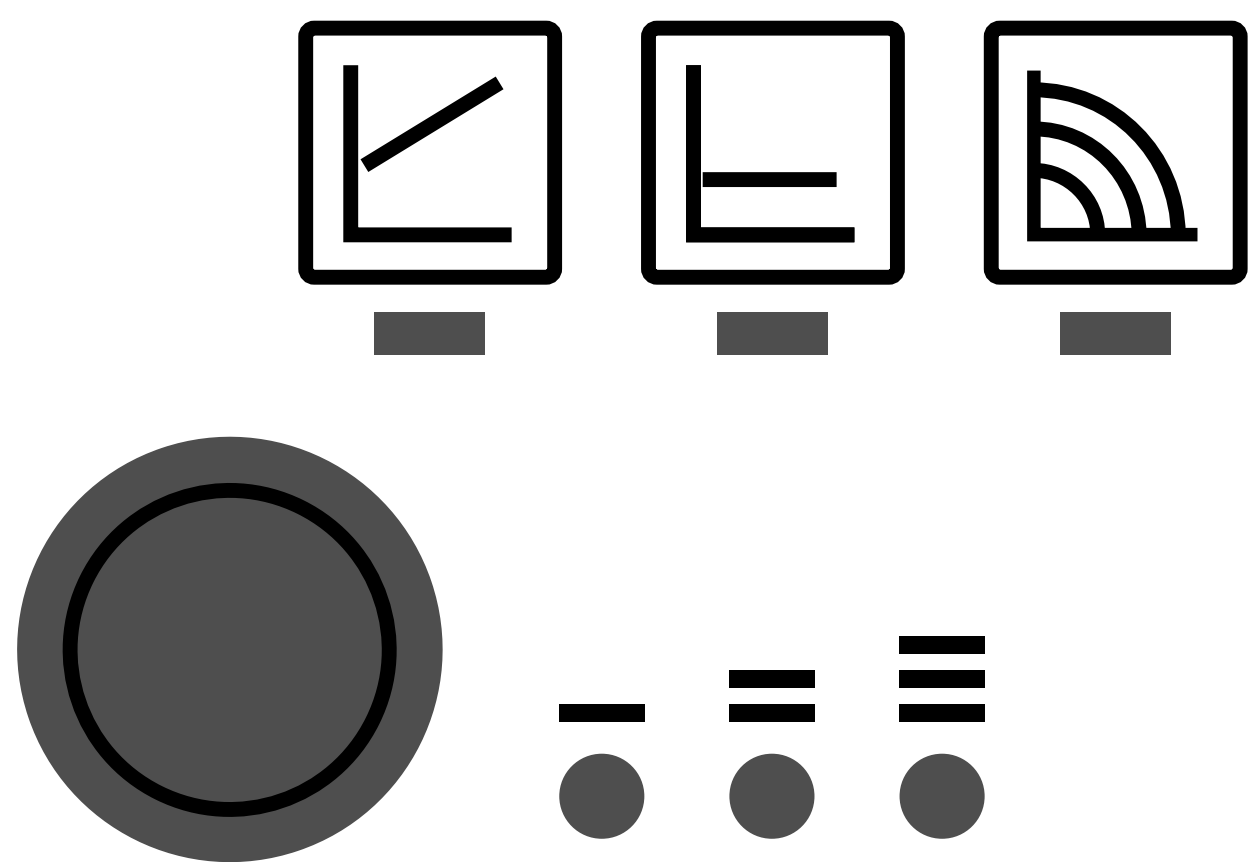

Press

Select control mode

- Select pump curve (I, II, III) within the control mode


Press and hold

- Activate the pump venting function (press for 3 seconds)
- Activate manual restart (press for 5 seconds)
- Lock/unlock button (press for 8 seconds)

Control modes and functions

Variable differential pressure $\Delta p-v$ (I, II, III)

H/m

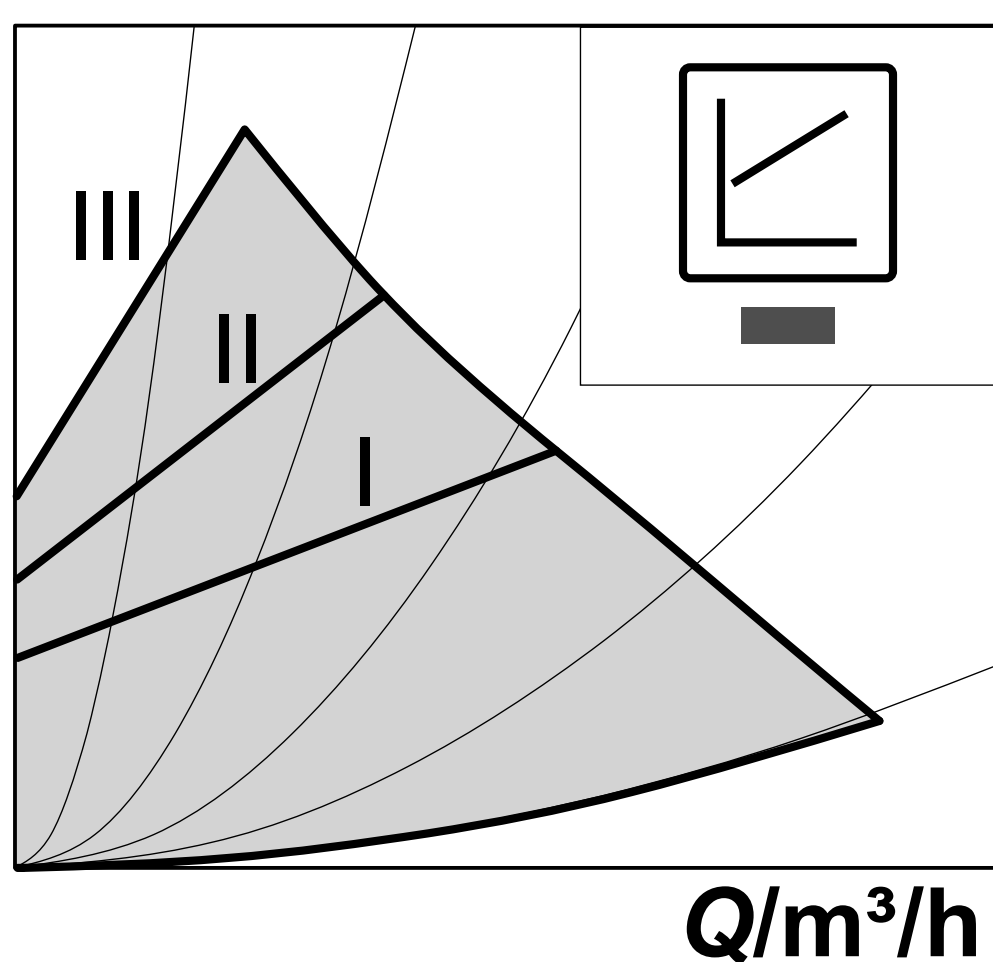

Recommended for two-pipe heating systems with radiators to reduce the flow noise at thermostatic valves.


The pump reduces the delivery head to half in the case of decreasing volume flow in the pipe network.

Electrical energy saving by adjusting the delivery head to the volume flow requirement and lower flow rates.

There are three pre-defined pump curves (I, II, III) to choose from.

Constant differential pressure $\Delta p-c$ (I, II, III)

H/m

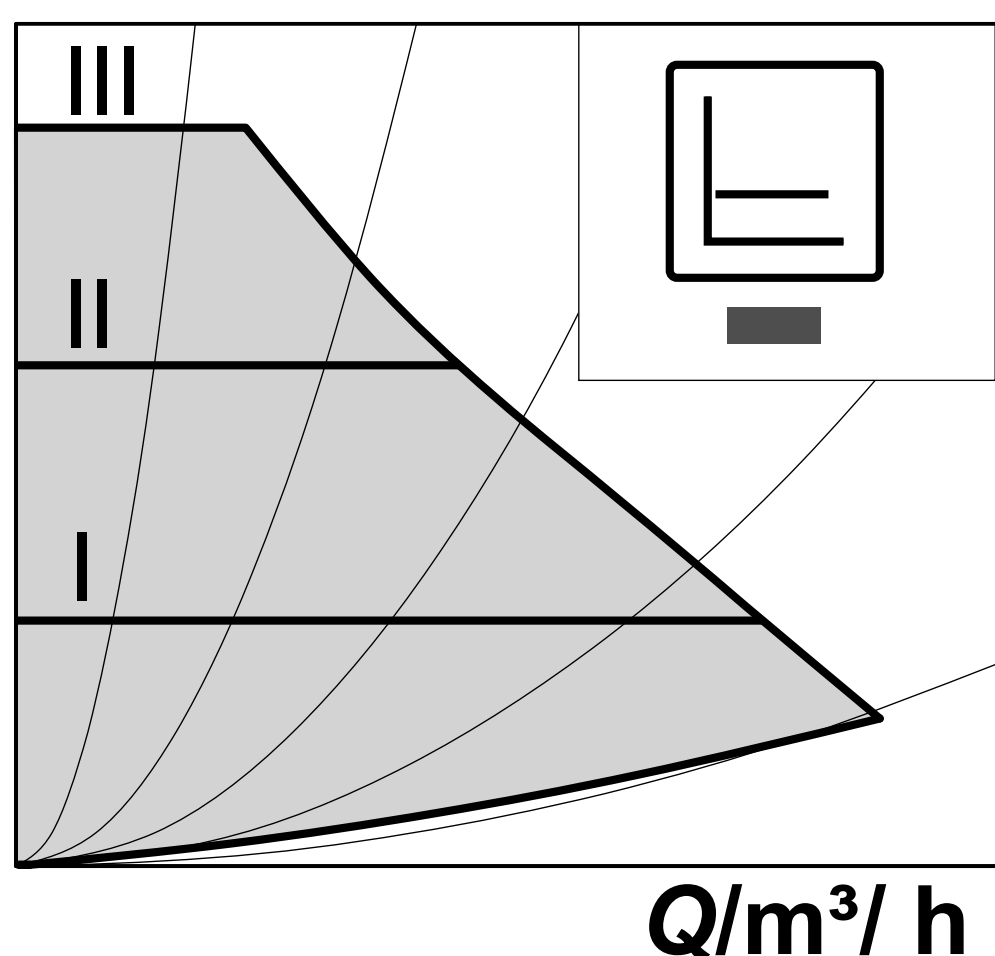


Recommended for underfloor heating or for large-sized pipes, applications without a variable pipe network curve (e.g. storage charge pumps) or single-pipe heating systems with radiators.

The control keeps the set delivery head constant irrespective of the pumped volume flow.


There are three pre-defined pump curves (I, II, III) to choose from.



**Constant speed
(I, II, III)**

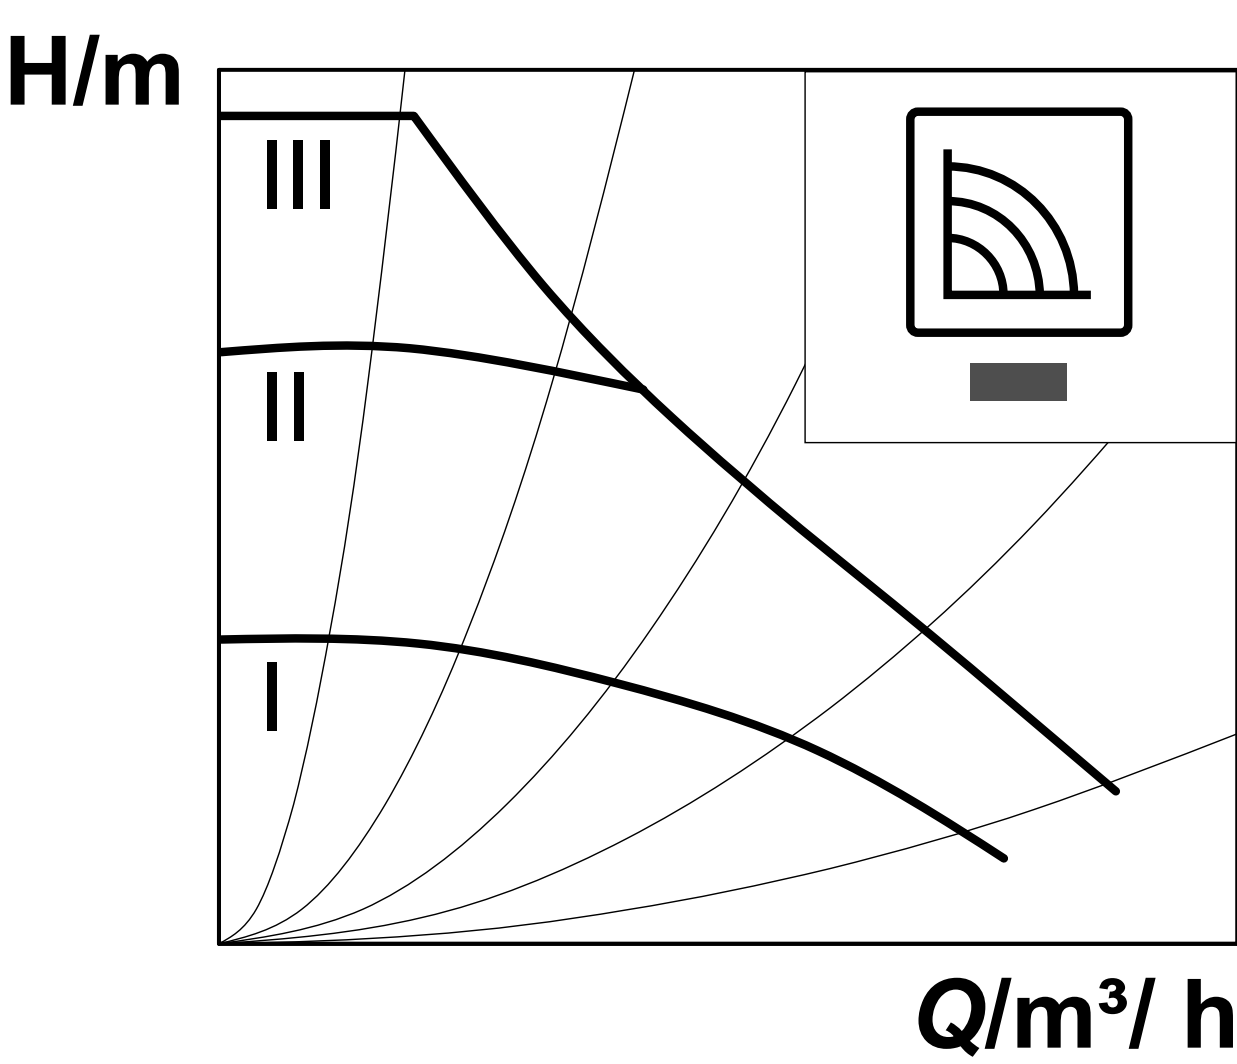

Recommended for systems with fixed system resistance requiring a constant volume flow.
The pump runs in three prescribed fixed speed stages (I, II, III).

Wilo-Para 15/6 Pump Characteristics (Votius 6kW - 50kW)

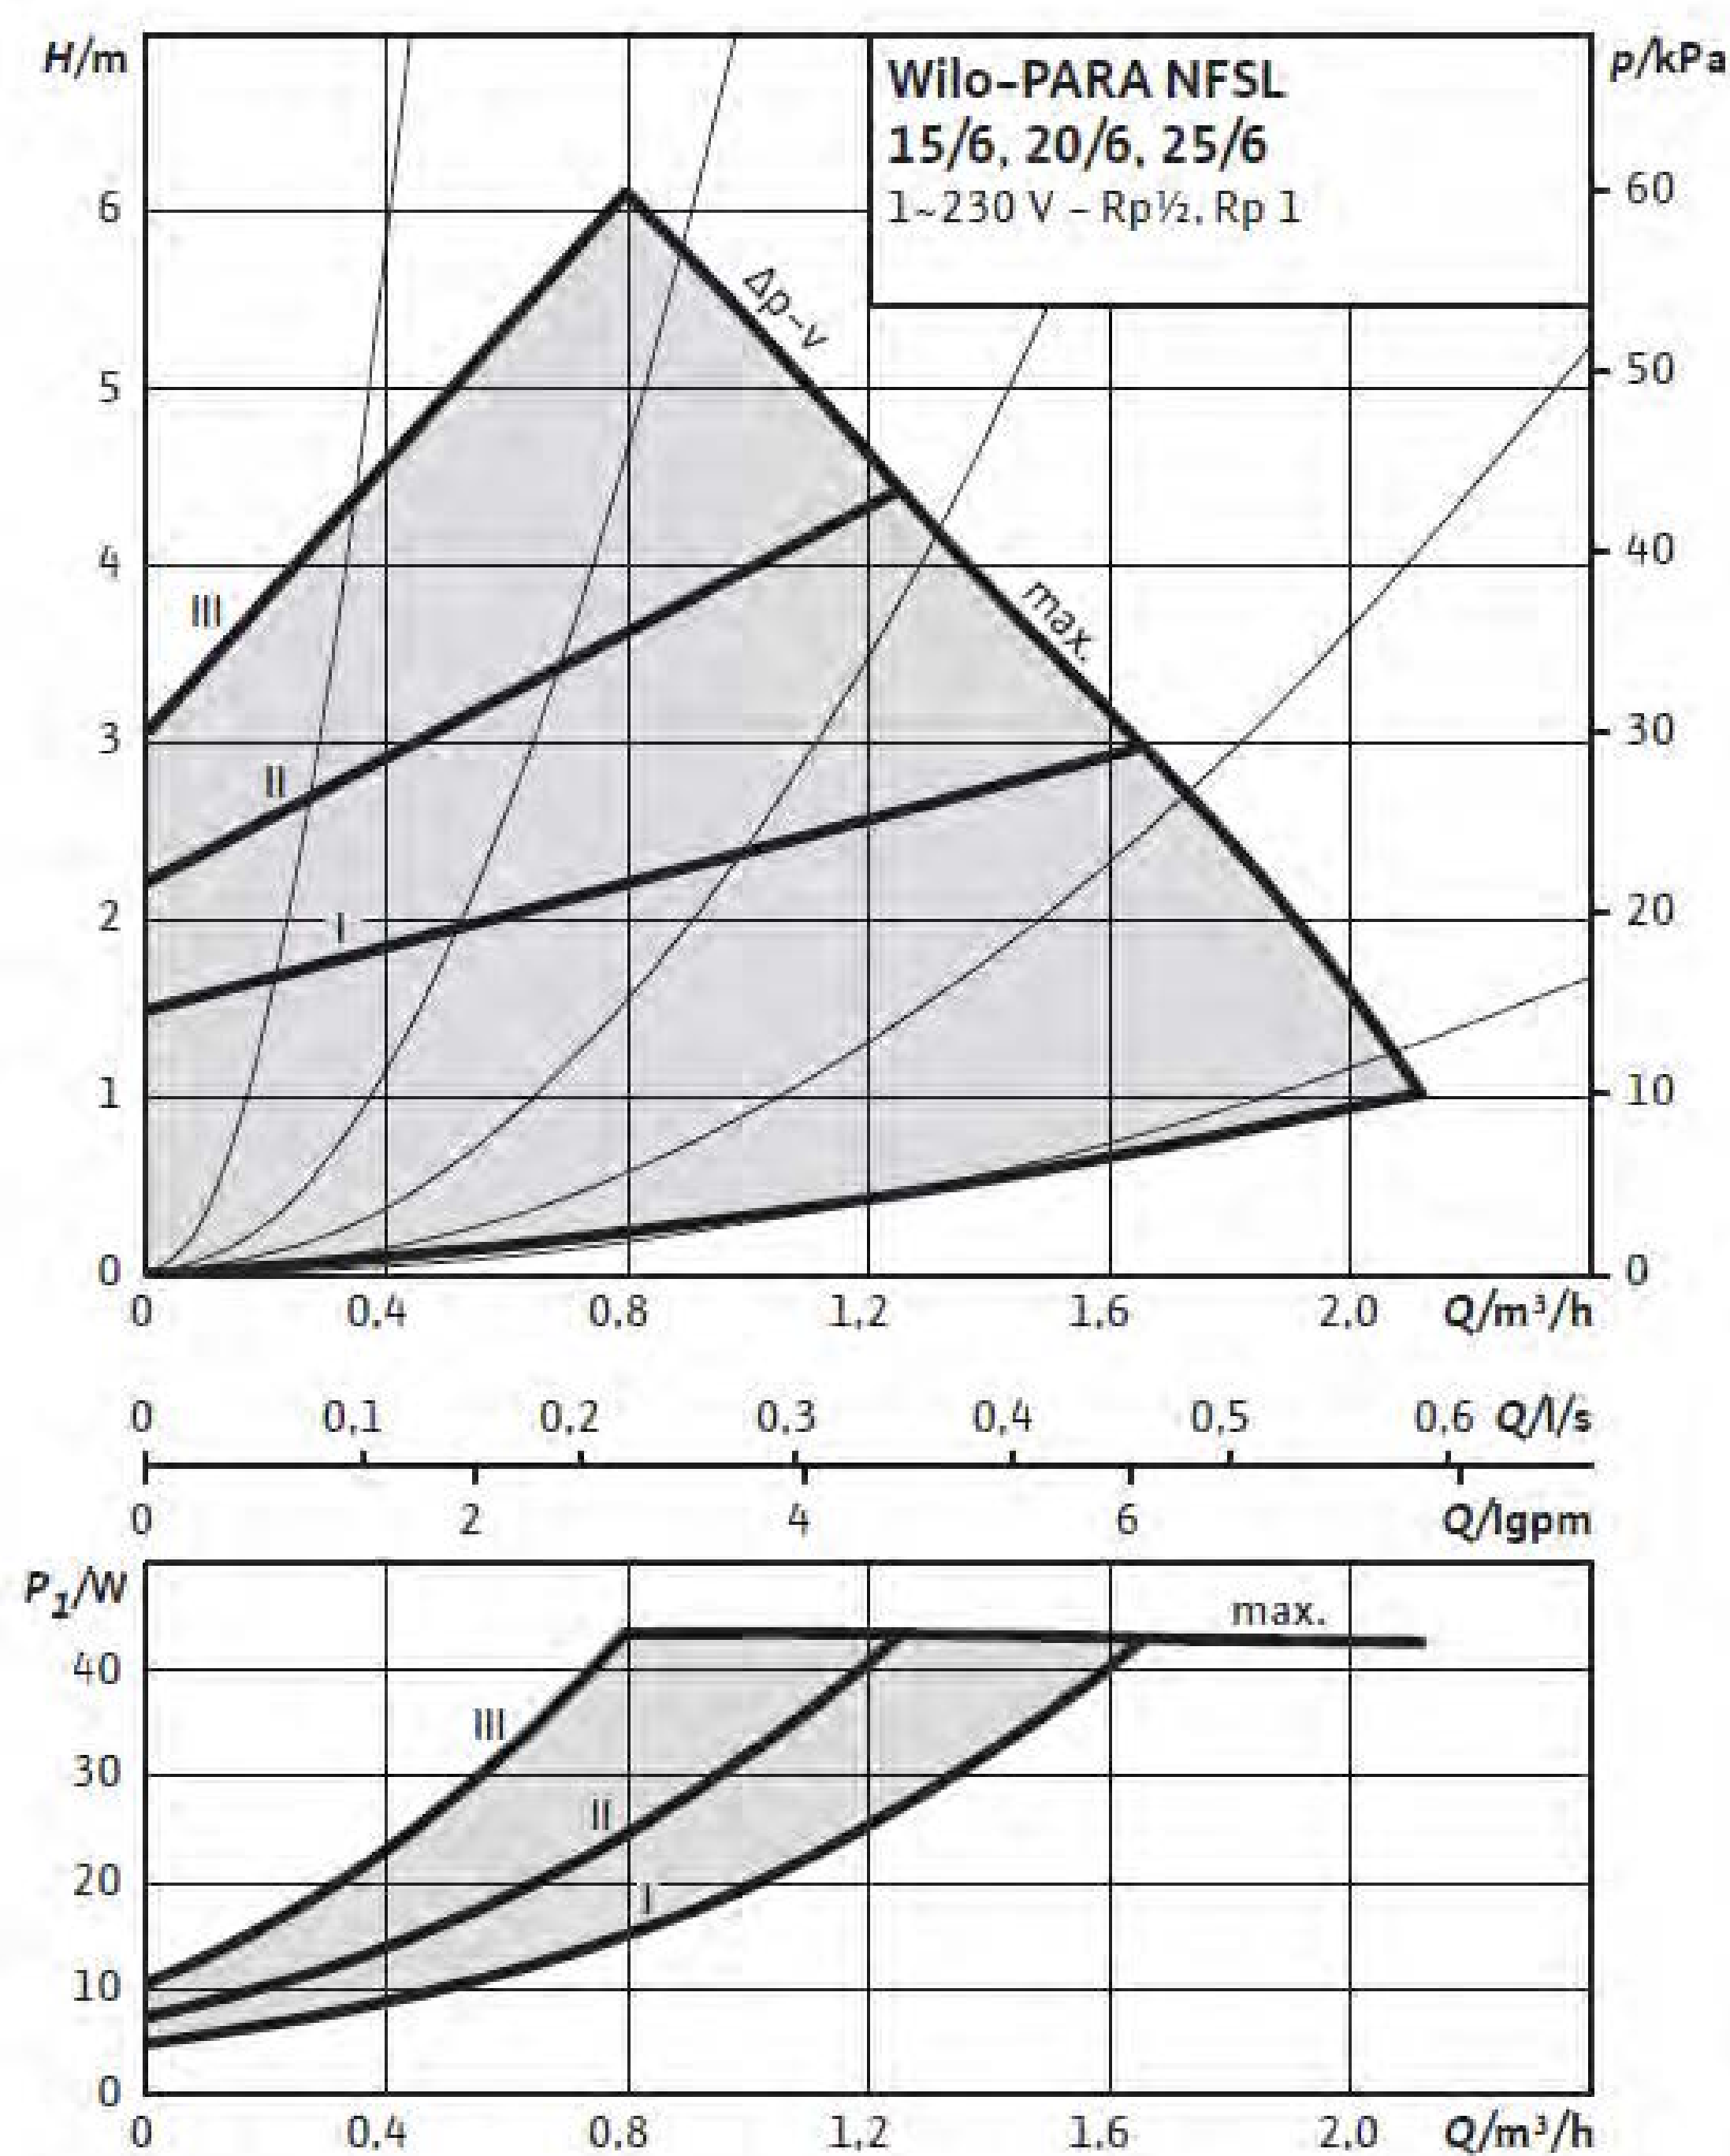


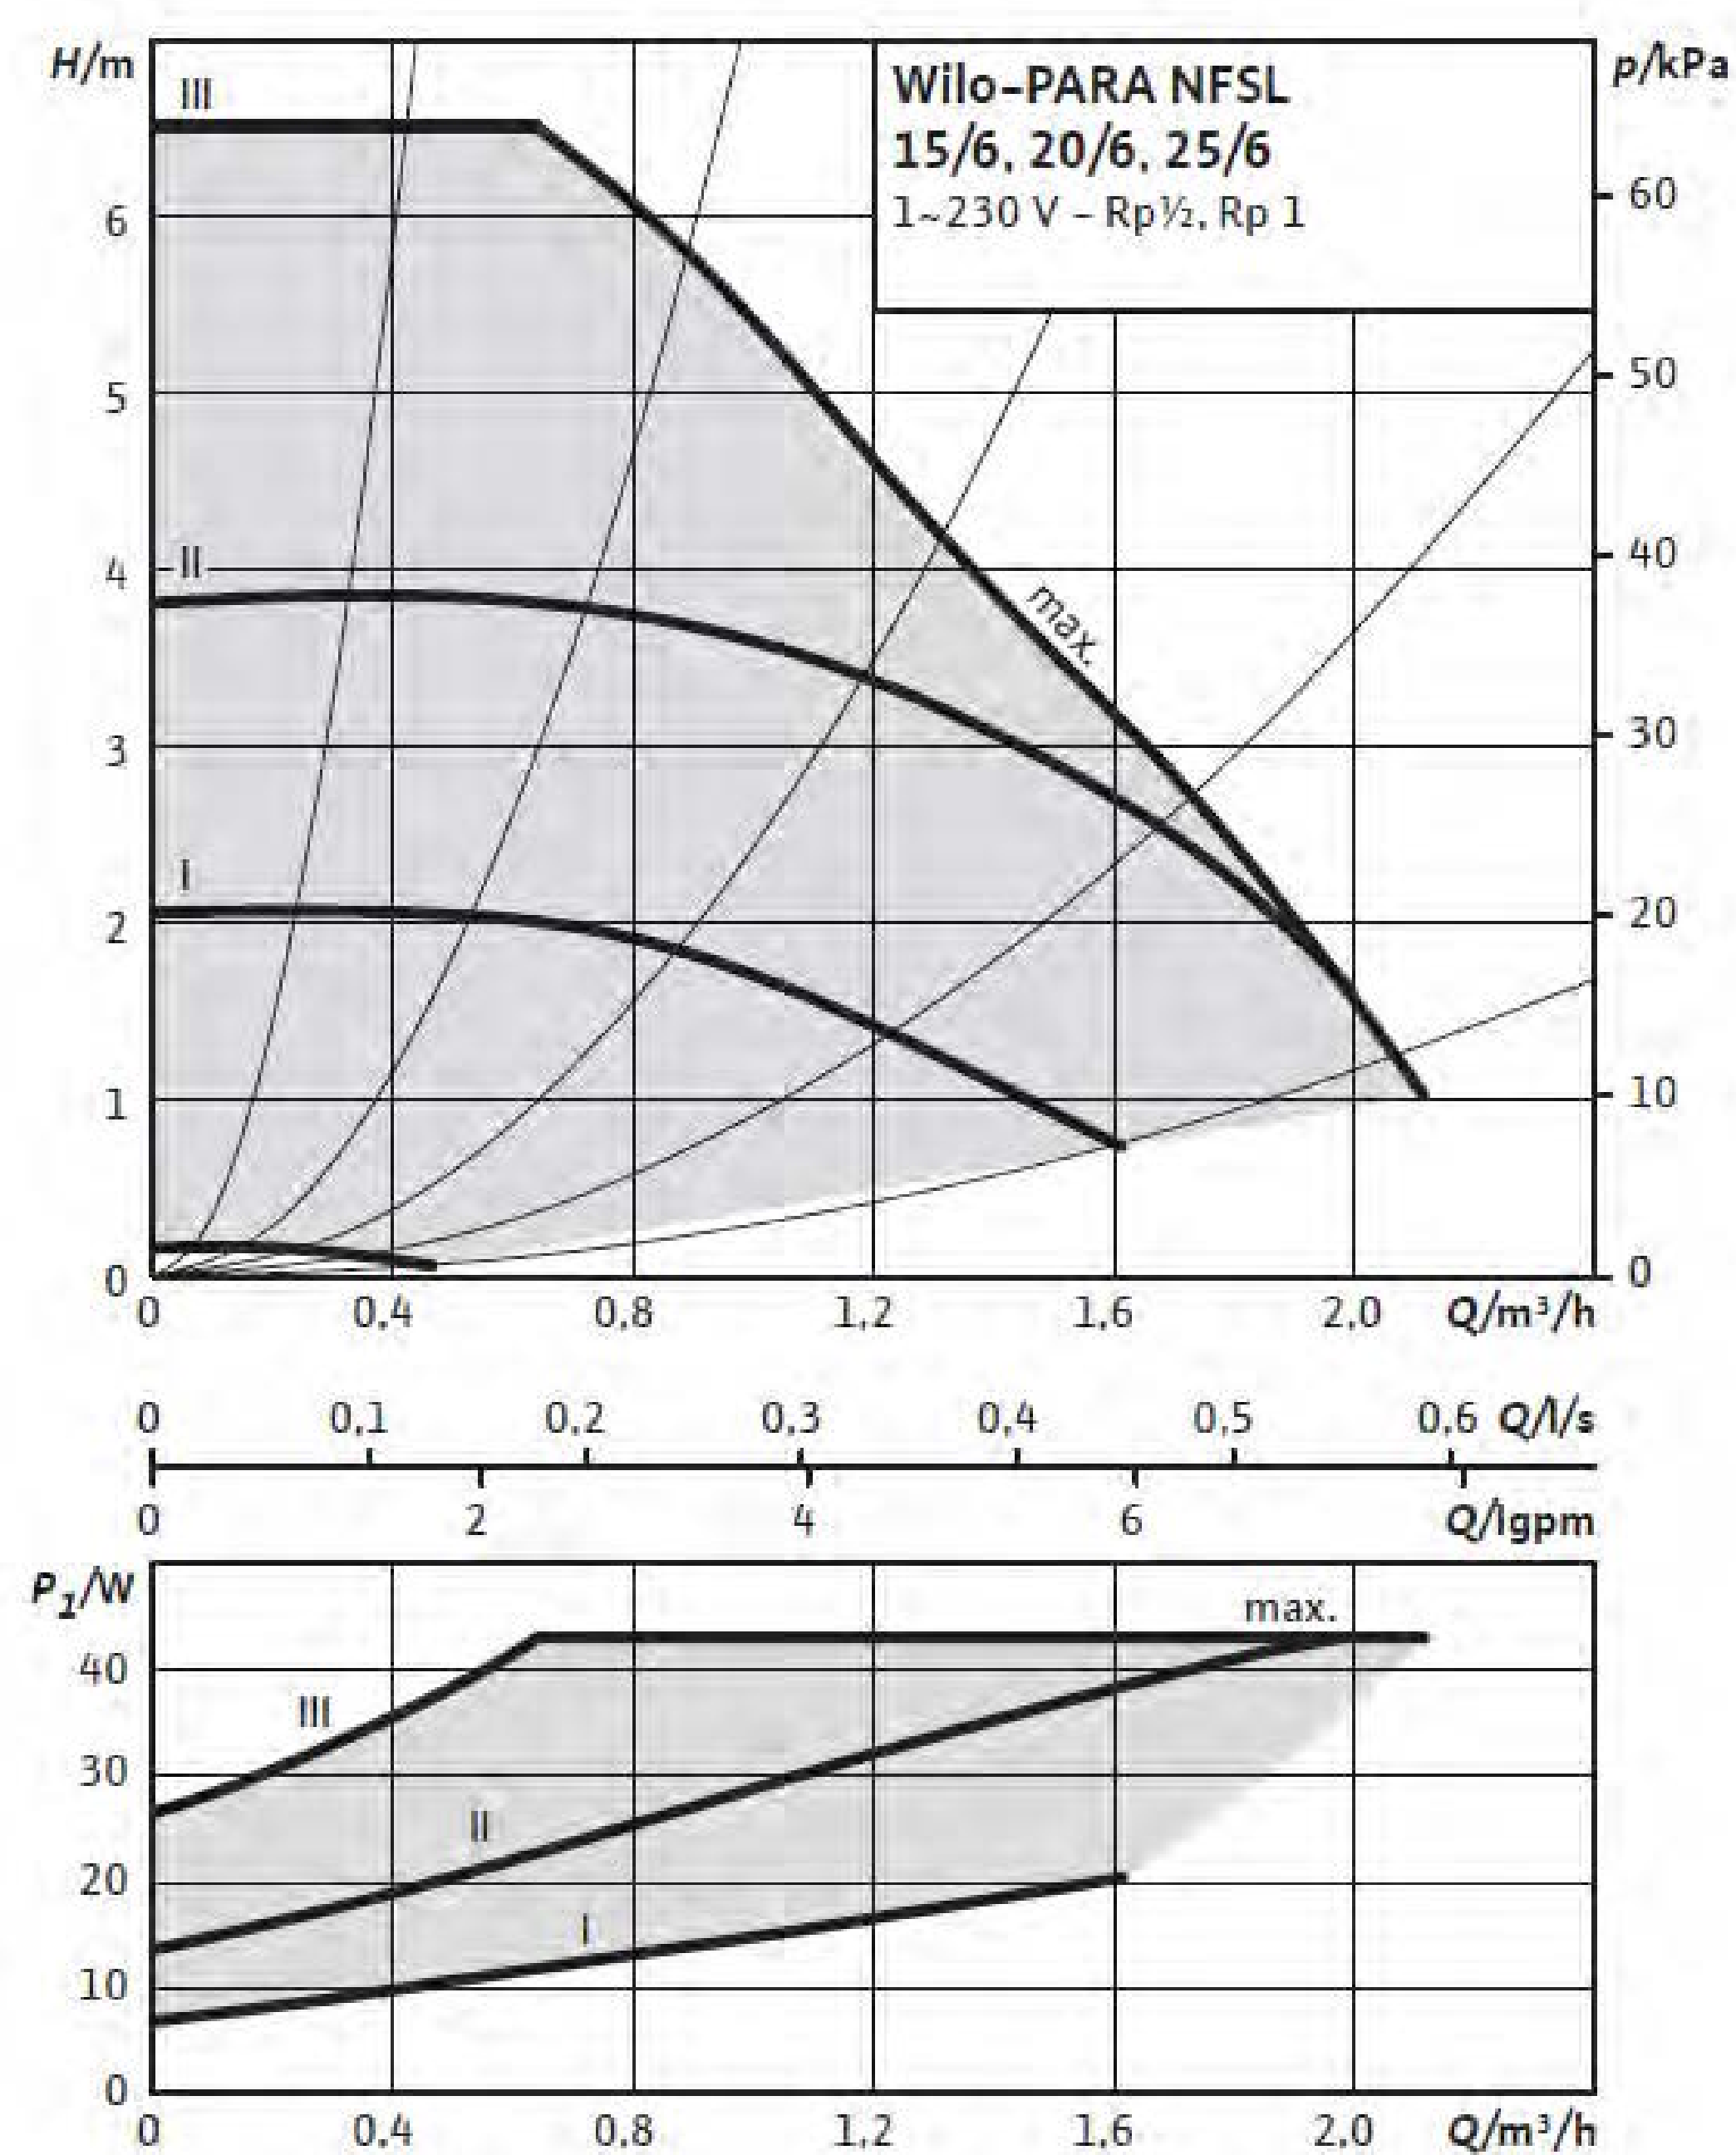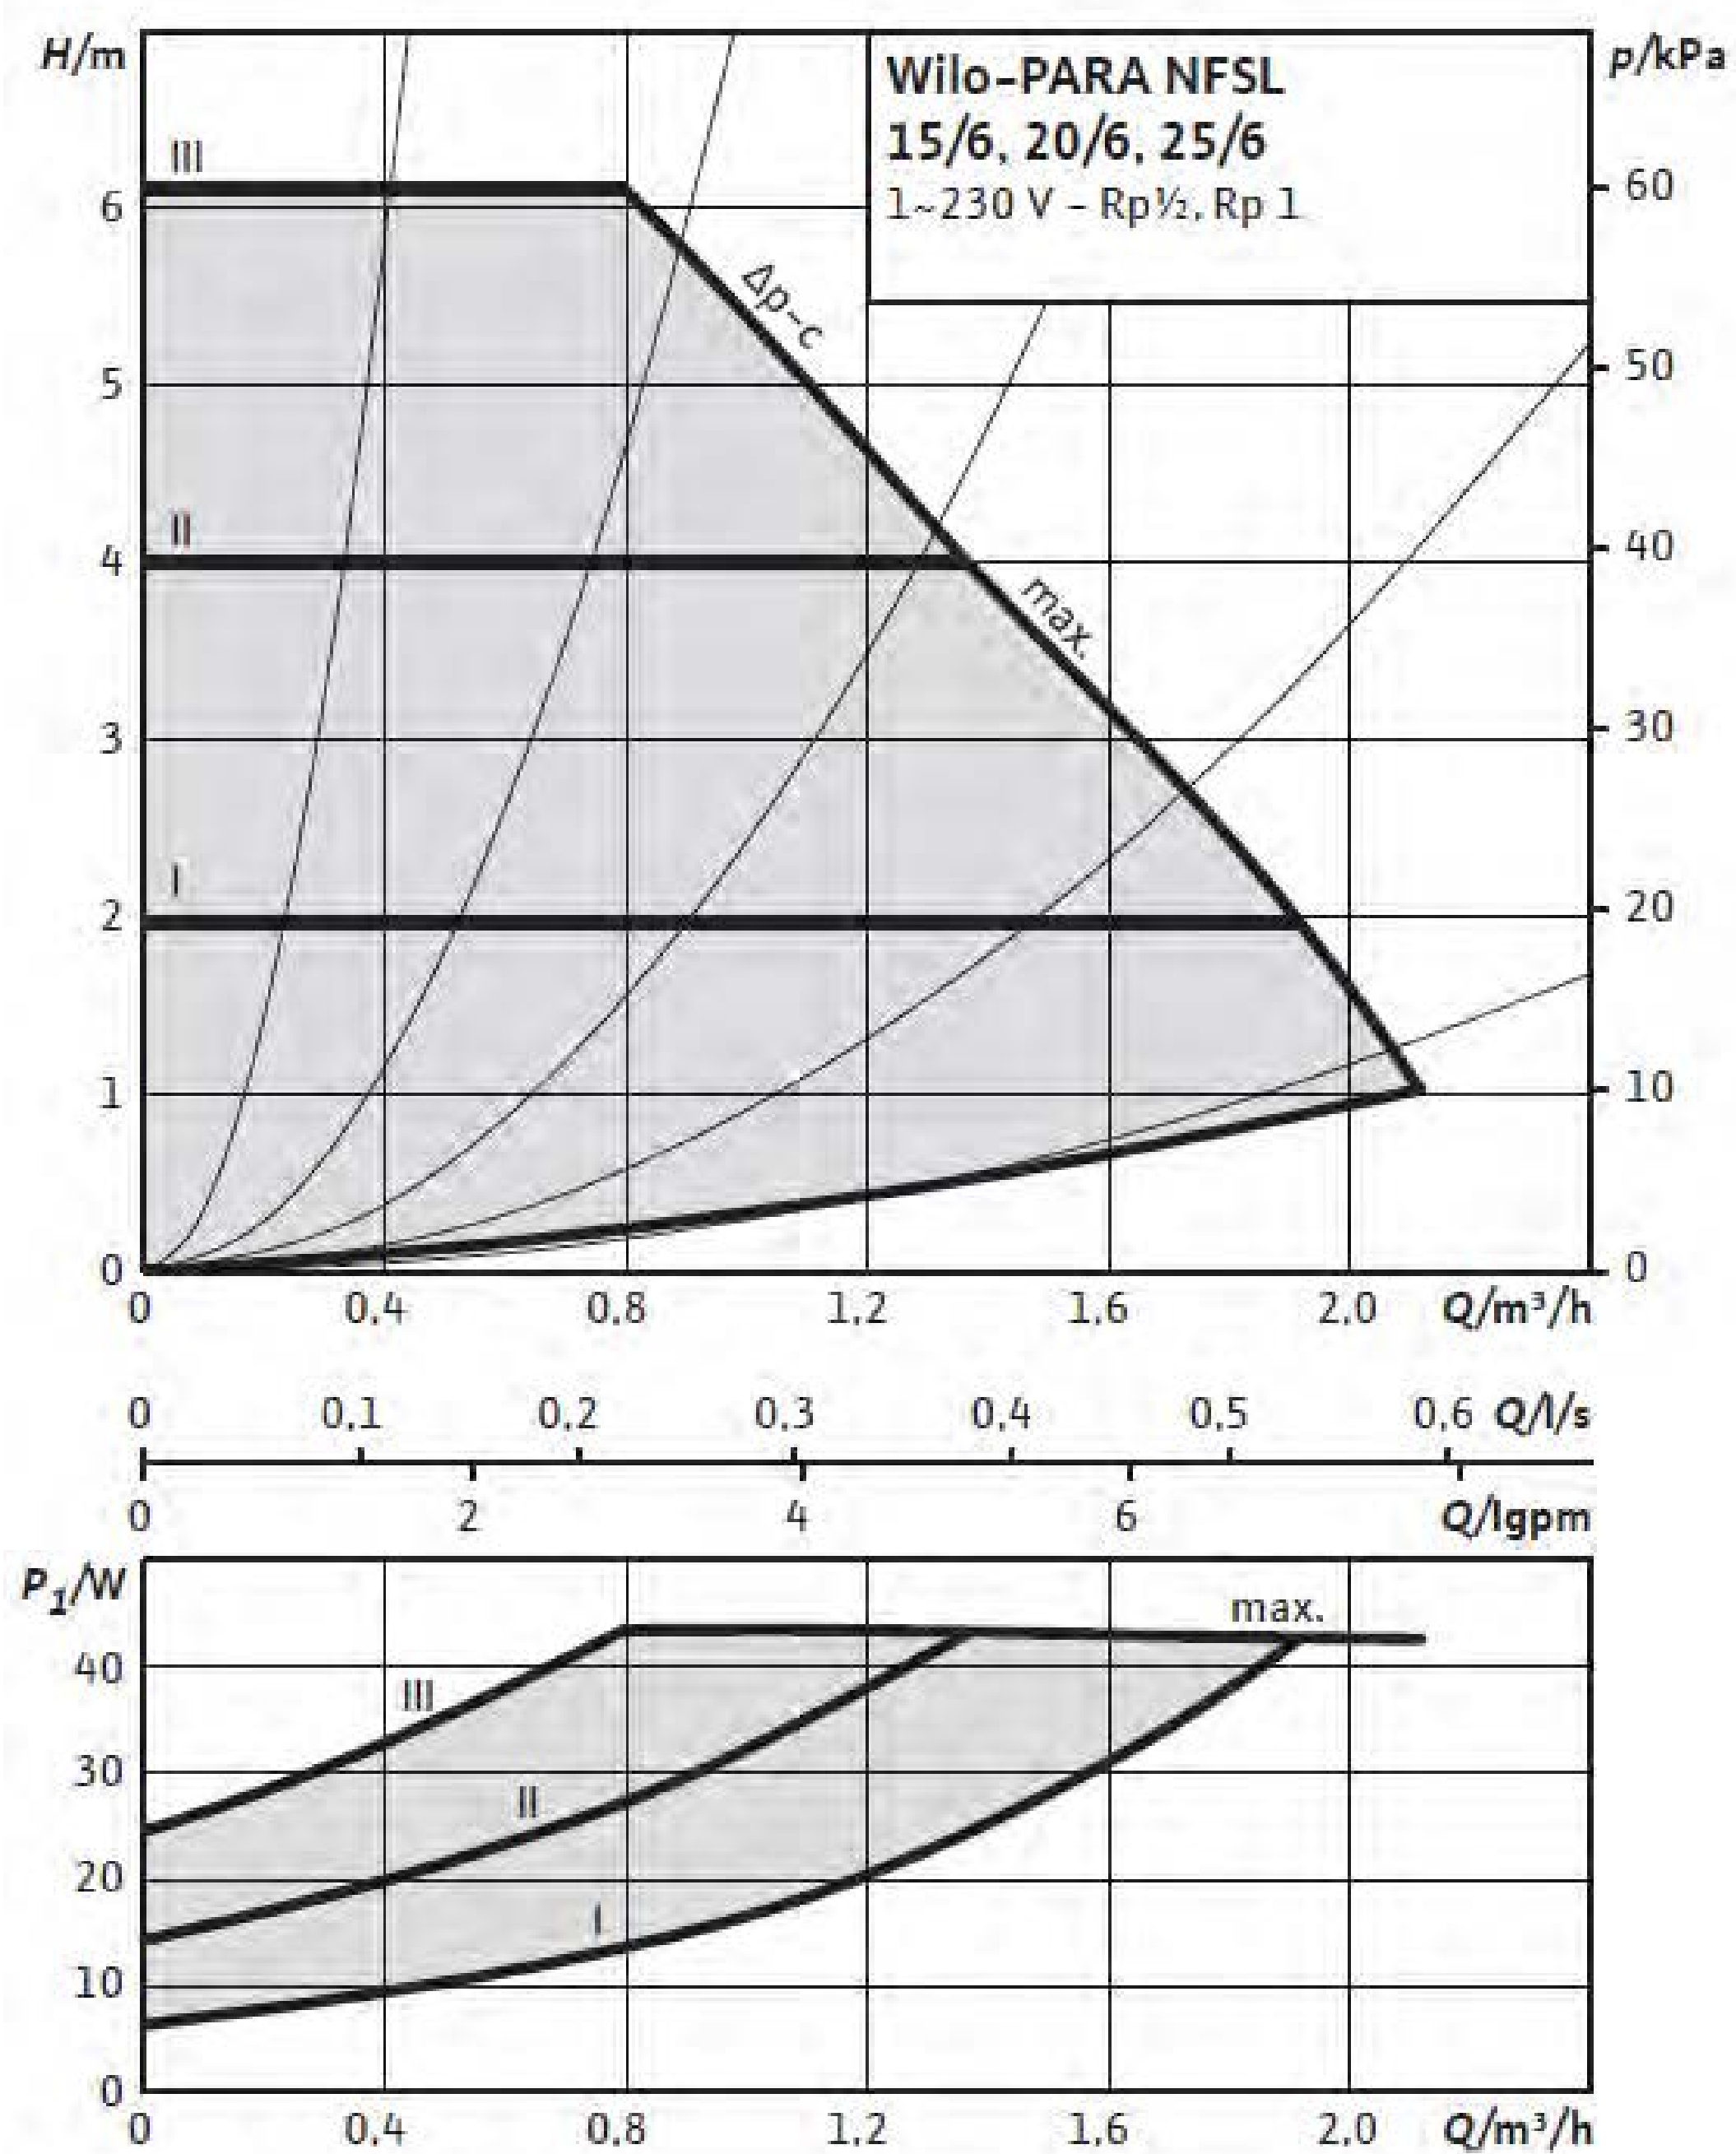

Wilo-Para 15/9 Pump Characteristics (Voltius 60kW - 100kW)


Pump curve

Wilo-Para RS SCU 15/9, 25/9, 30/9

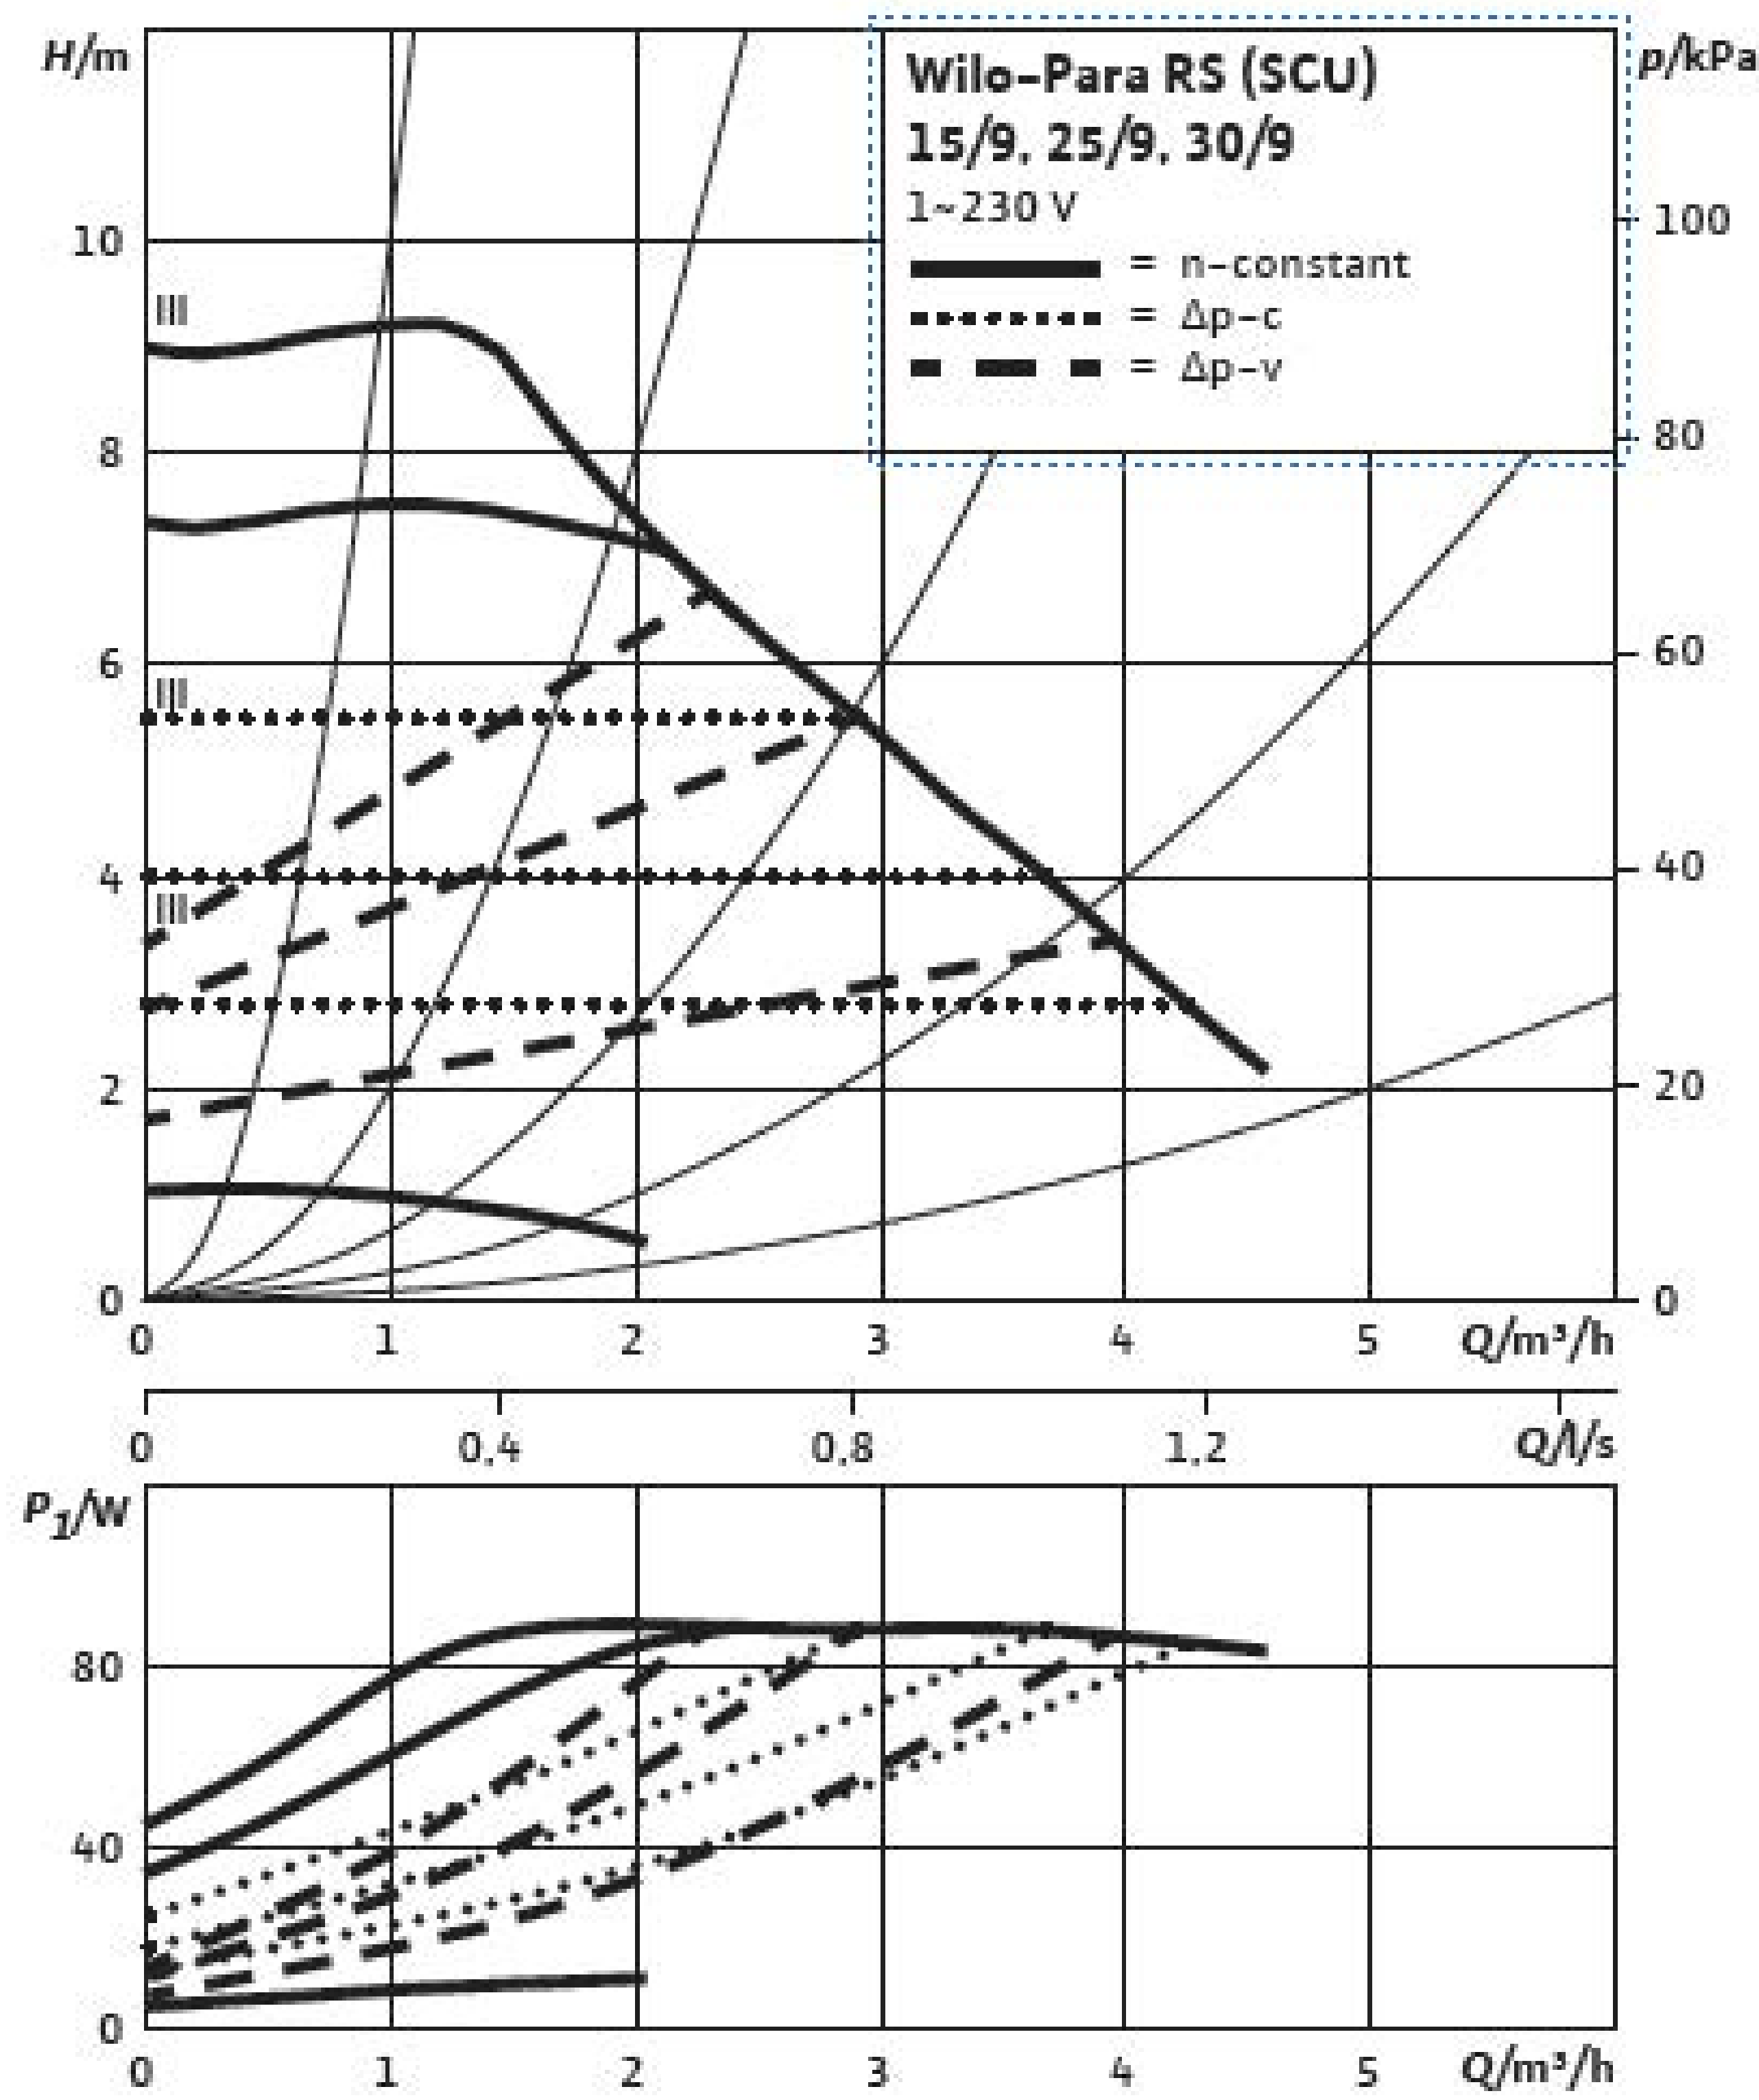

3.7 BOILER INSTALLATION DIAGRAMS

3.7.1 Heating Only

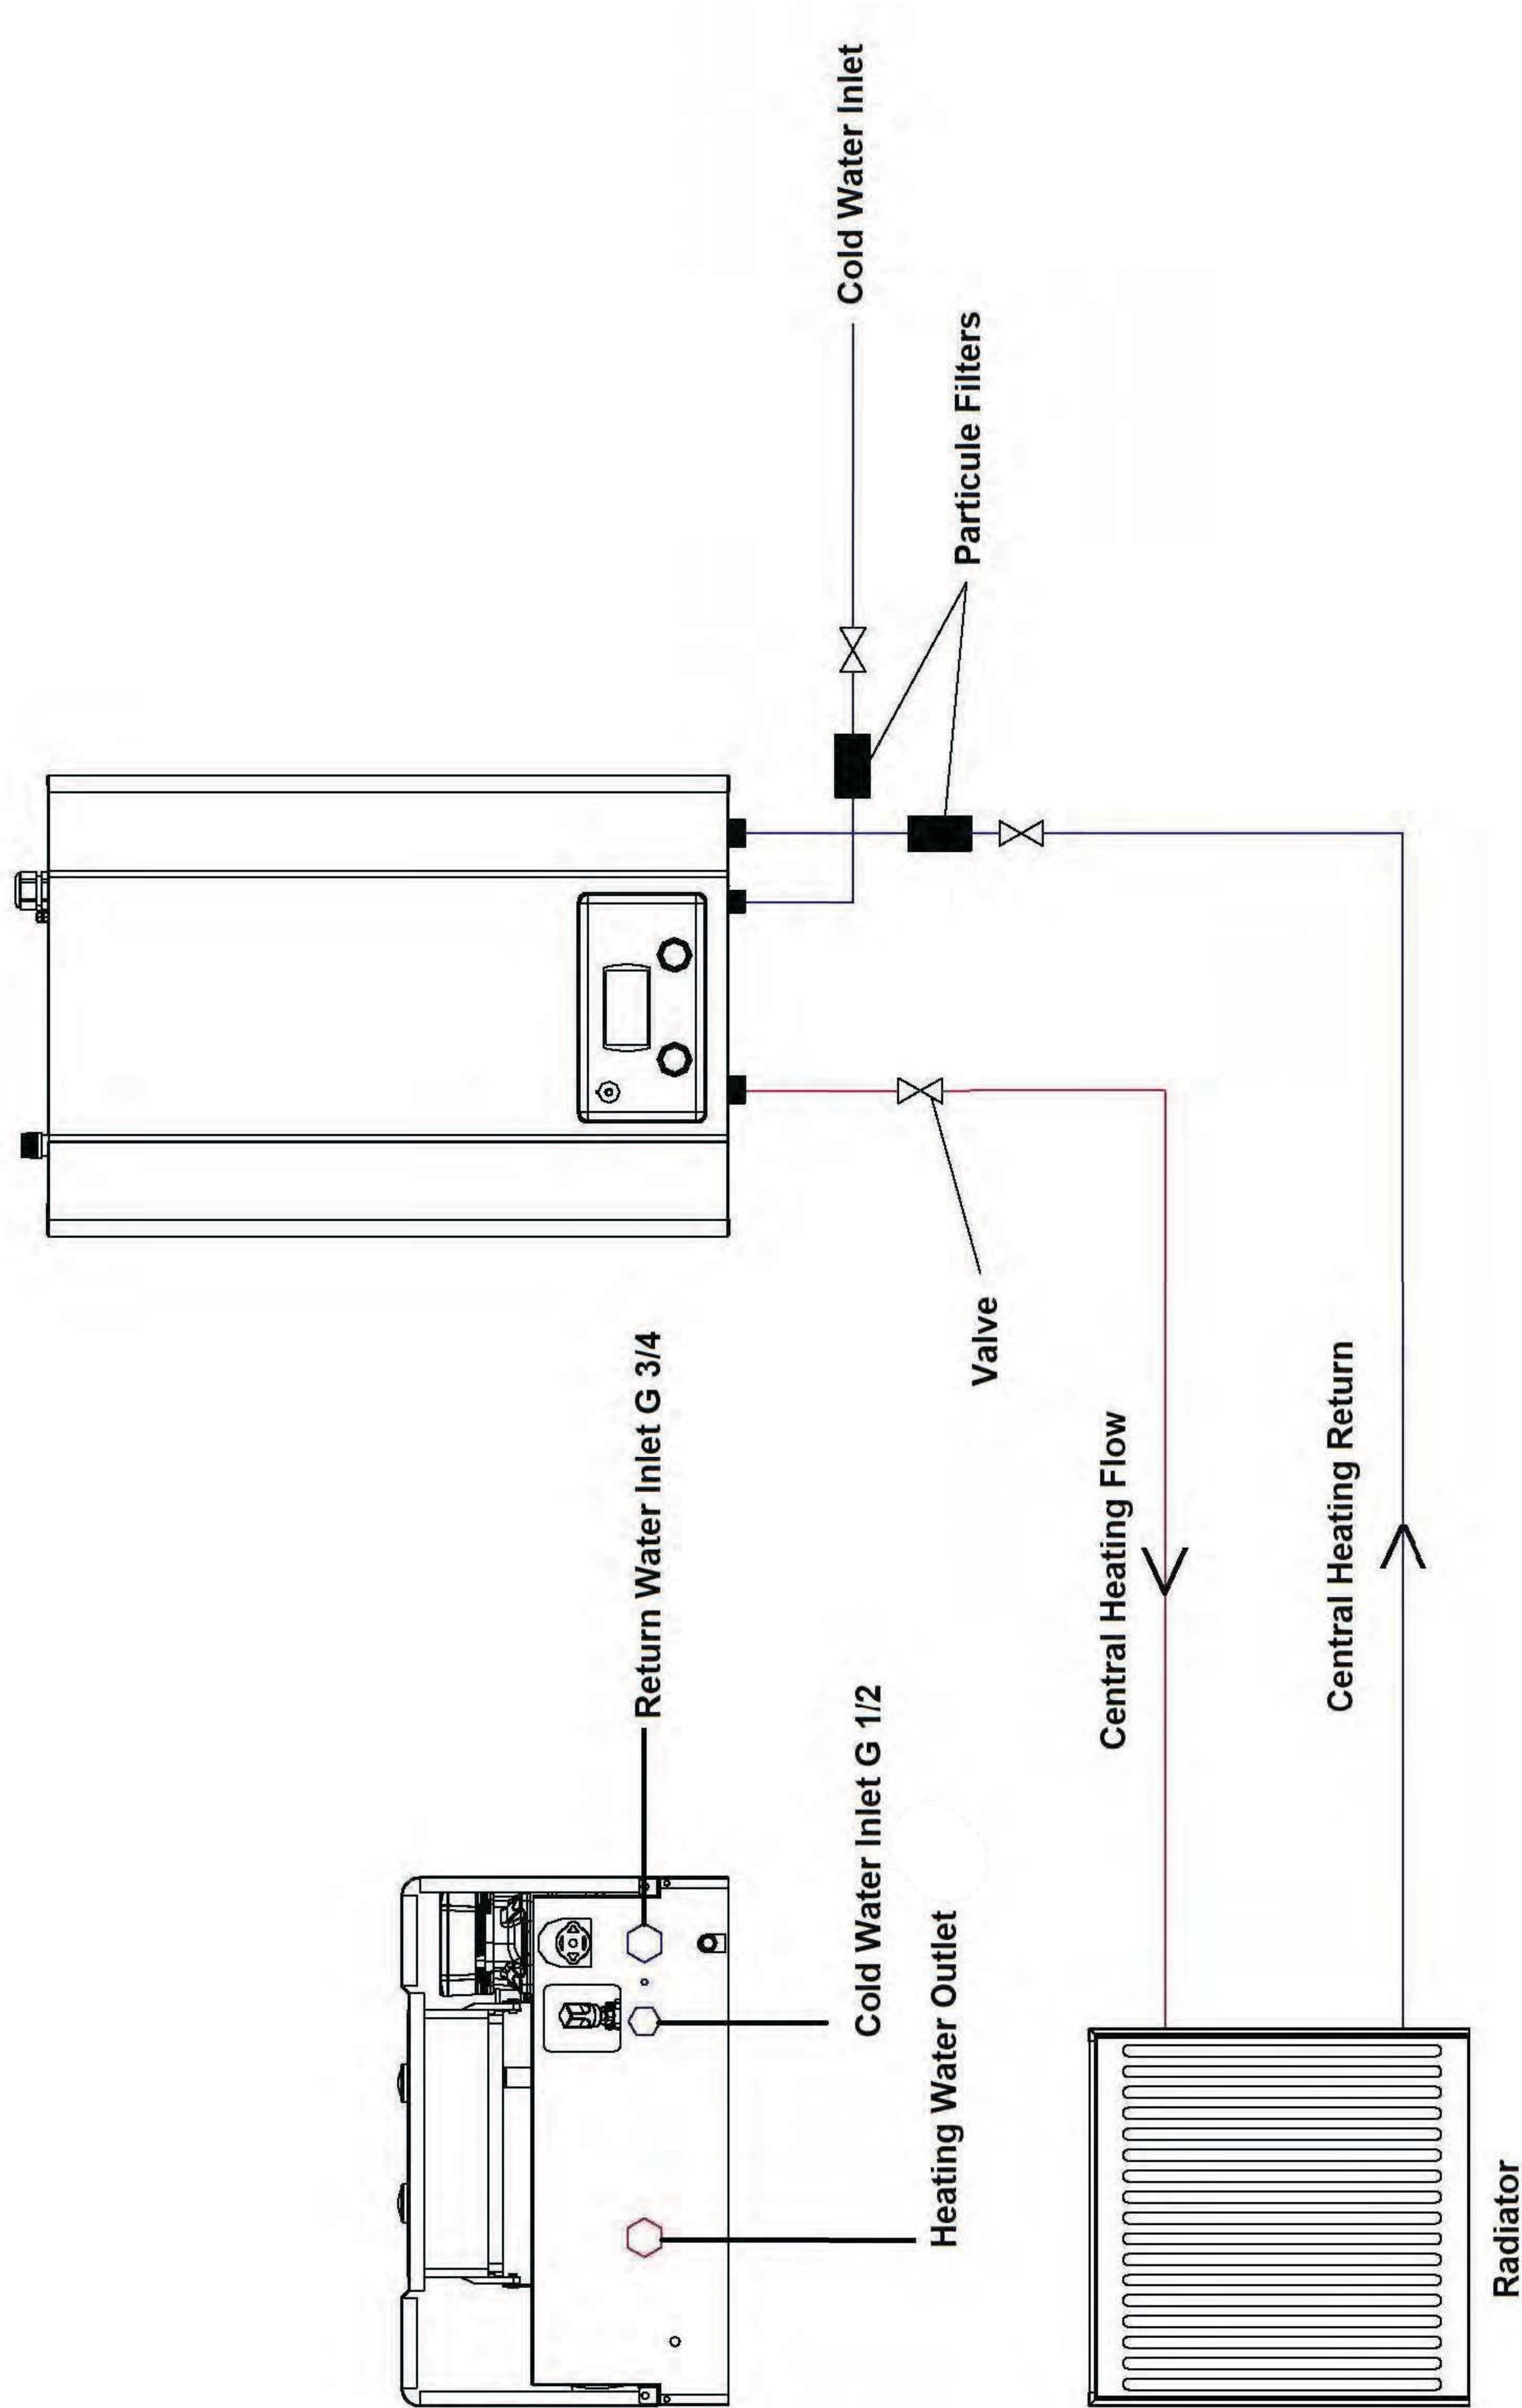

3.8 ELECTRIC CONNECTION

The electricity connection of the boiler must be made by a qualified electrician. Improper electrical connections made by unqualified people may cause failure of critical components of the boiler and will invalidate the warranty.



DANGER ! Electric Shock Risk

- Make sure to isolate the main energy supply before starting to work on the boiler.
- Secure the main energy supply to prevent from accidental switch on while working on the boiler.


3.8.1 Electricity Connection Precautions

- All wiring must be carried out in accordance with current wiring regulations BS7671.
- All electrical connections must be made by a qualified electrician.
- We recommend that a load check is carried out when installing high power boilers. This must be done by a qualified electrician. Upgrading the main fuse of the property may be required.
- A proper earth connection must be made and tested before operating the boiler.

3.8.2 Electricity Supply Connection

- The main electrical cable supplying the boiler should be connected to the internal RCD device and main distribution board according to the below diagrams.
- Where possible it is recommended to supply the boiler and associated circuits from a dedicated distribution board to prevent overload of the current domestic distribution board.
- Electrical supply cable connection must be terminated with the addition of ferrule crimps.
- If an electric shower is present we recommend that a Shower Sensor is installed within the system to each shower. This will cause an interrupt to the boilers control signal when the shower is in use. It will disable the boiler protecting the electrical system from overload. EHC part code is ESFS15C
- Local isolation is required to be installed adjacent to the boiler by means of a rotary isolator suitably rated for the boiler capacity.
- If the property is supplied by a rural power supply or prone to lightening strikes & power cuts it is recommended to install a suitable surge protection device to the boiler supply. This will reduce the risk of damage to the boiler electronics during these events.
- The boiler supply cable should be calculated by the means of a cable calculation in accordance with BS7671 by a suitably qualified electrician taking into account cable type, cable routing and changes of boiler characteristics based on deviation of the site supply voltage

3.8.2 Electricity Supply Connection (Continued)

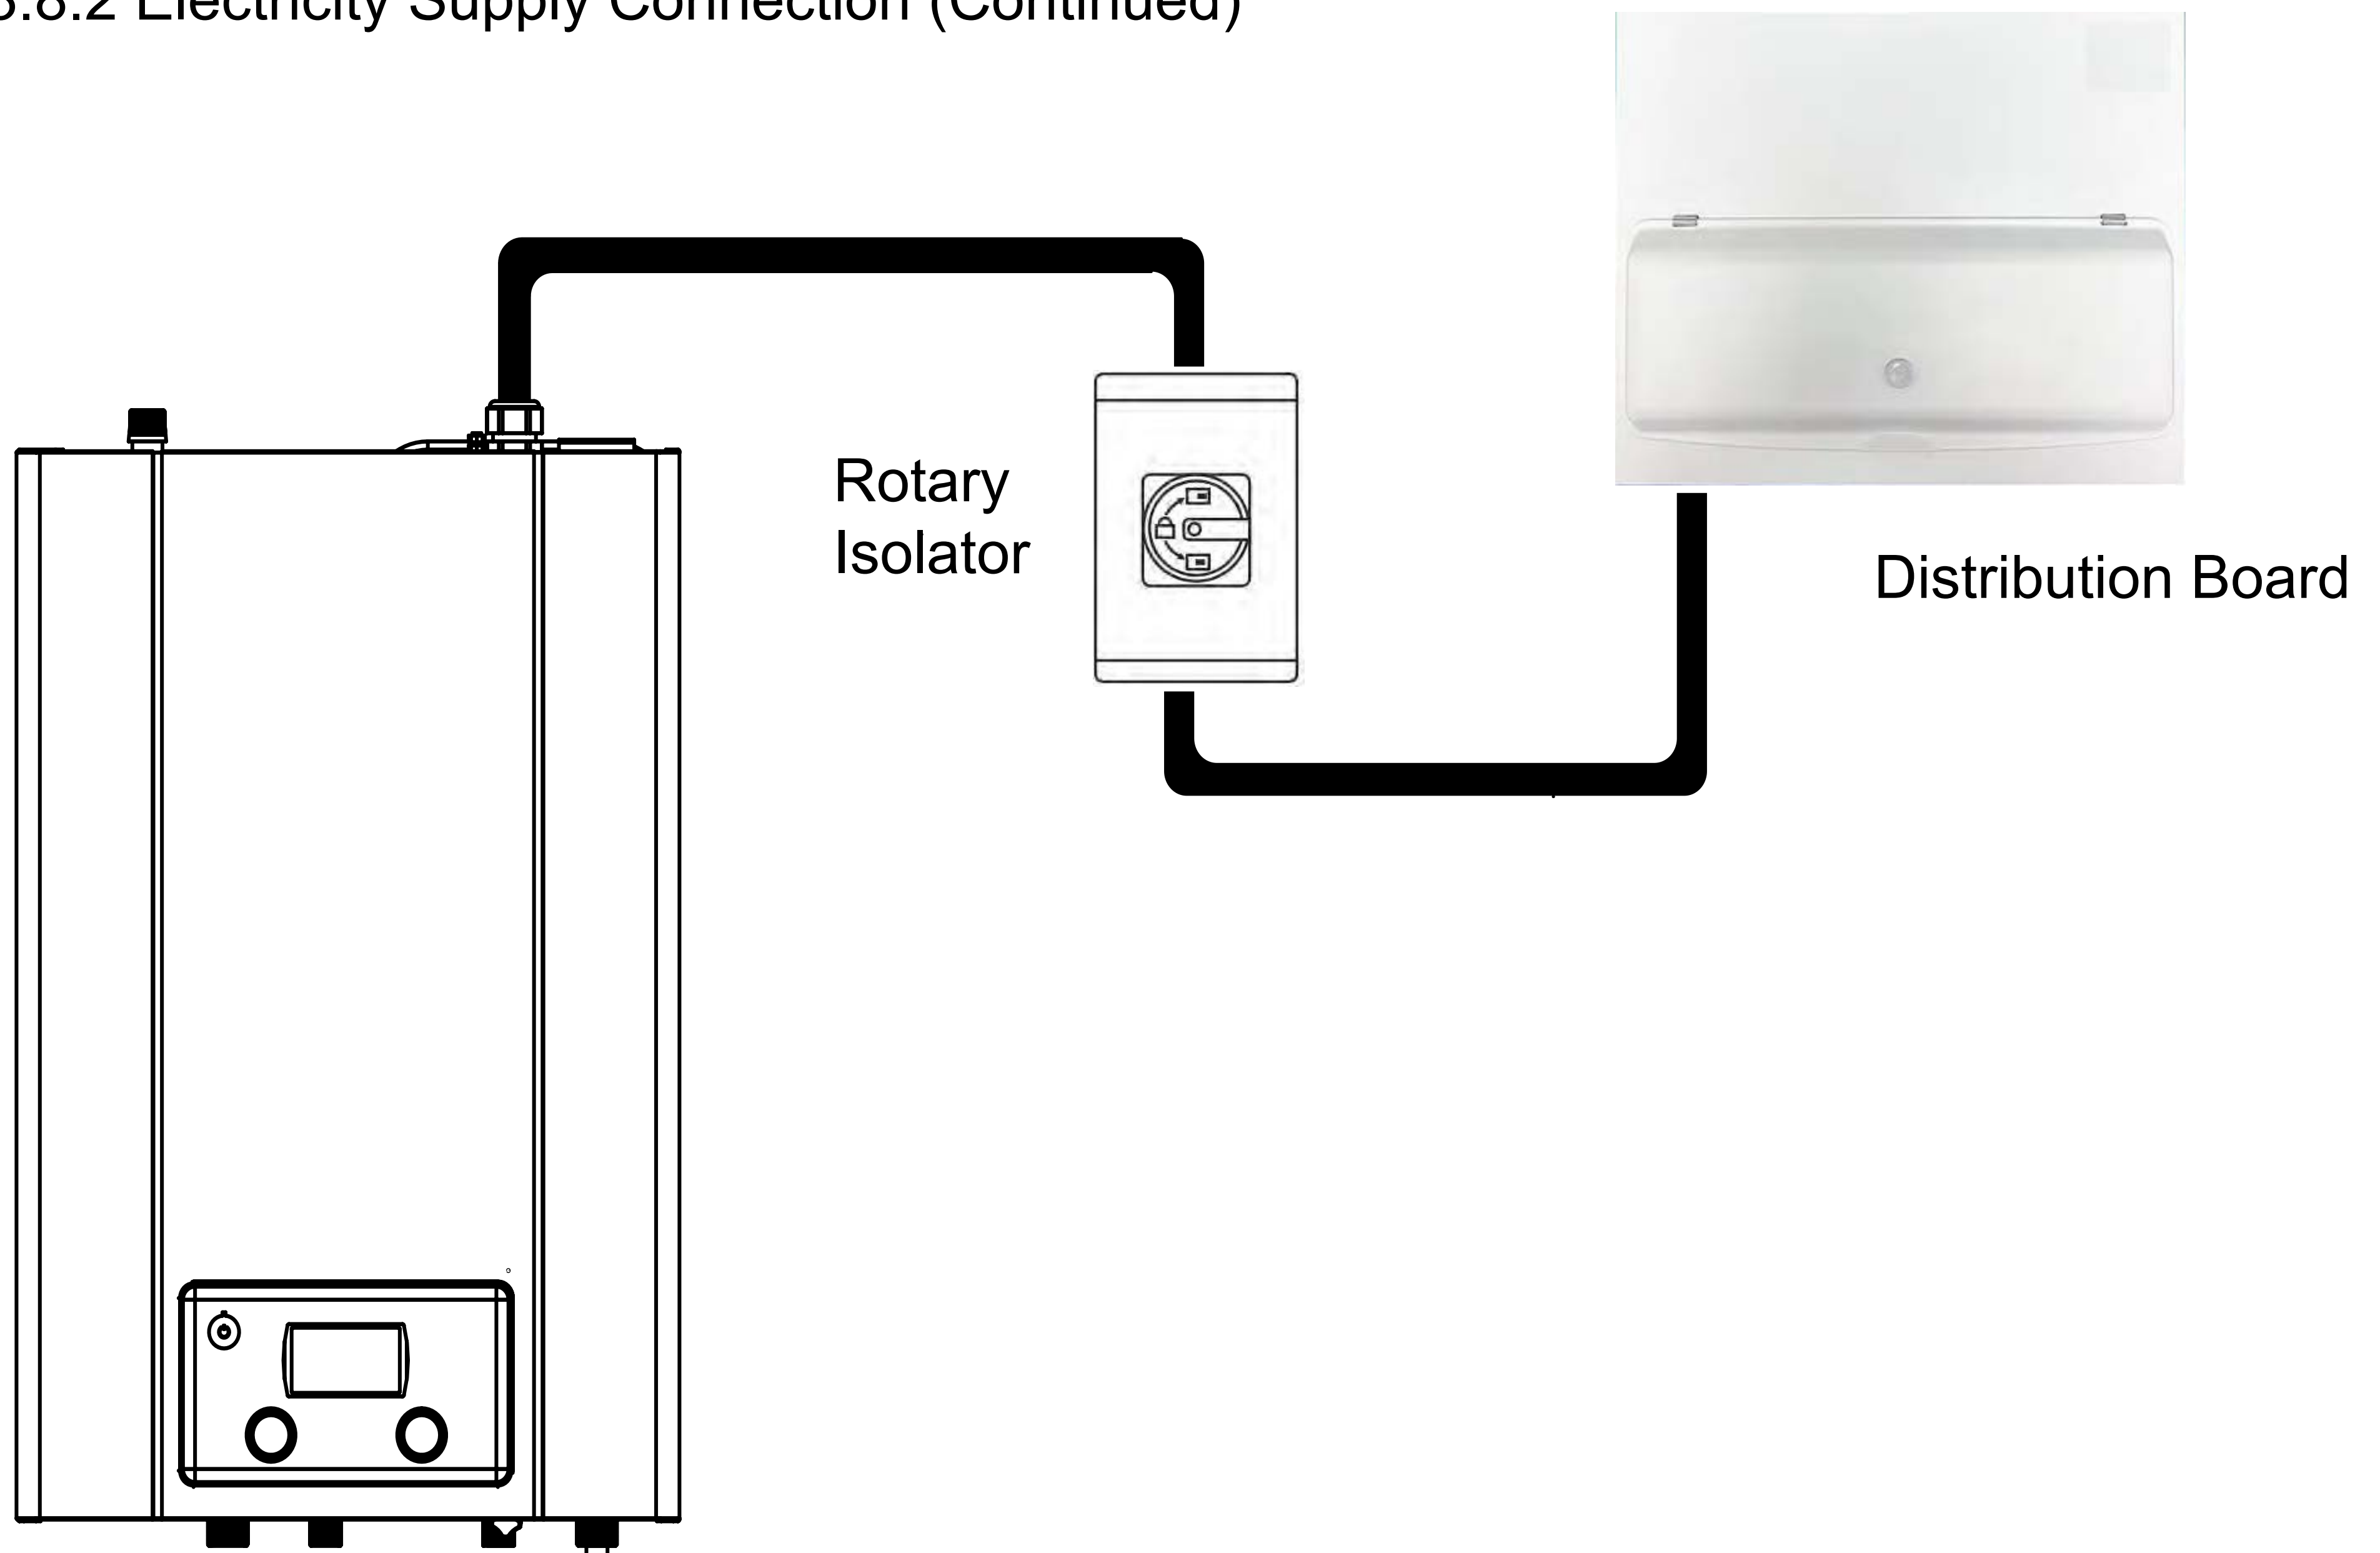


The cable connections are clearly marked on the cables to be connected to the RCD device.

- Monophase L N
- 3-phase L1 L2 L3 N
- Earth connection is marked with 


WARNING

- Make sure that the cable terminations are fixed tightly (with 2.8 -3.5 Nm torque) onto the RCD device. Loose connections may generate sparks and may cause fire risk.
- Do not operate the boiler without proper earth connection. Fix a proper size earth cable tightly to the ring cable clip and tighten the screw to the boiler chassis.
- Use the cable glands provided on the boiler to secure the electrical supply cable.
- Electrical supply cable connection must be terminated with the addition of ferrule crimps.
- We recommend the installation of HO7RNF cable to supply the boiler from the rotary isolator.


3.8.4 Electrical Connection Diagram 230V (Monophase) (6-15kW Models)

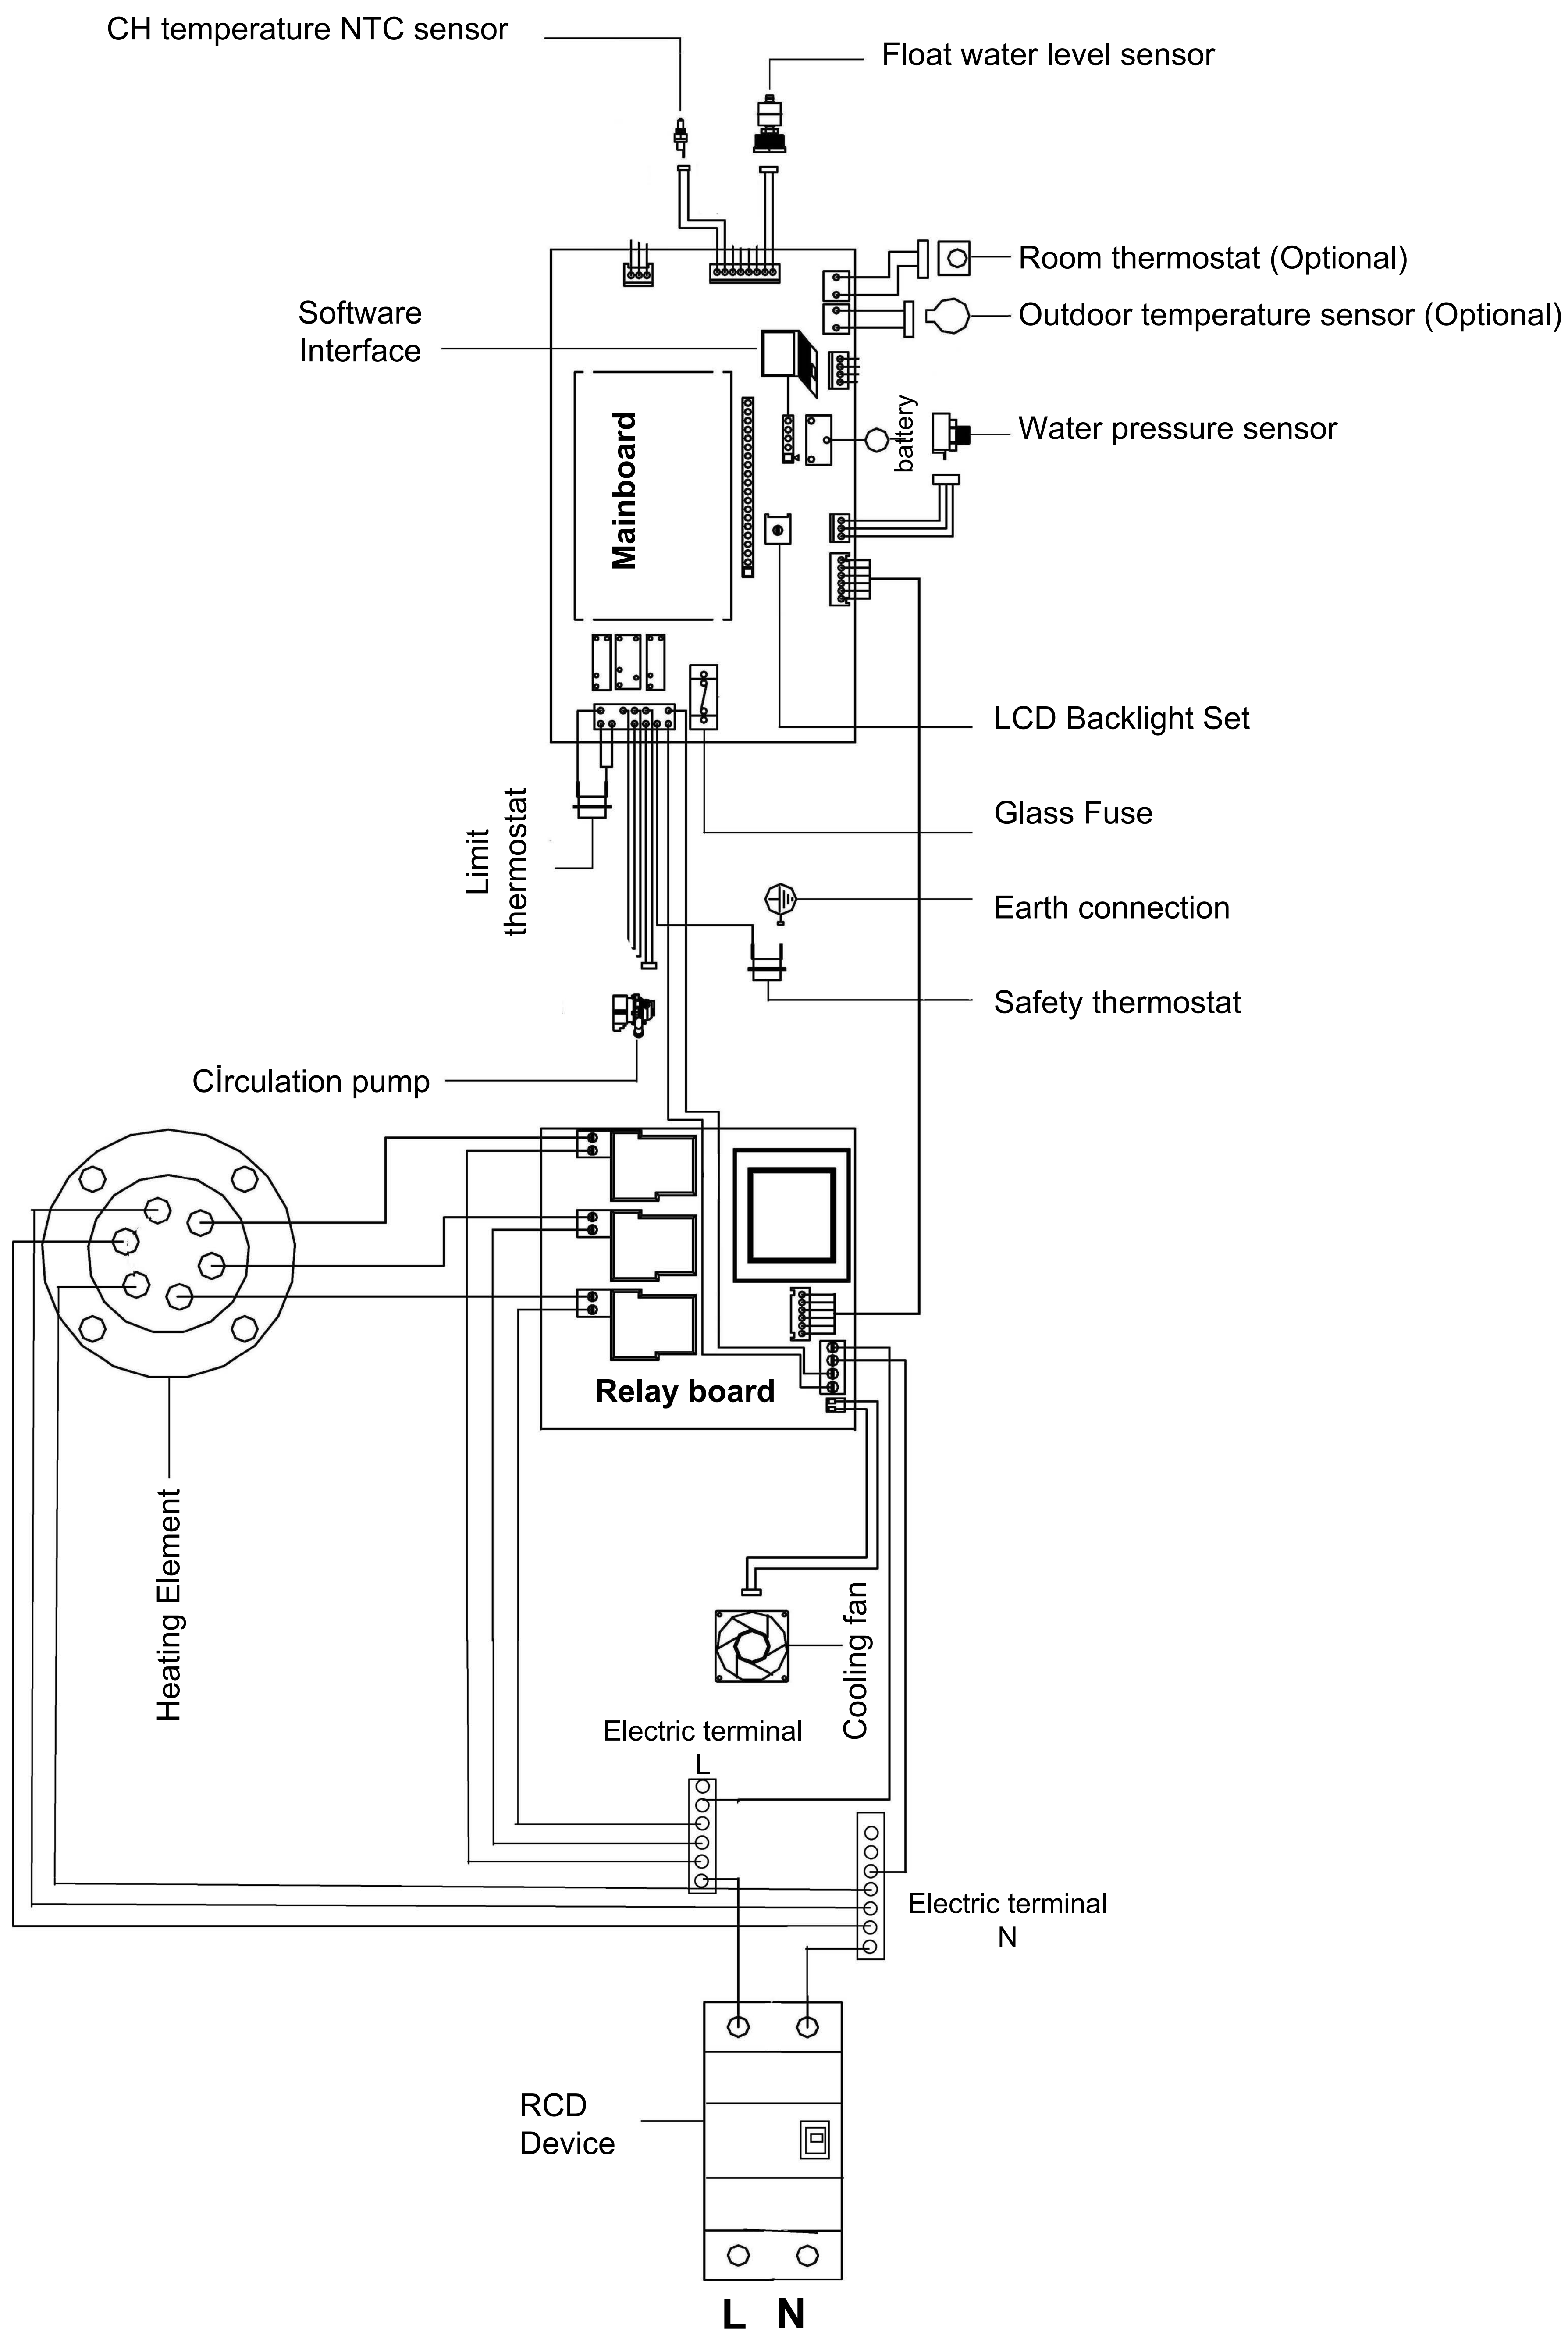


3.8.5 Electrical Connection Diagram 400V (3-phase) (18-40kW Models)

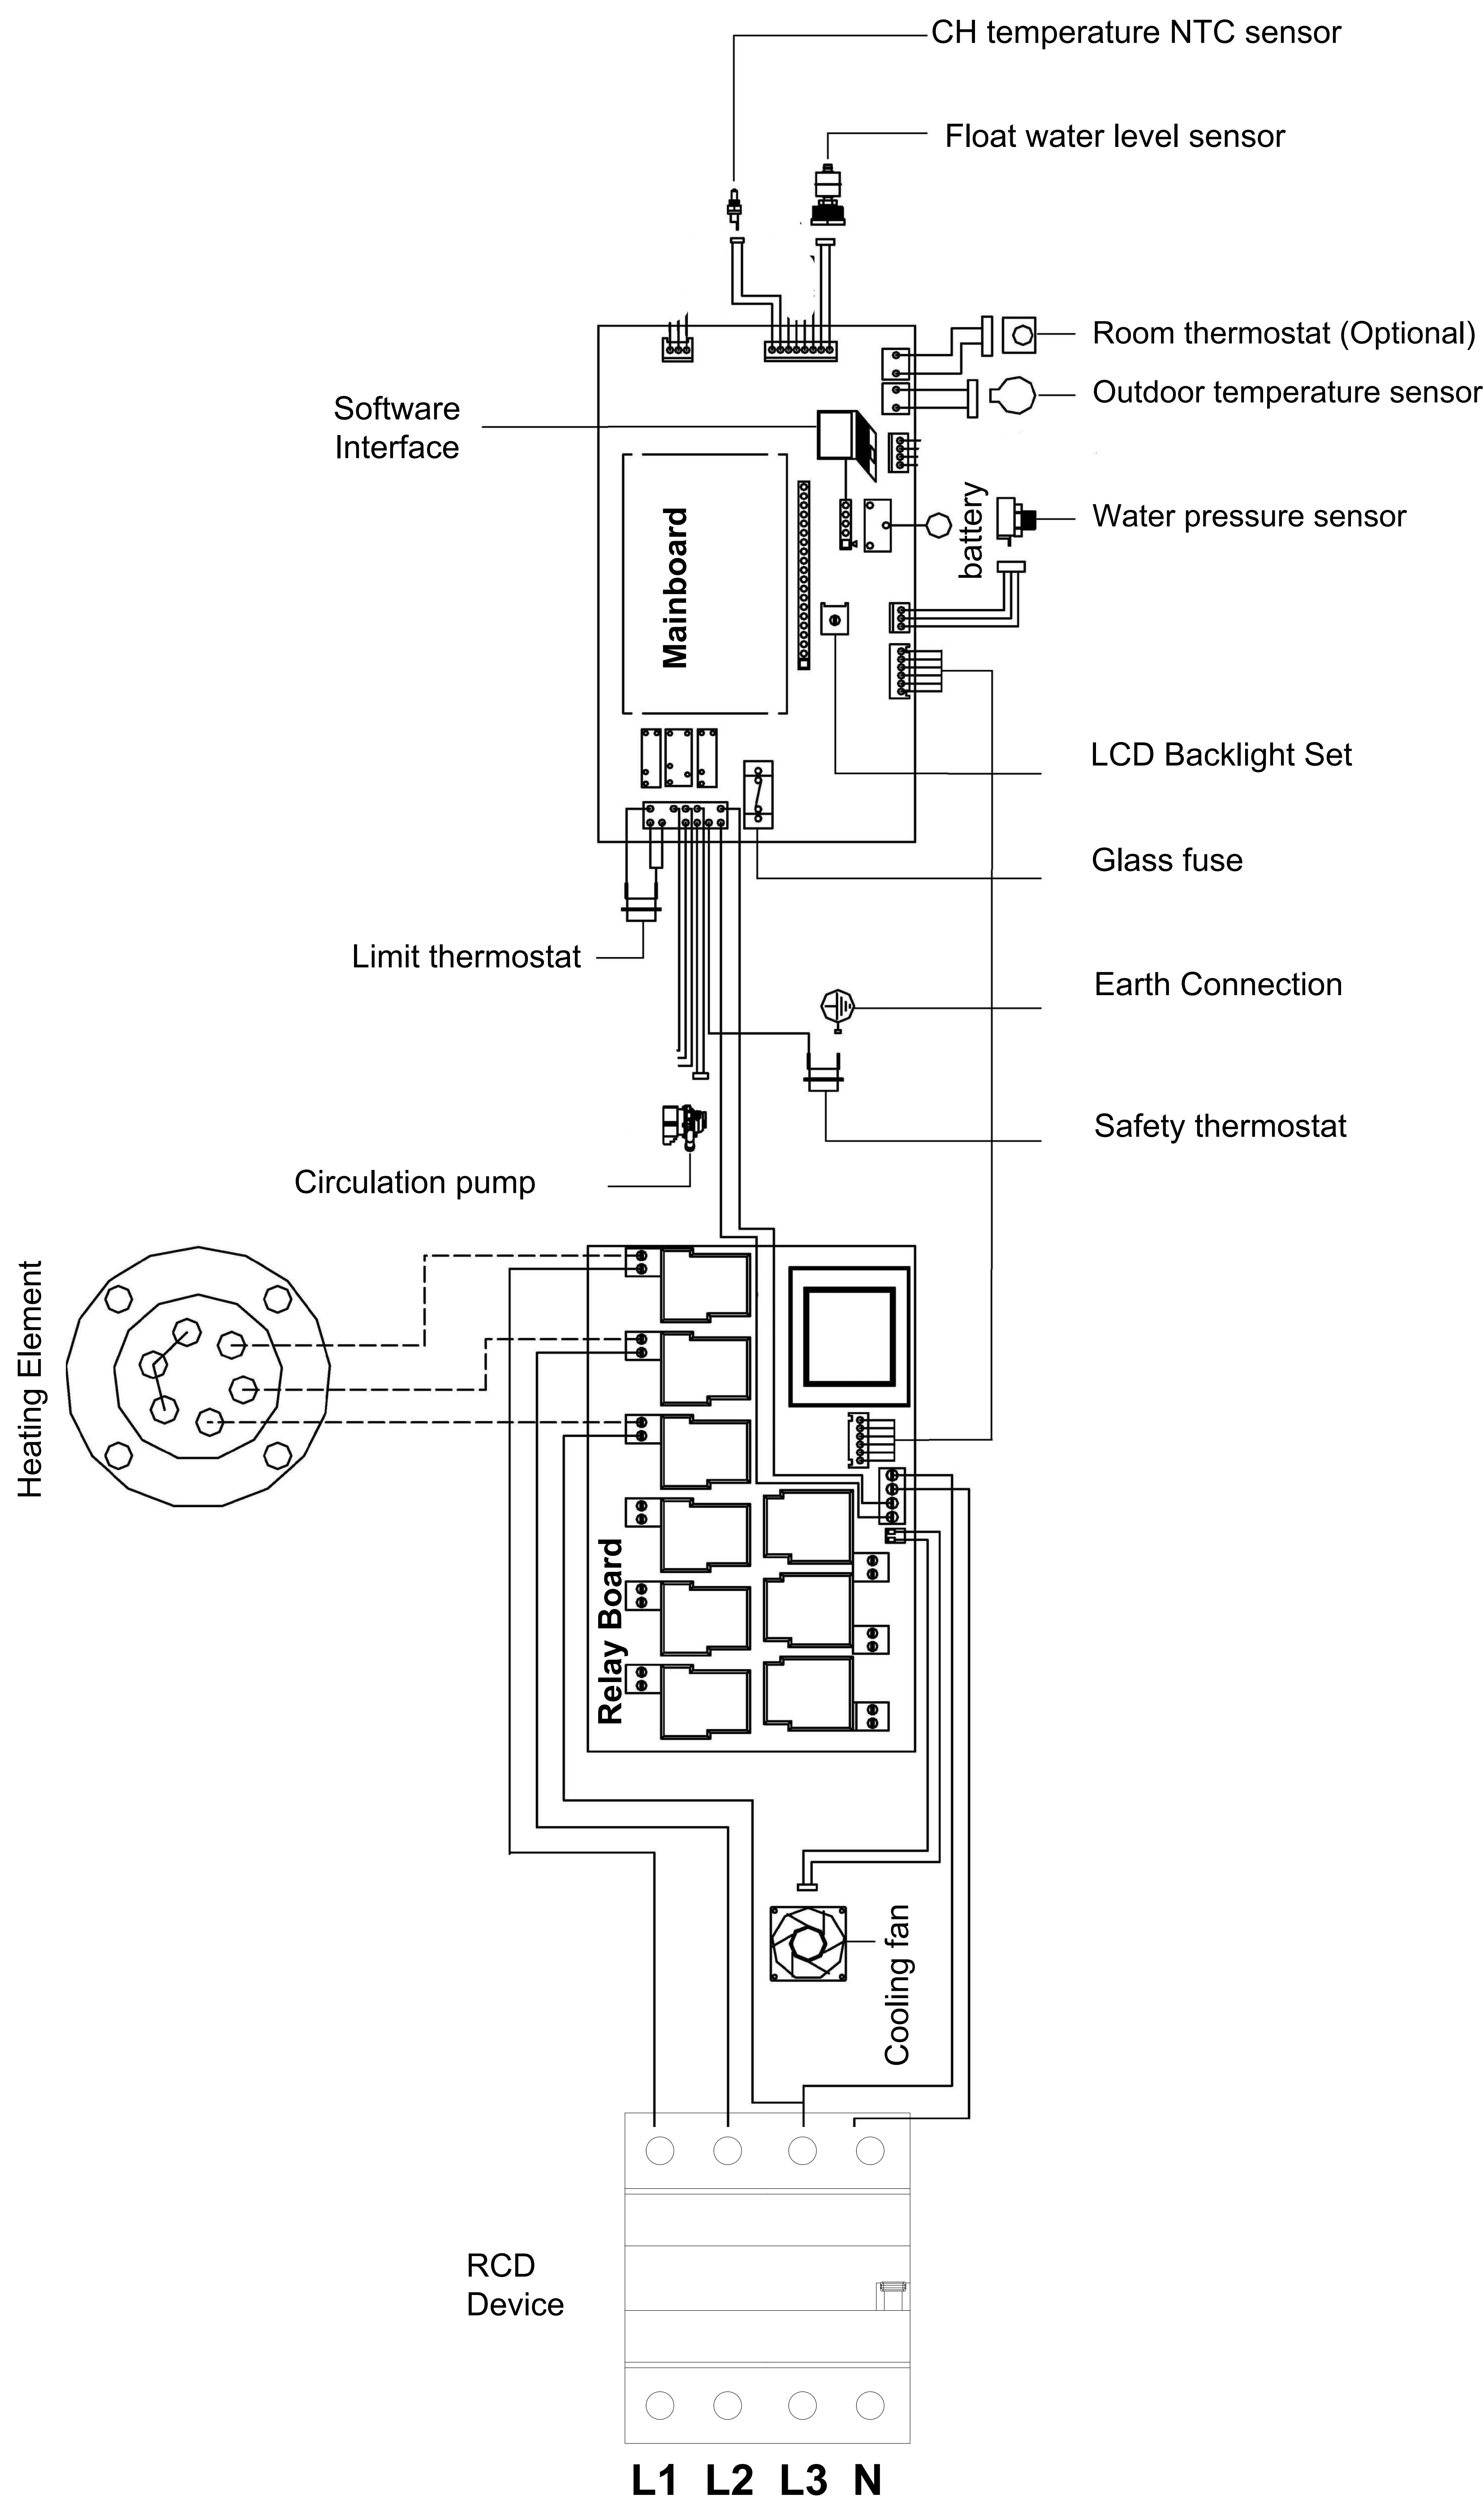


3.8.5 Electrical Connection Diagram 400V (3-phase) (50-60kW Models)

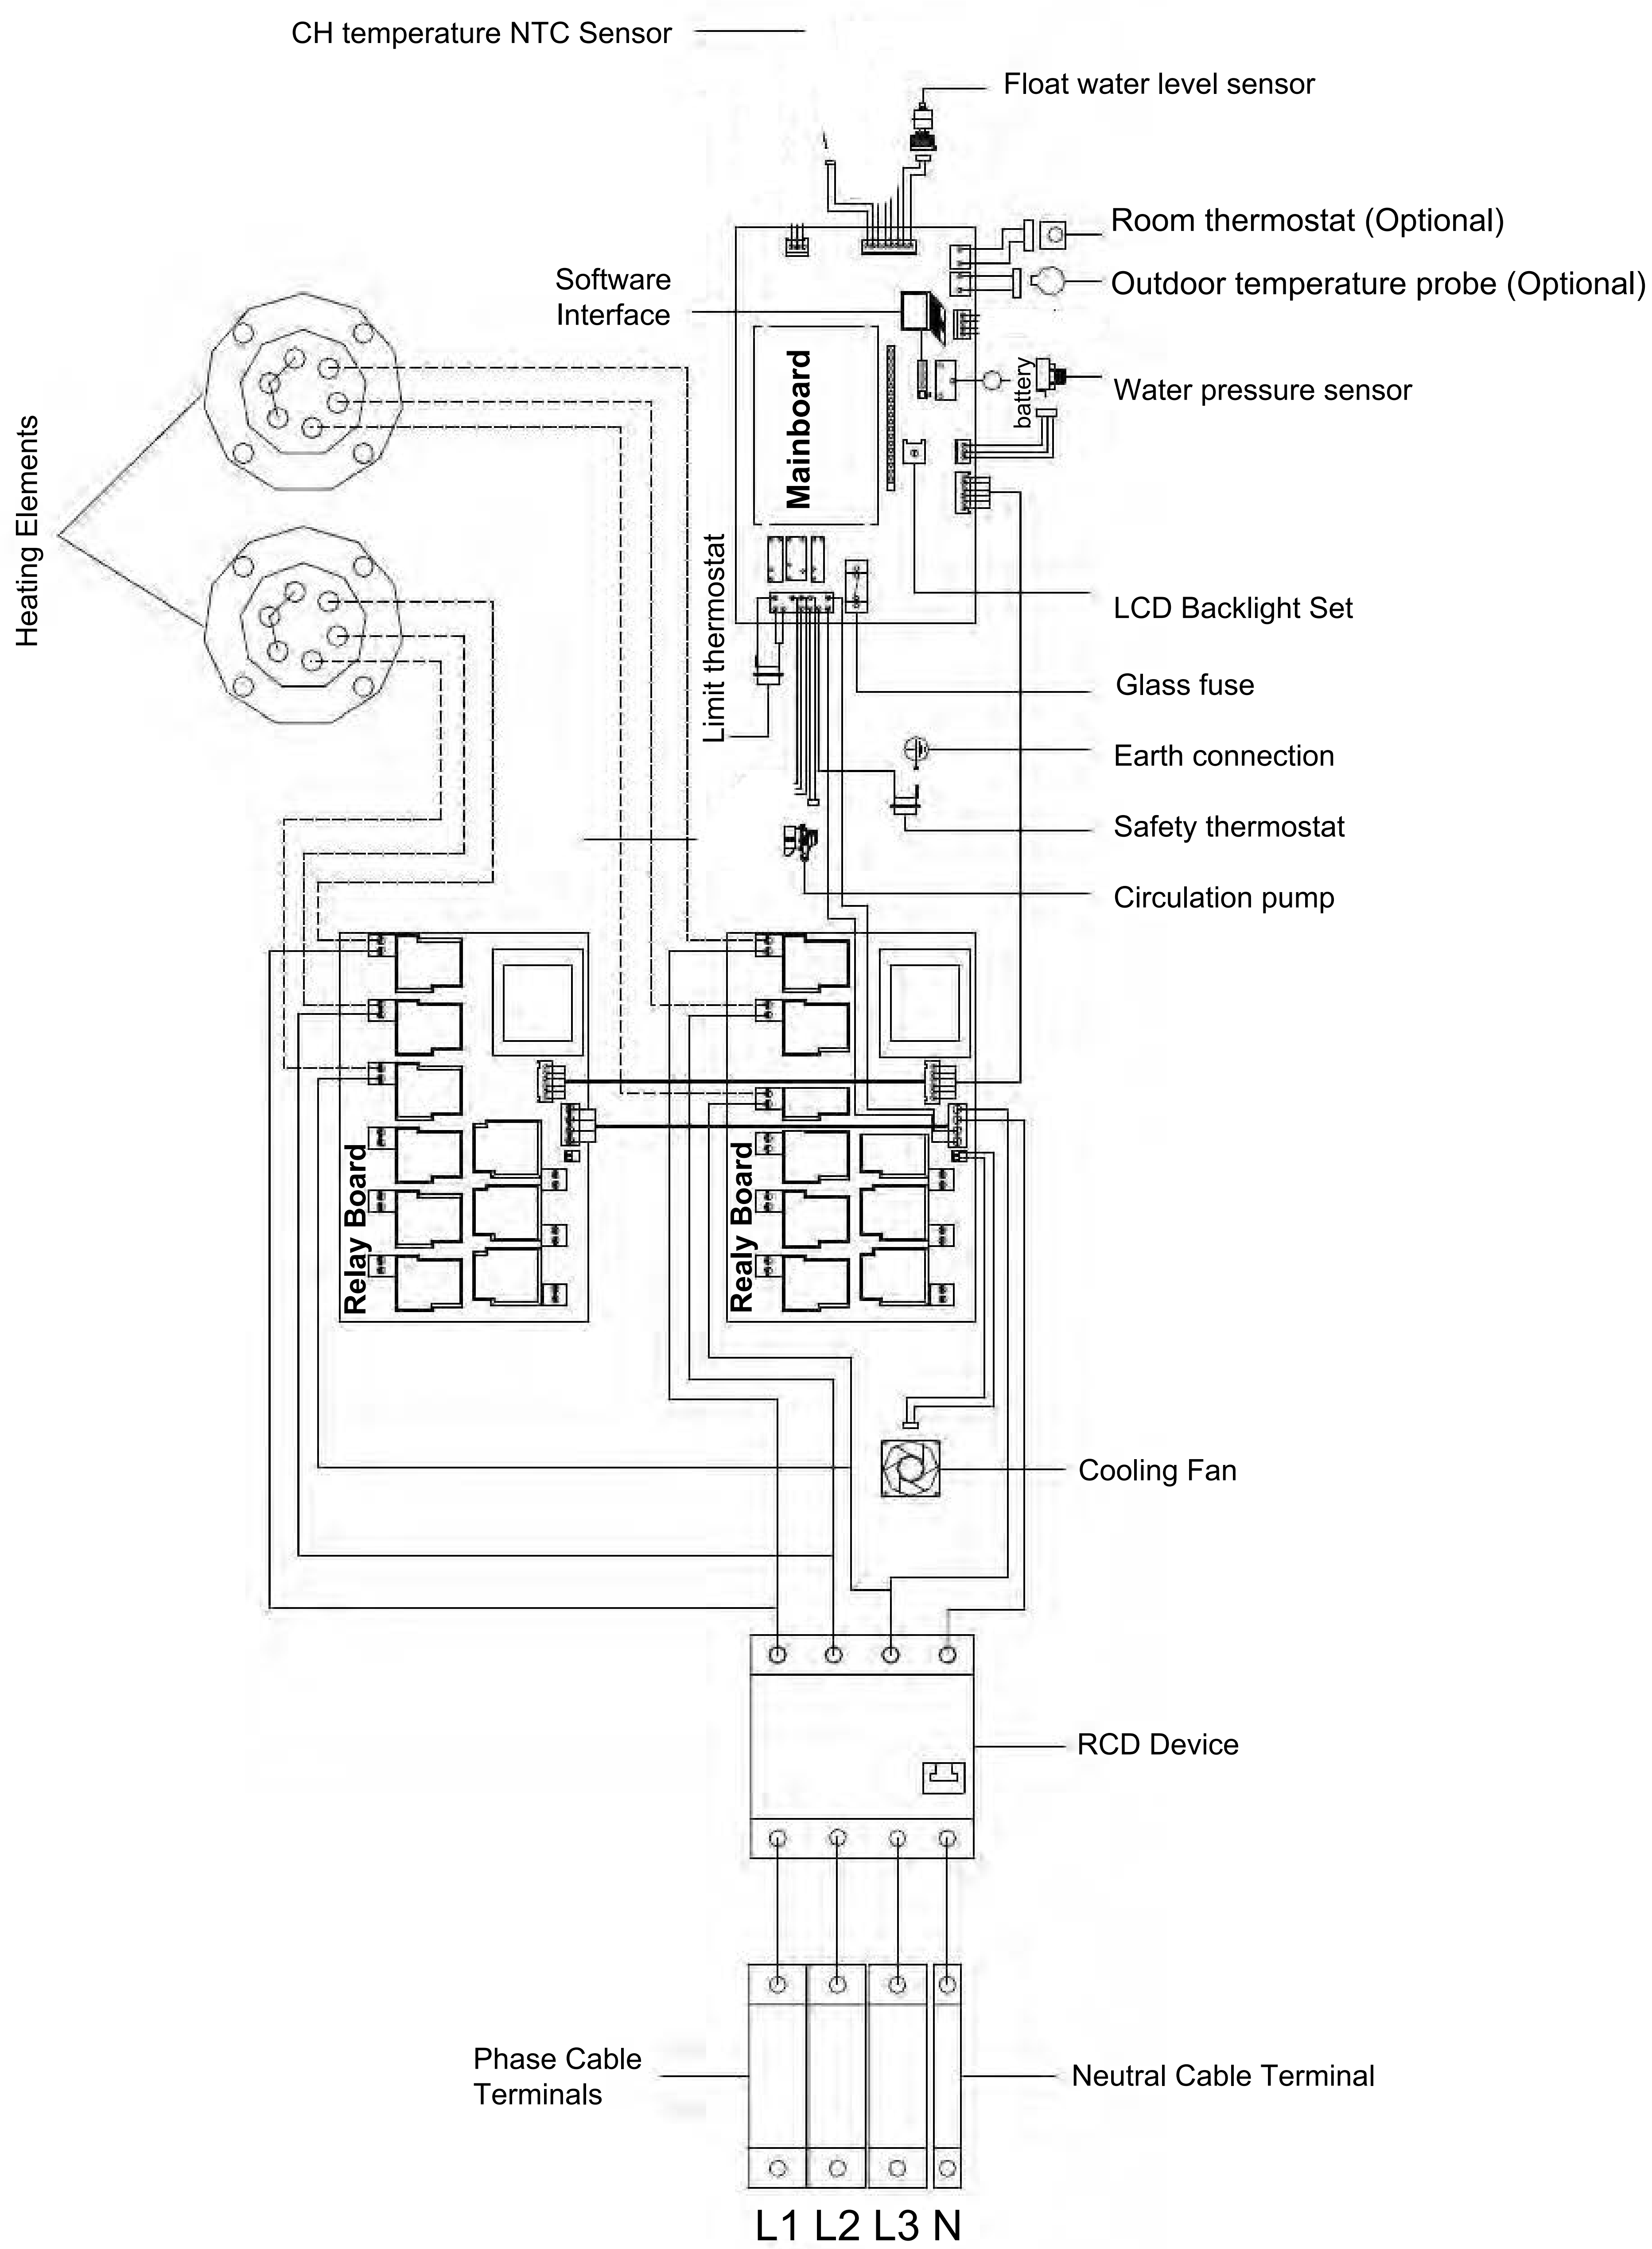


3.8.6 Electrical Connection Diagram 400V (3-phase) (80kW Model)


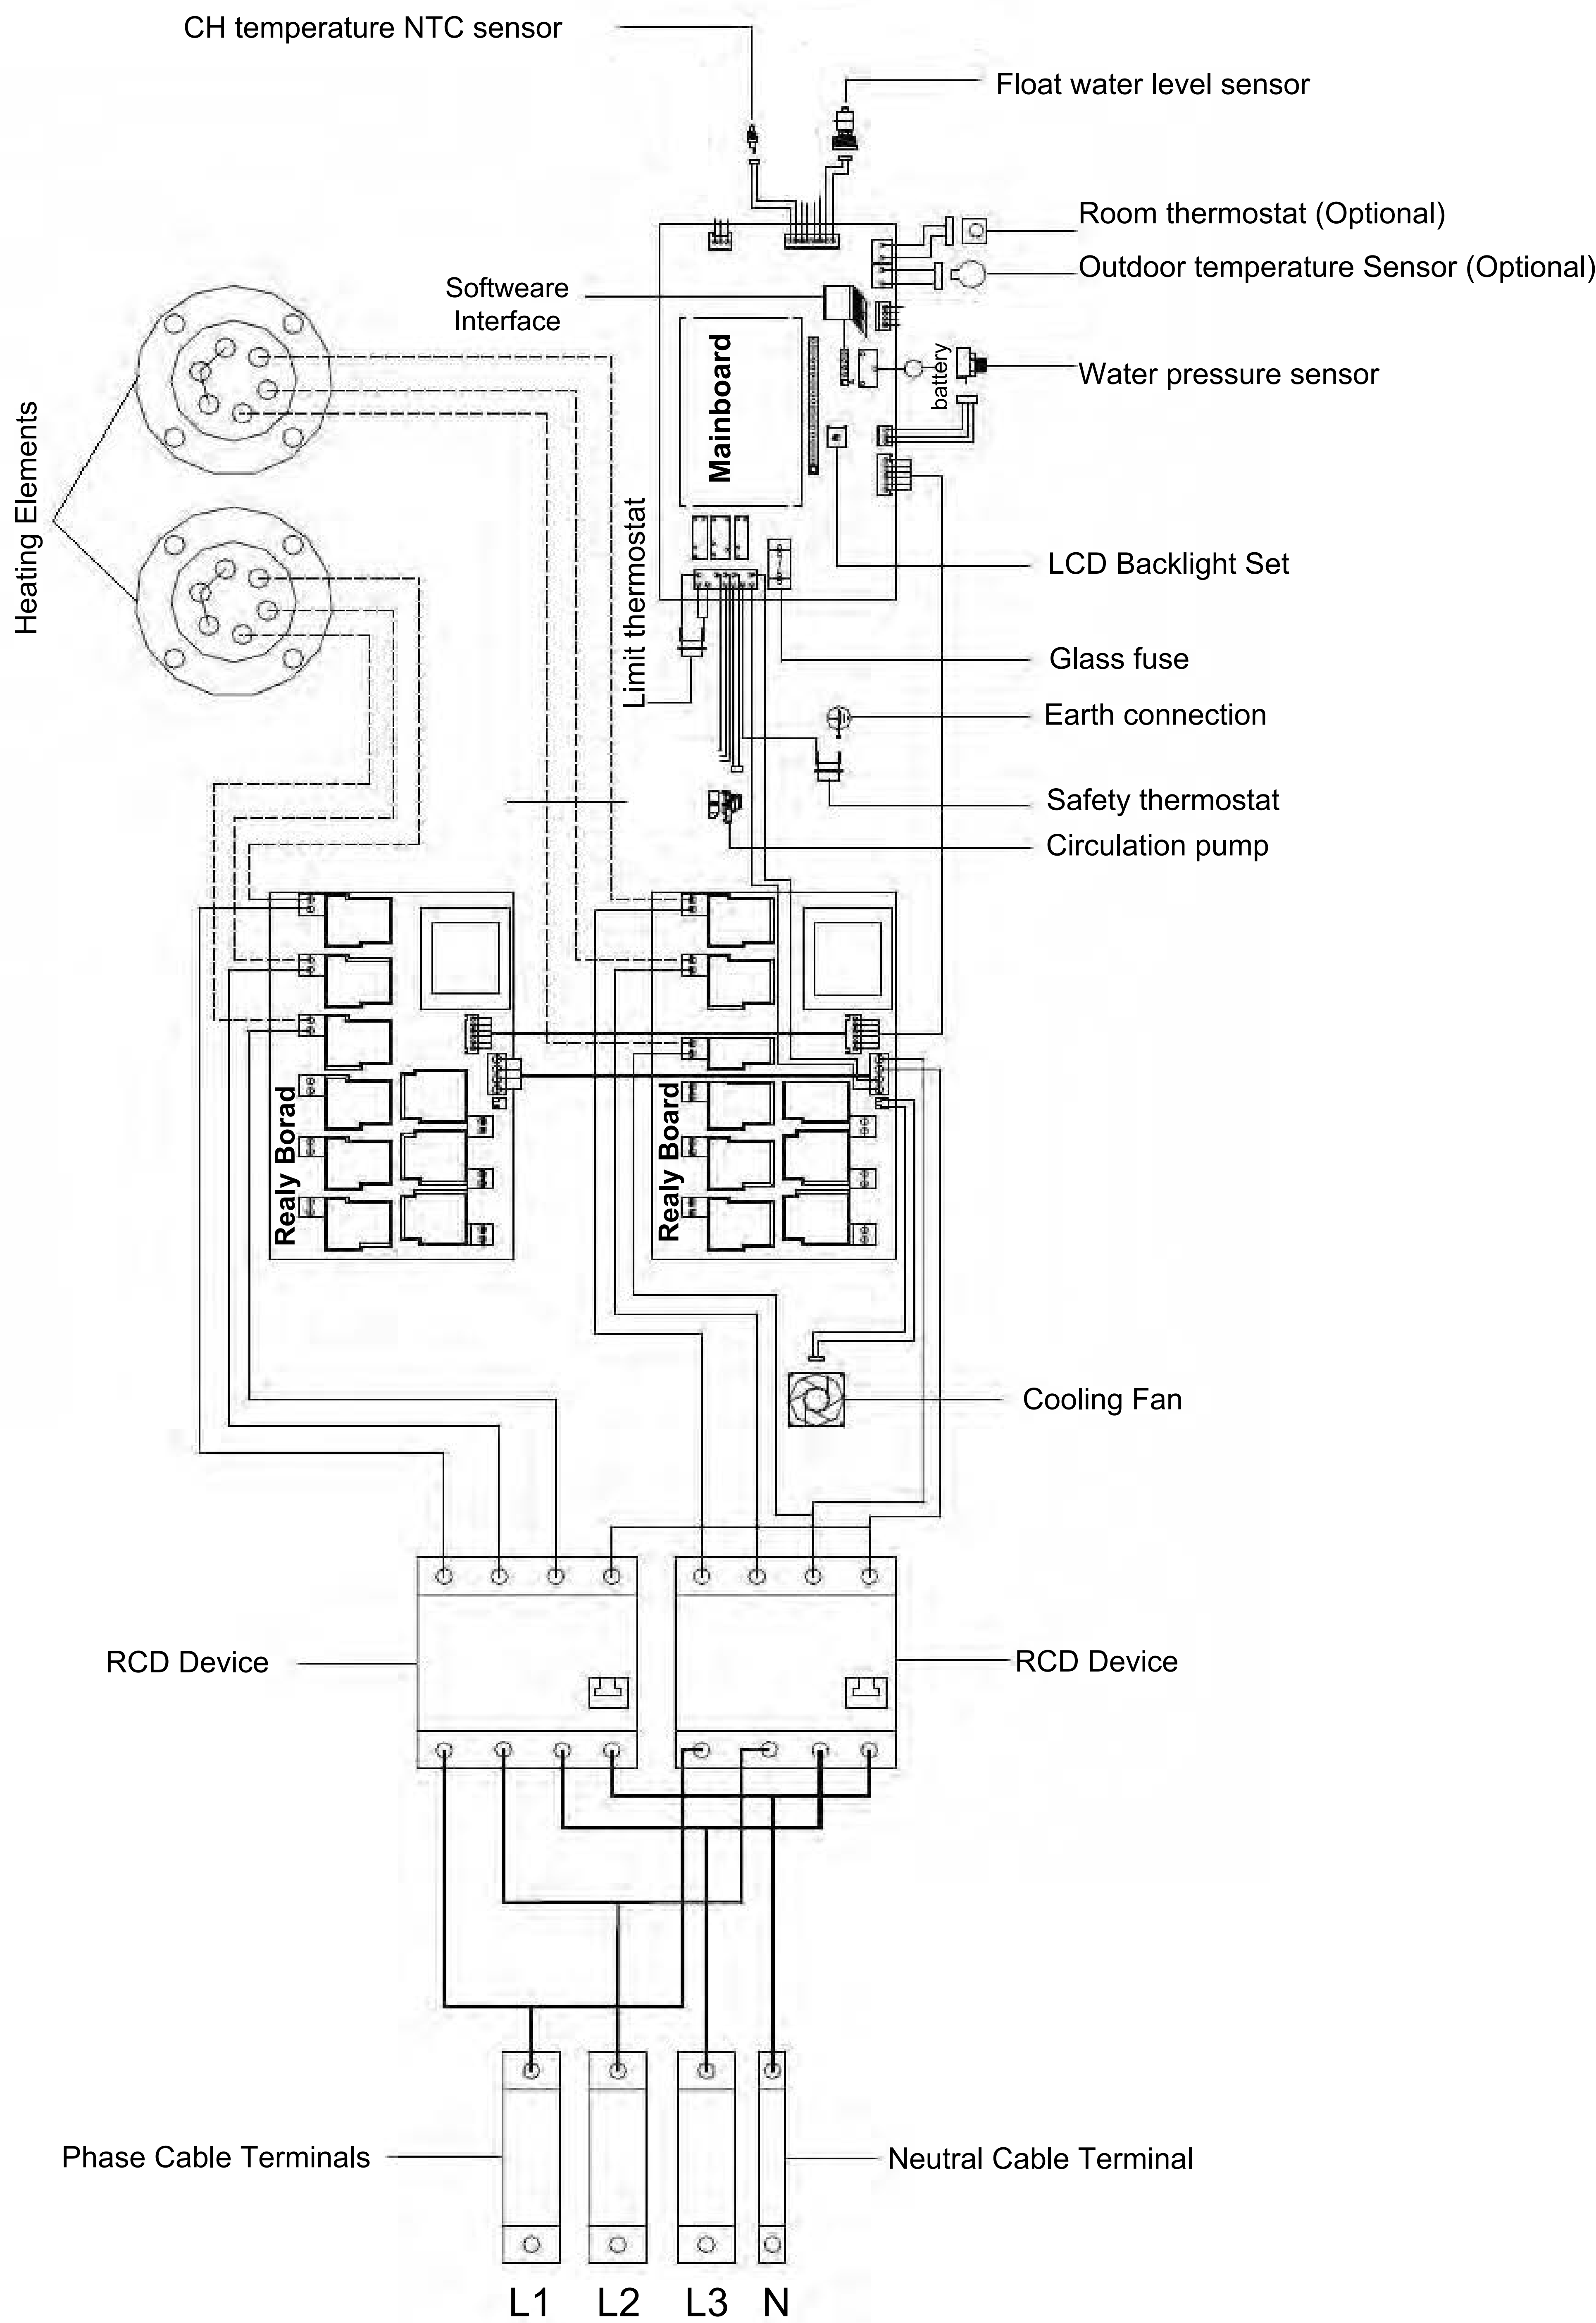


3.8.7 Electrical Connection Diagram 400V (3-Phase) (100 kW Model)

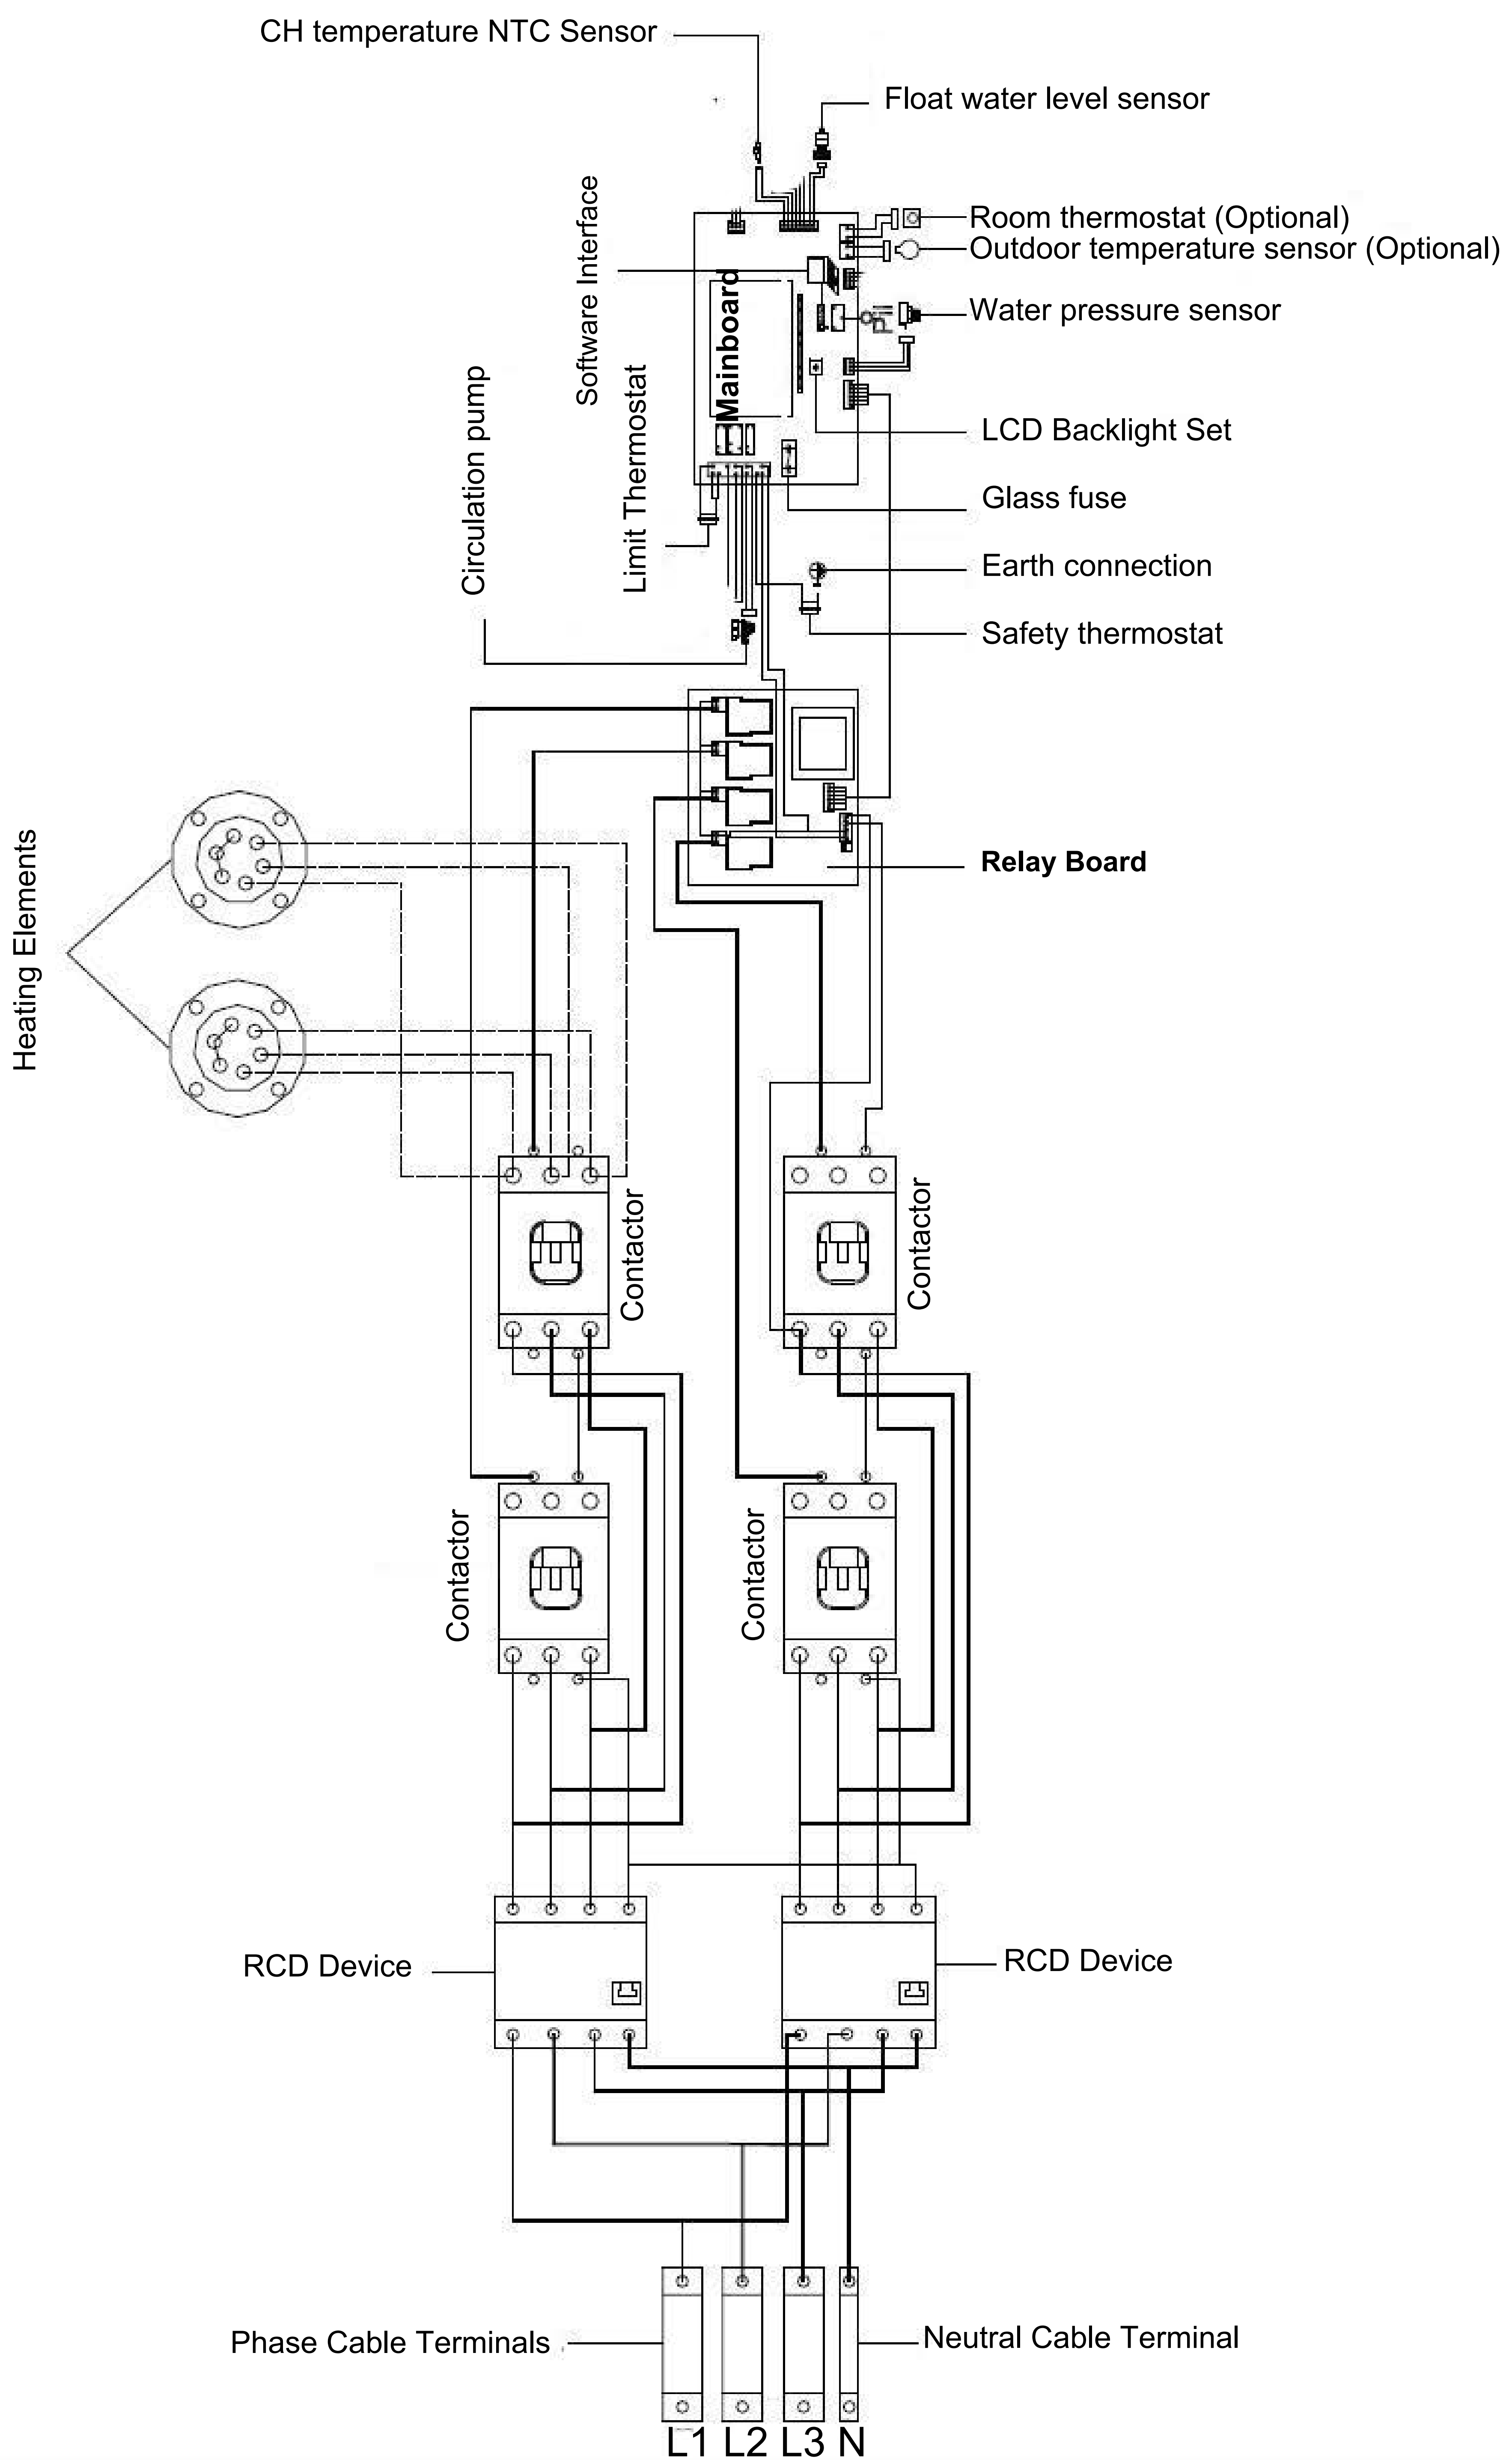

3.9 ROOM THERMOSTAT CONNECTION

An electric terminal is left outside the control panel plastic box so that the control panel is not opened while connecting an optional room thermostat. You can see this terminal in the below picture. Remove the jumper cable and connect the room thermostat volt free cables. When the room thermostat is connected to your boiler;  icon will be shown on the LCD screen when the boiler operation is stopped by a signal from the room thermostat or in case of a room thermostat failure.

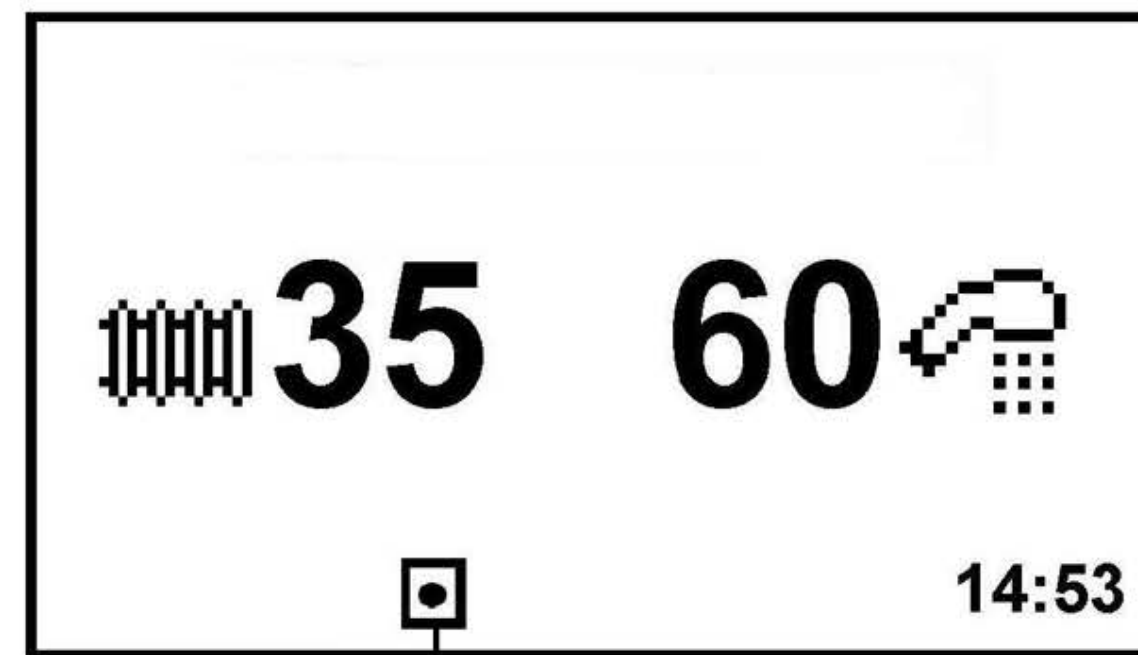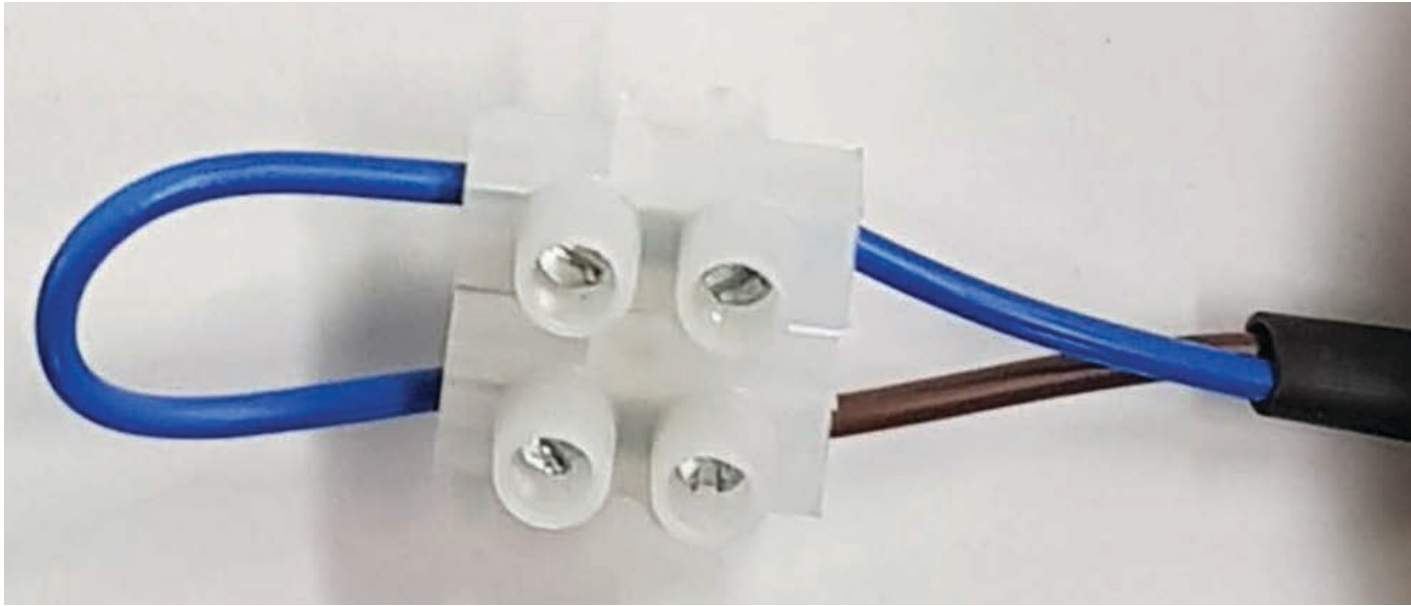


WARNING!

- Do not connect any voltage to this terminal as this will damage the boiler and invalidate the warranty.
- In cases where a wireless room thermostat requires a line (230V) connection, a separate electricity cable must be connected to the thermostat. Do not make a connection from the boiler's electricity supply. This may damage the boiler and invalidate the warranty.
- Where external controls require a 230v supply these cores should **NOT** be supplied within the same multicore cable as the volt-free control wires.


3.9.1 External Control Wiring

The below diagram details how to wire a basic heating control circuit.

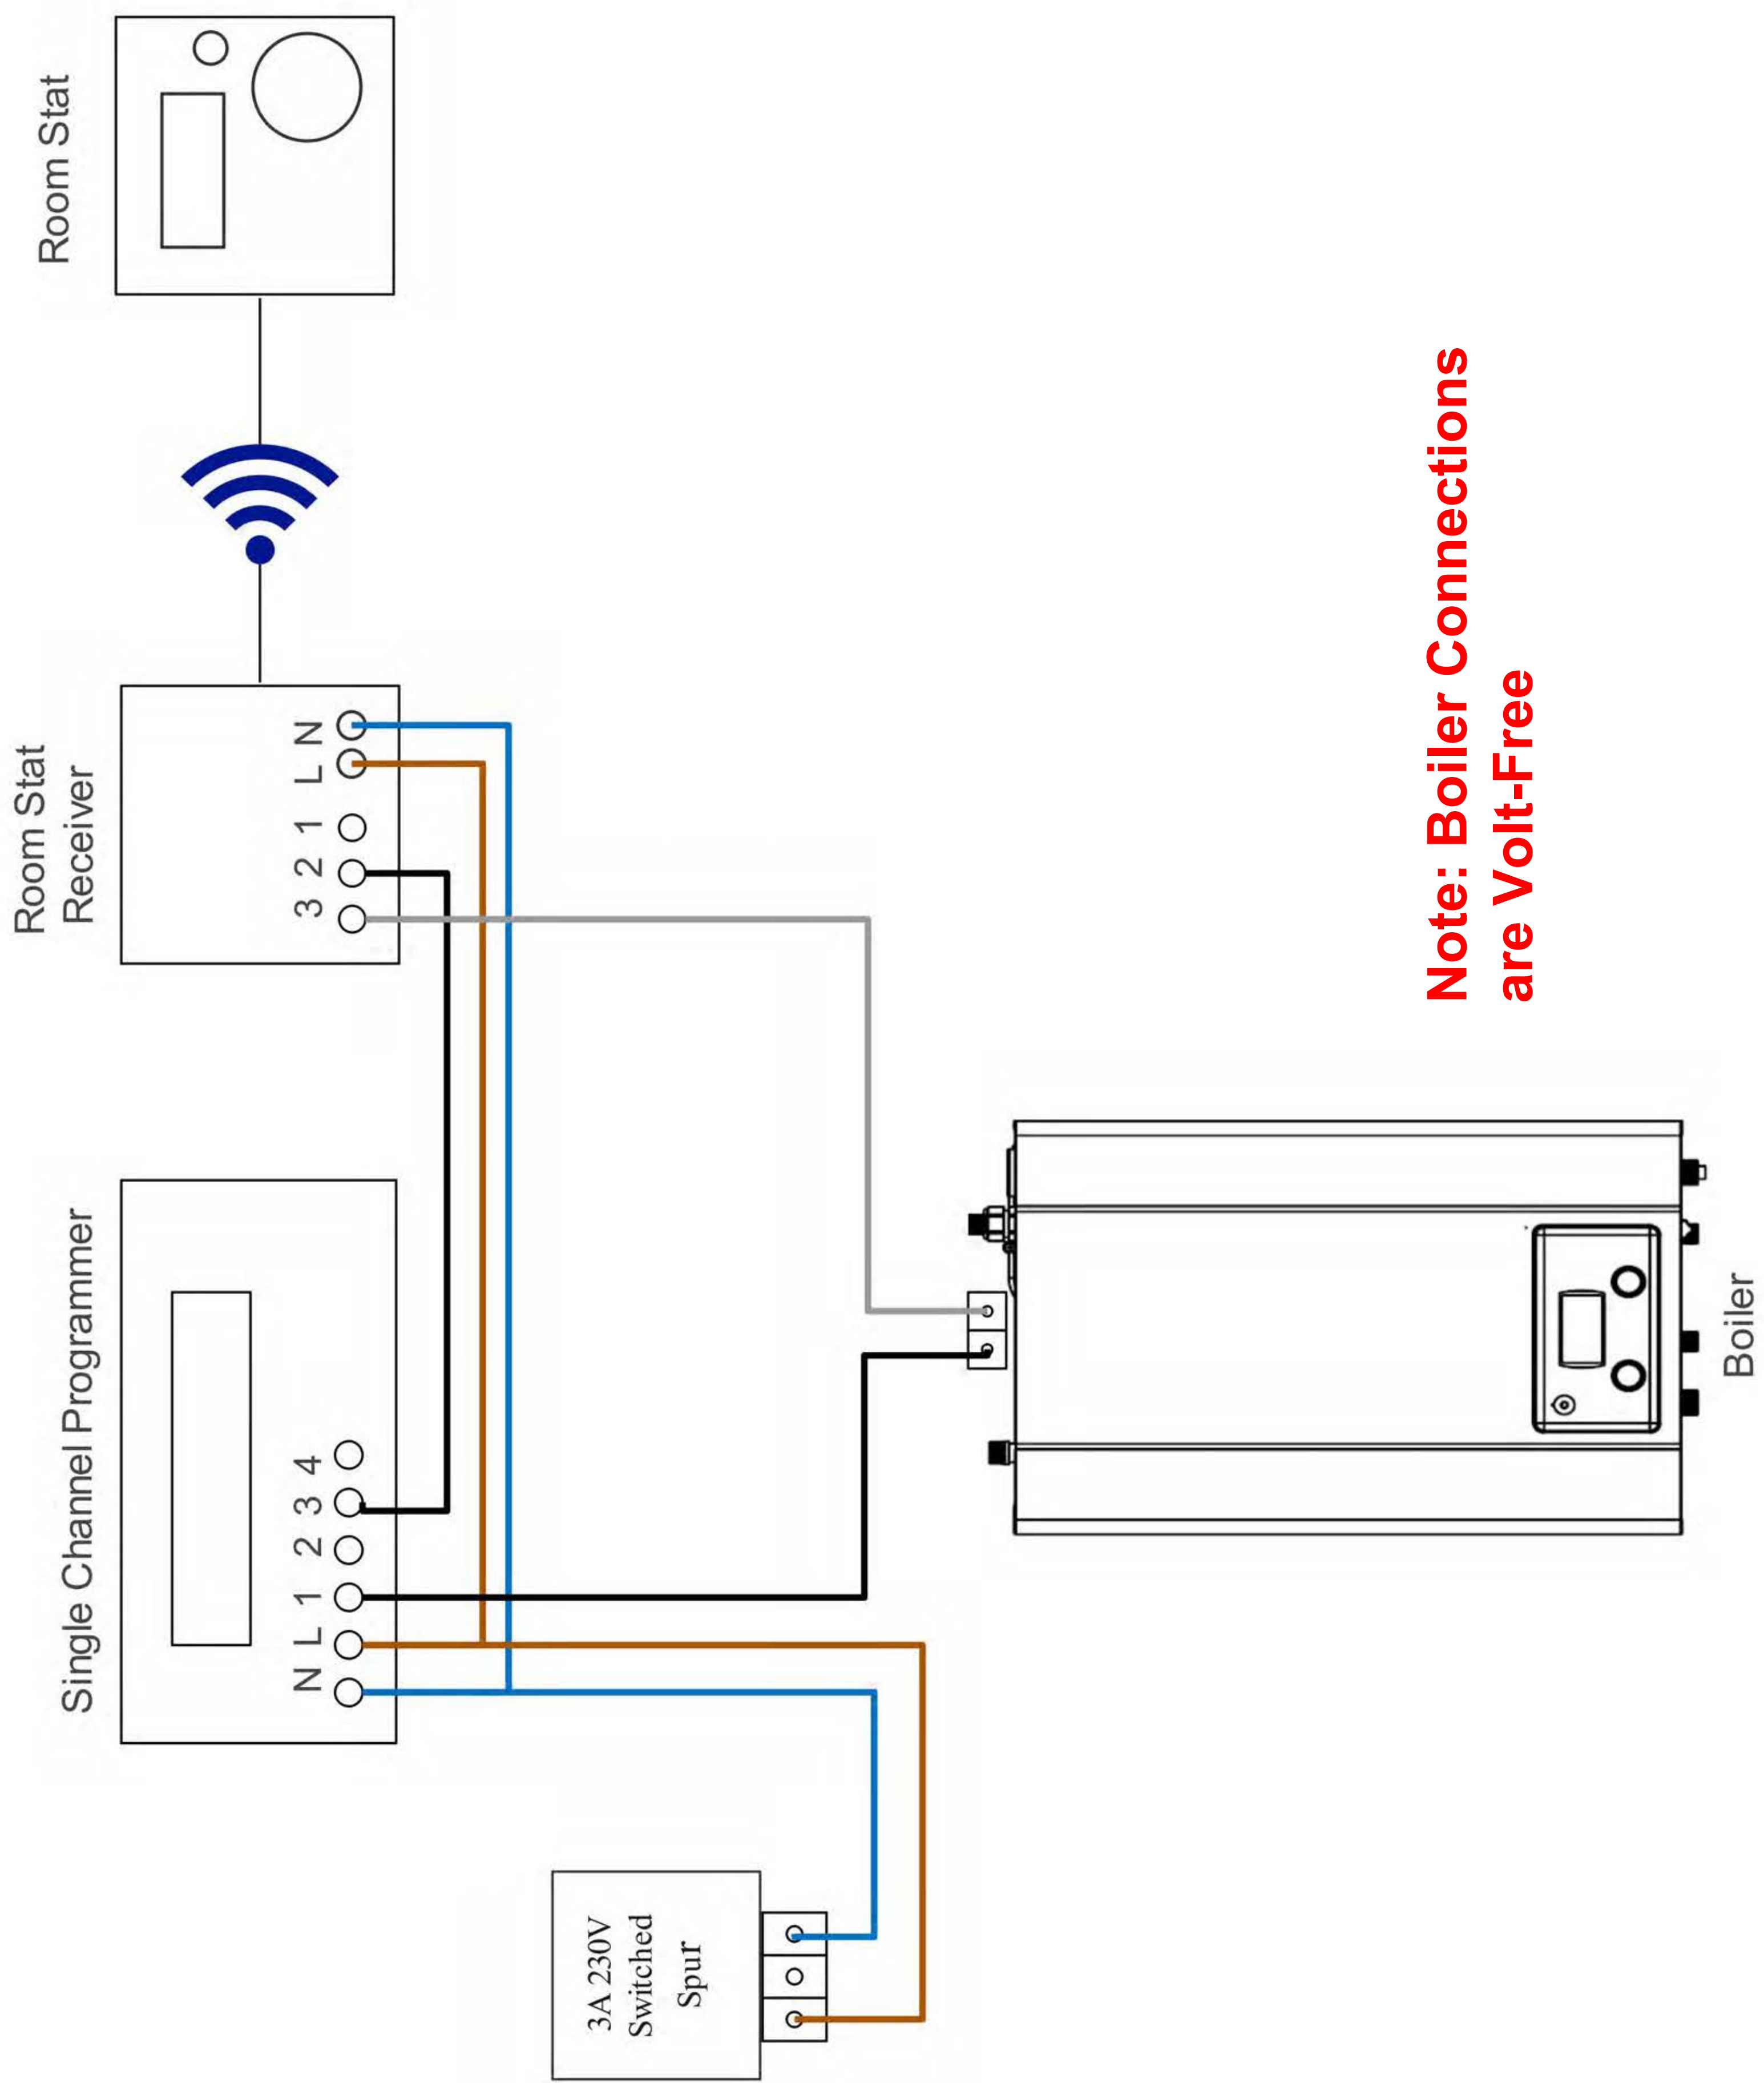

3.9.2 External Control Wiring With Shower Interrupter

The below diagram details how to wire a basic heating control circuit along with the EHC Shower Flow Sensor (ESFS15C).


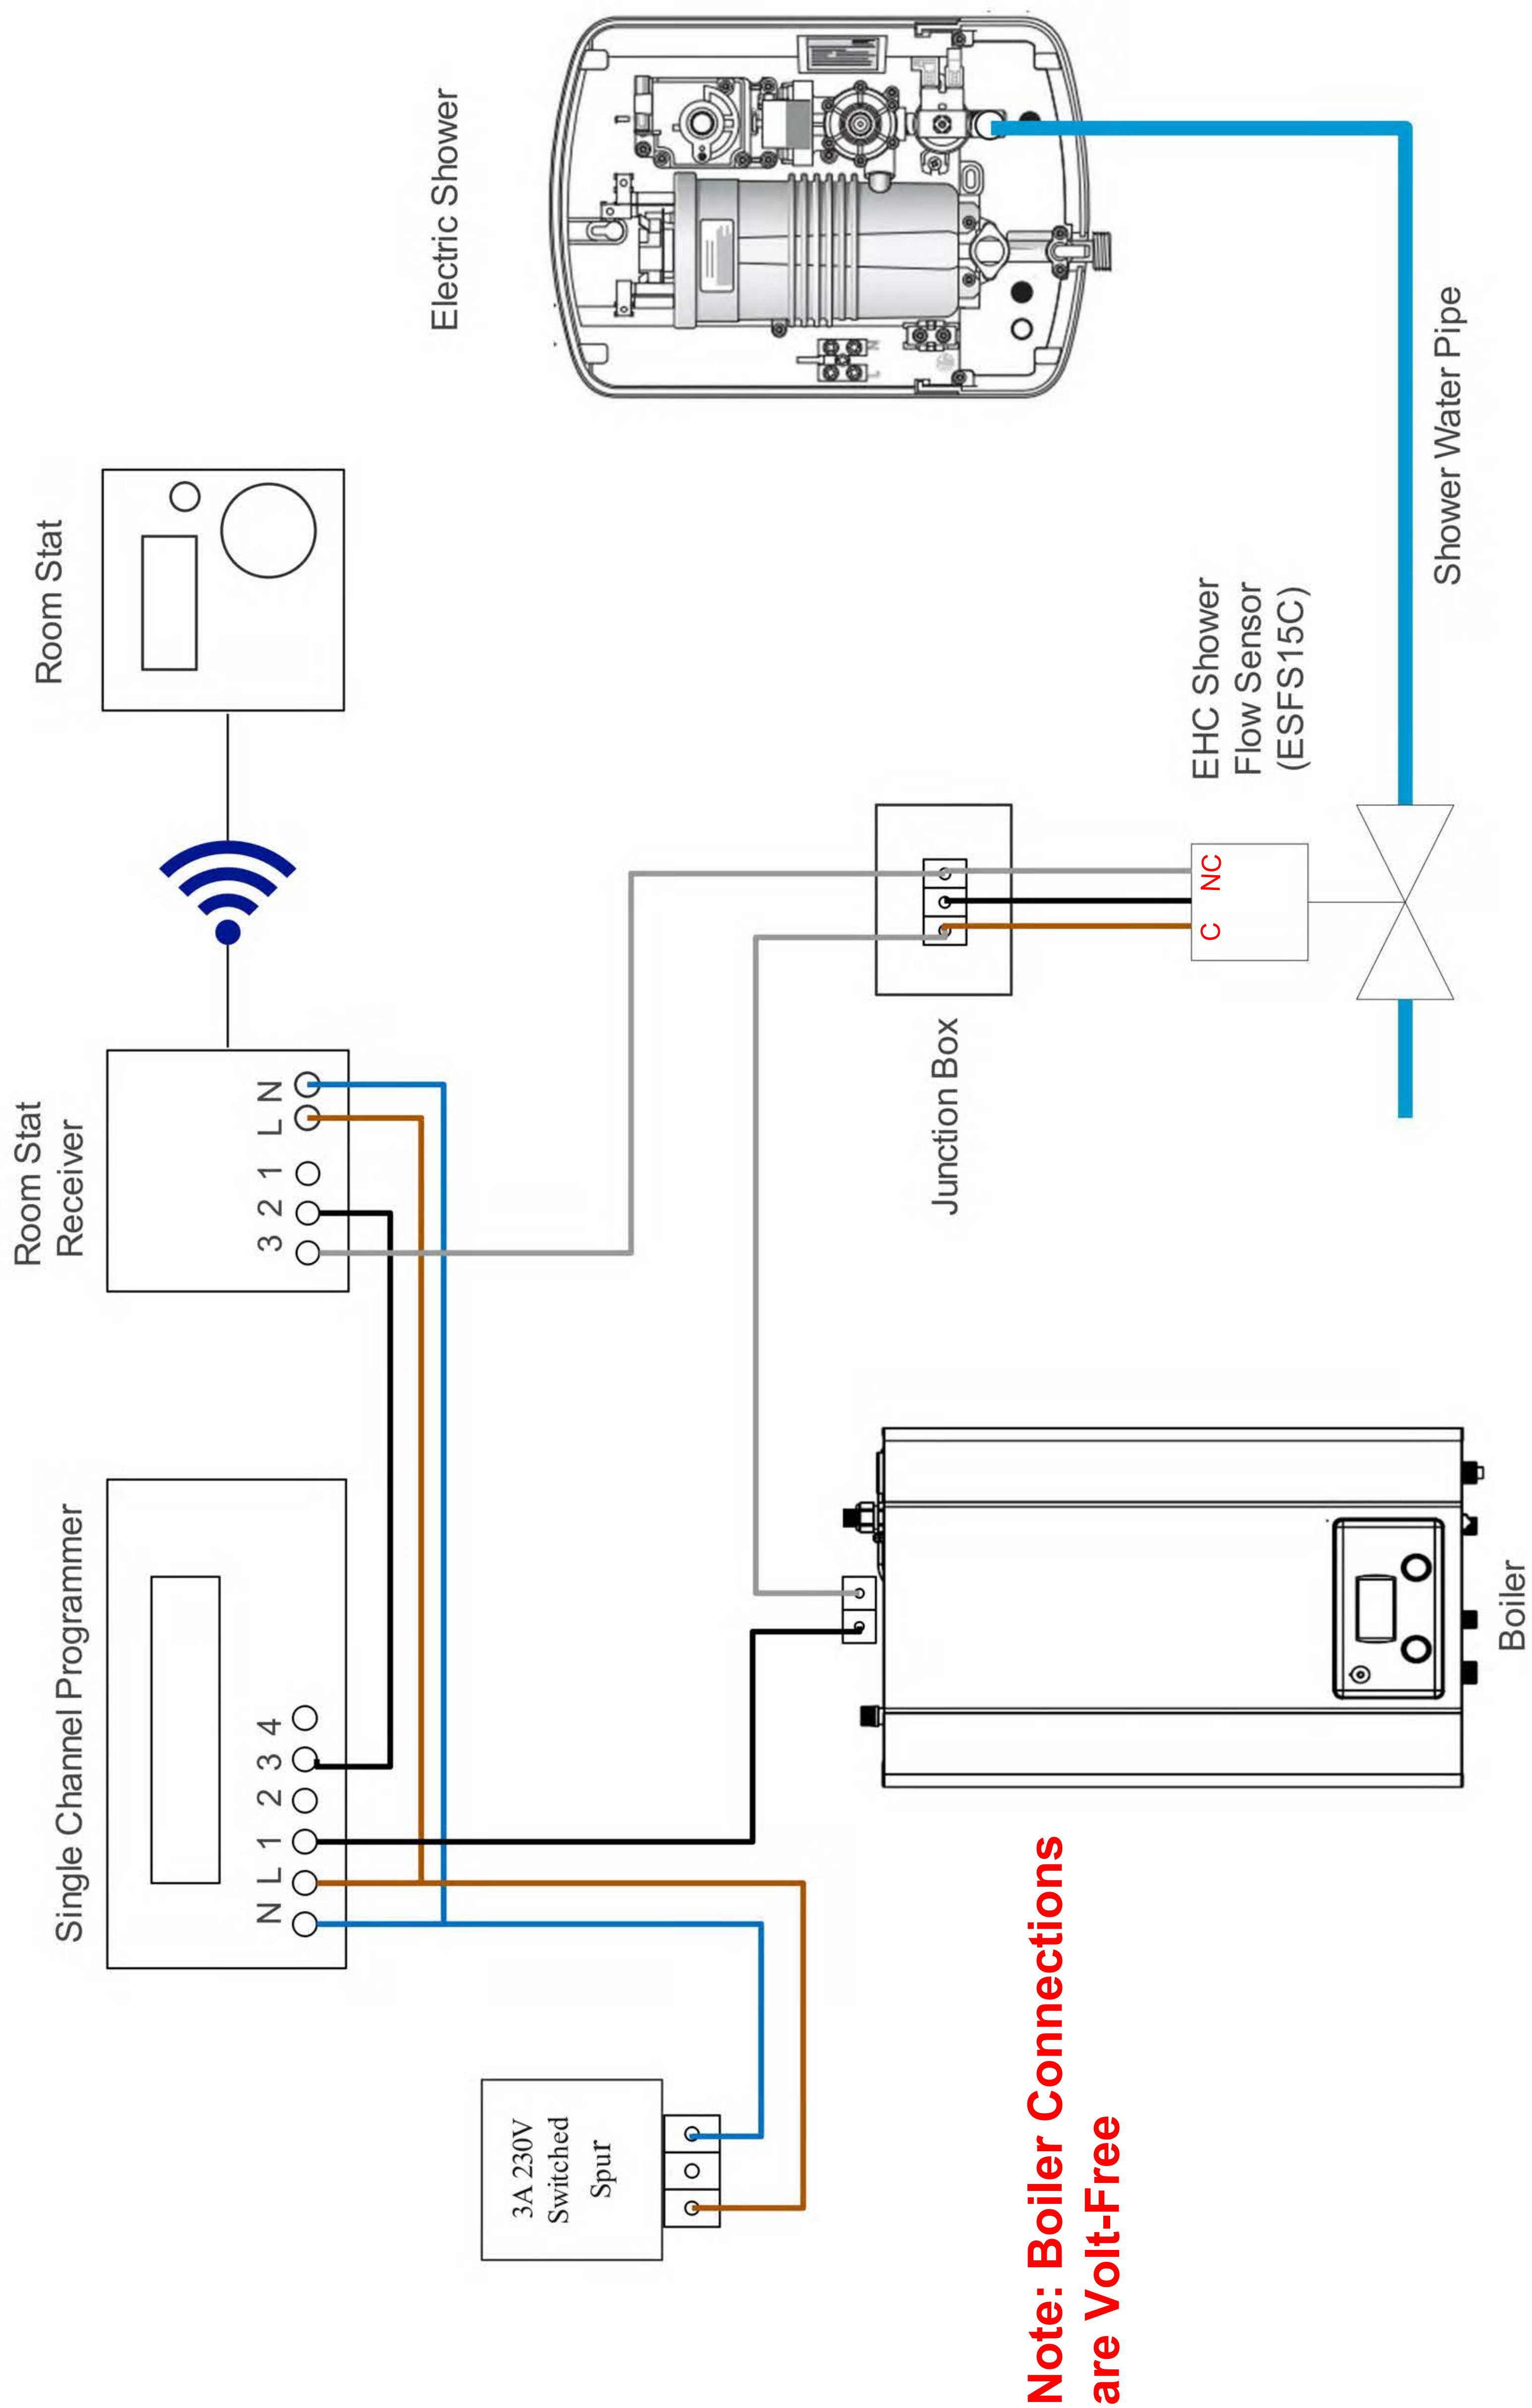


4. COMMISSIONING

4.1 FILLING WATER TO THE SYSTEM

- a) Make sure that the automatic air vent valve on the circulation pump is loose.
- b) Turn on the filling valve and fill water until the pressure reaches 1.5 bars on the LCD screen.
- c) Use the manual air vent on top of the boiler to extract the air trapped inside the heat exchanger. Close the manual air vent when bubble free water comes out of the drain hose.
- d) Vent the air inside each radiator until bubble free water comes out, using the air vents on the radiators.
- e) Check the water pressure on the LCD screen. If it decreased, open the filling valve to reach 1.5bars.
- f) Repeat steps c,d and e until there is no air left in the system and the 1.5 bar is shown on the LCD screen.
- g) Once the system has been visually inspected and confirmed to have no leaks a quality inhibitor should be added to the system and dosed correctly. EHC recommends Adey MC1 + inhibitor.

Manual Air Vent

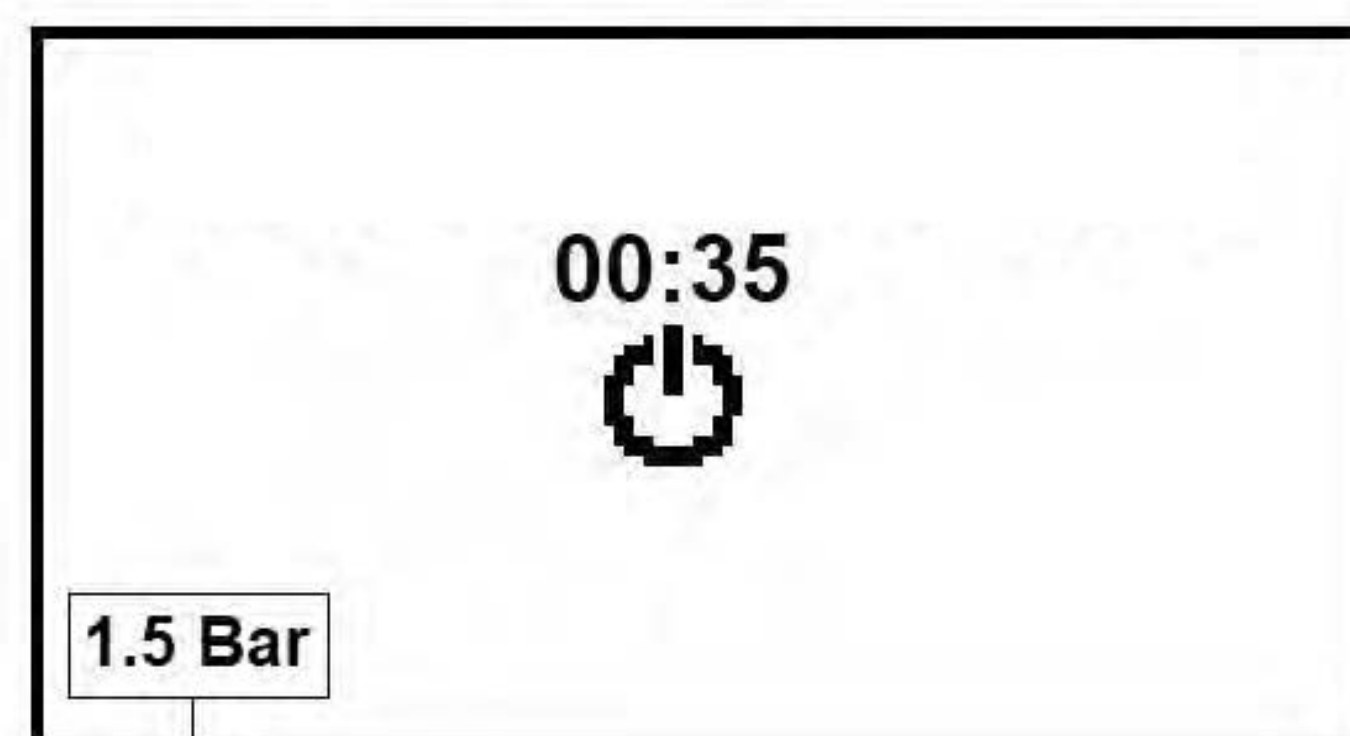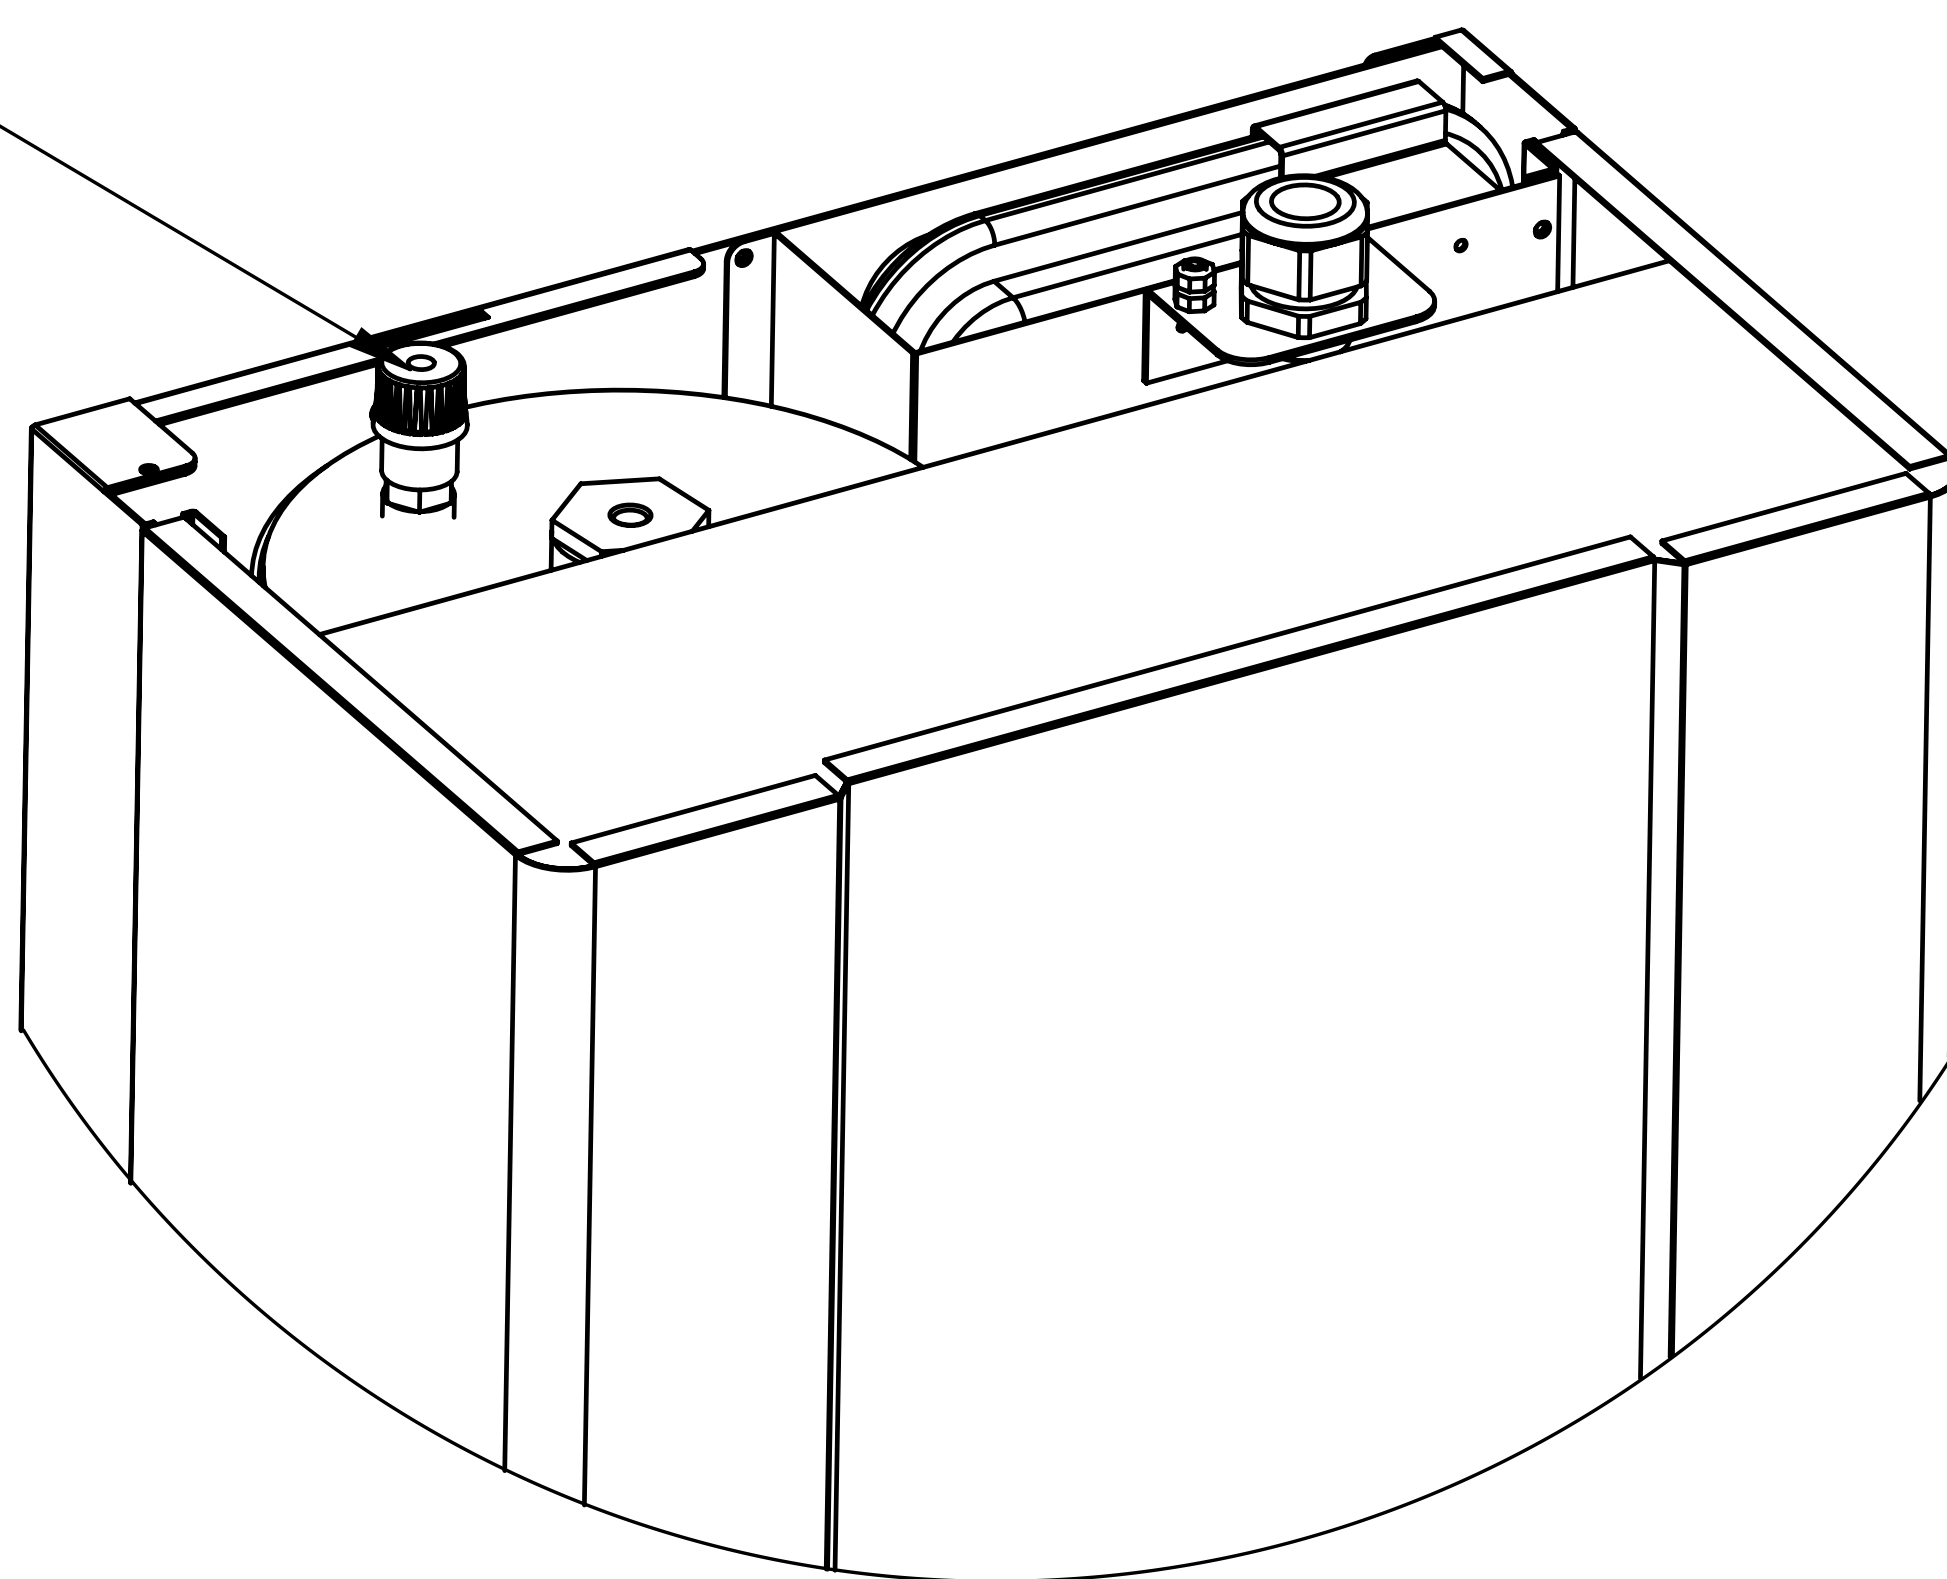

Water Pressure Indicator



CAUTION!

The installation pipework must be flushed in accordance to BS 7593. The installation pipework must be flushed to remove all particles inside the installation to prevent damage the boiler during operation. EHC recommends Adey MC3 cleaner for use on new systems, after application the system should be thoroughly flushed through with clean water to remove all traces of cleaner chemical. When connecting the boiler to an existing system the system should under go a full power flush prior to connecting the boiler to the primary circuit. Any failures and damages to the boiler caused by dirt in the primary circuit installation is out of manufacturer's warranty.

A Magnetic Filter Must Be Fitted To This Boiler, Failure To Protect The System Will Invalidate the Manufacturer's Warranty.

4.2 STARTING UP

First time operation of the boiler must be done by a Competent Installer in order to validate the guarantee of the boiler and to ensure the boiler runs efficiently and safely for many years.

The Competent Installer is responsible for completing the commissioning form located within this manual or electronically via the badge located on the front of the boiler.

The following steps will be taken to put the boiler into operation:

- a) Check that the main circuit breaker and RCD device switches are on.
- b) Check that the valves of the heating circuit and DHW installation are open.
- c) Make sure water is filled to the system as explained in the previous section and all air inside the system is vented correctly. Pressure shown on the LCD screen should be 1.5 bar.
- d) Press the on/off button and turn on the boiler. Adjust the central heating temperature with P1 knob. The adjusted temperature will flash on the LCD screen and then the instantaneous temperature values for central heating will be shown on the LCD screen during operation of the boiler. If the ambient temperature sensor is connected navigate to the Weather Compensation Menu to activate the feature and select the correct Coefficient Curve Value.
- e) Set the programmer to on and turn up the room thermostat, the boiler will start to operate according to the adjustments made on the control panel. Detailed explanation about making operation adjustments are given in section 5, user instructions.

4.2 STARTING UP

IMPORTANT!

Once the boiler is operational scan the Smart Tag on the front of the boiler with your Phone or Tablet via NFC or QR to Complete the Commissioning Records and register the Boiler Warranty.




The Boiler Smart Tag also provides the following support features for the User and Maintenance Engineer;

- > Boiler Commissioning
- > Warranty Registration
- > Service Log
- > Installation Manuals
- > Repair Videos
- > Spare Parts
- > Warranty Terms & Conditions
- > Extended Warranty

5. USER INSTRUCTIONS

5.1 CONTROL PANEL

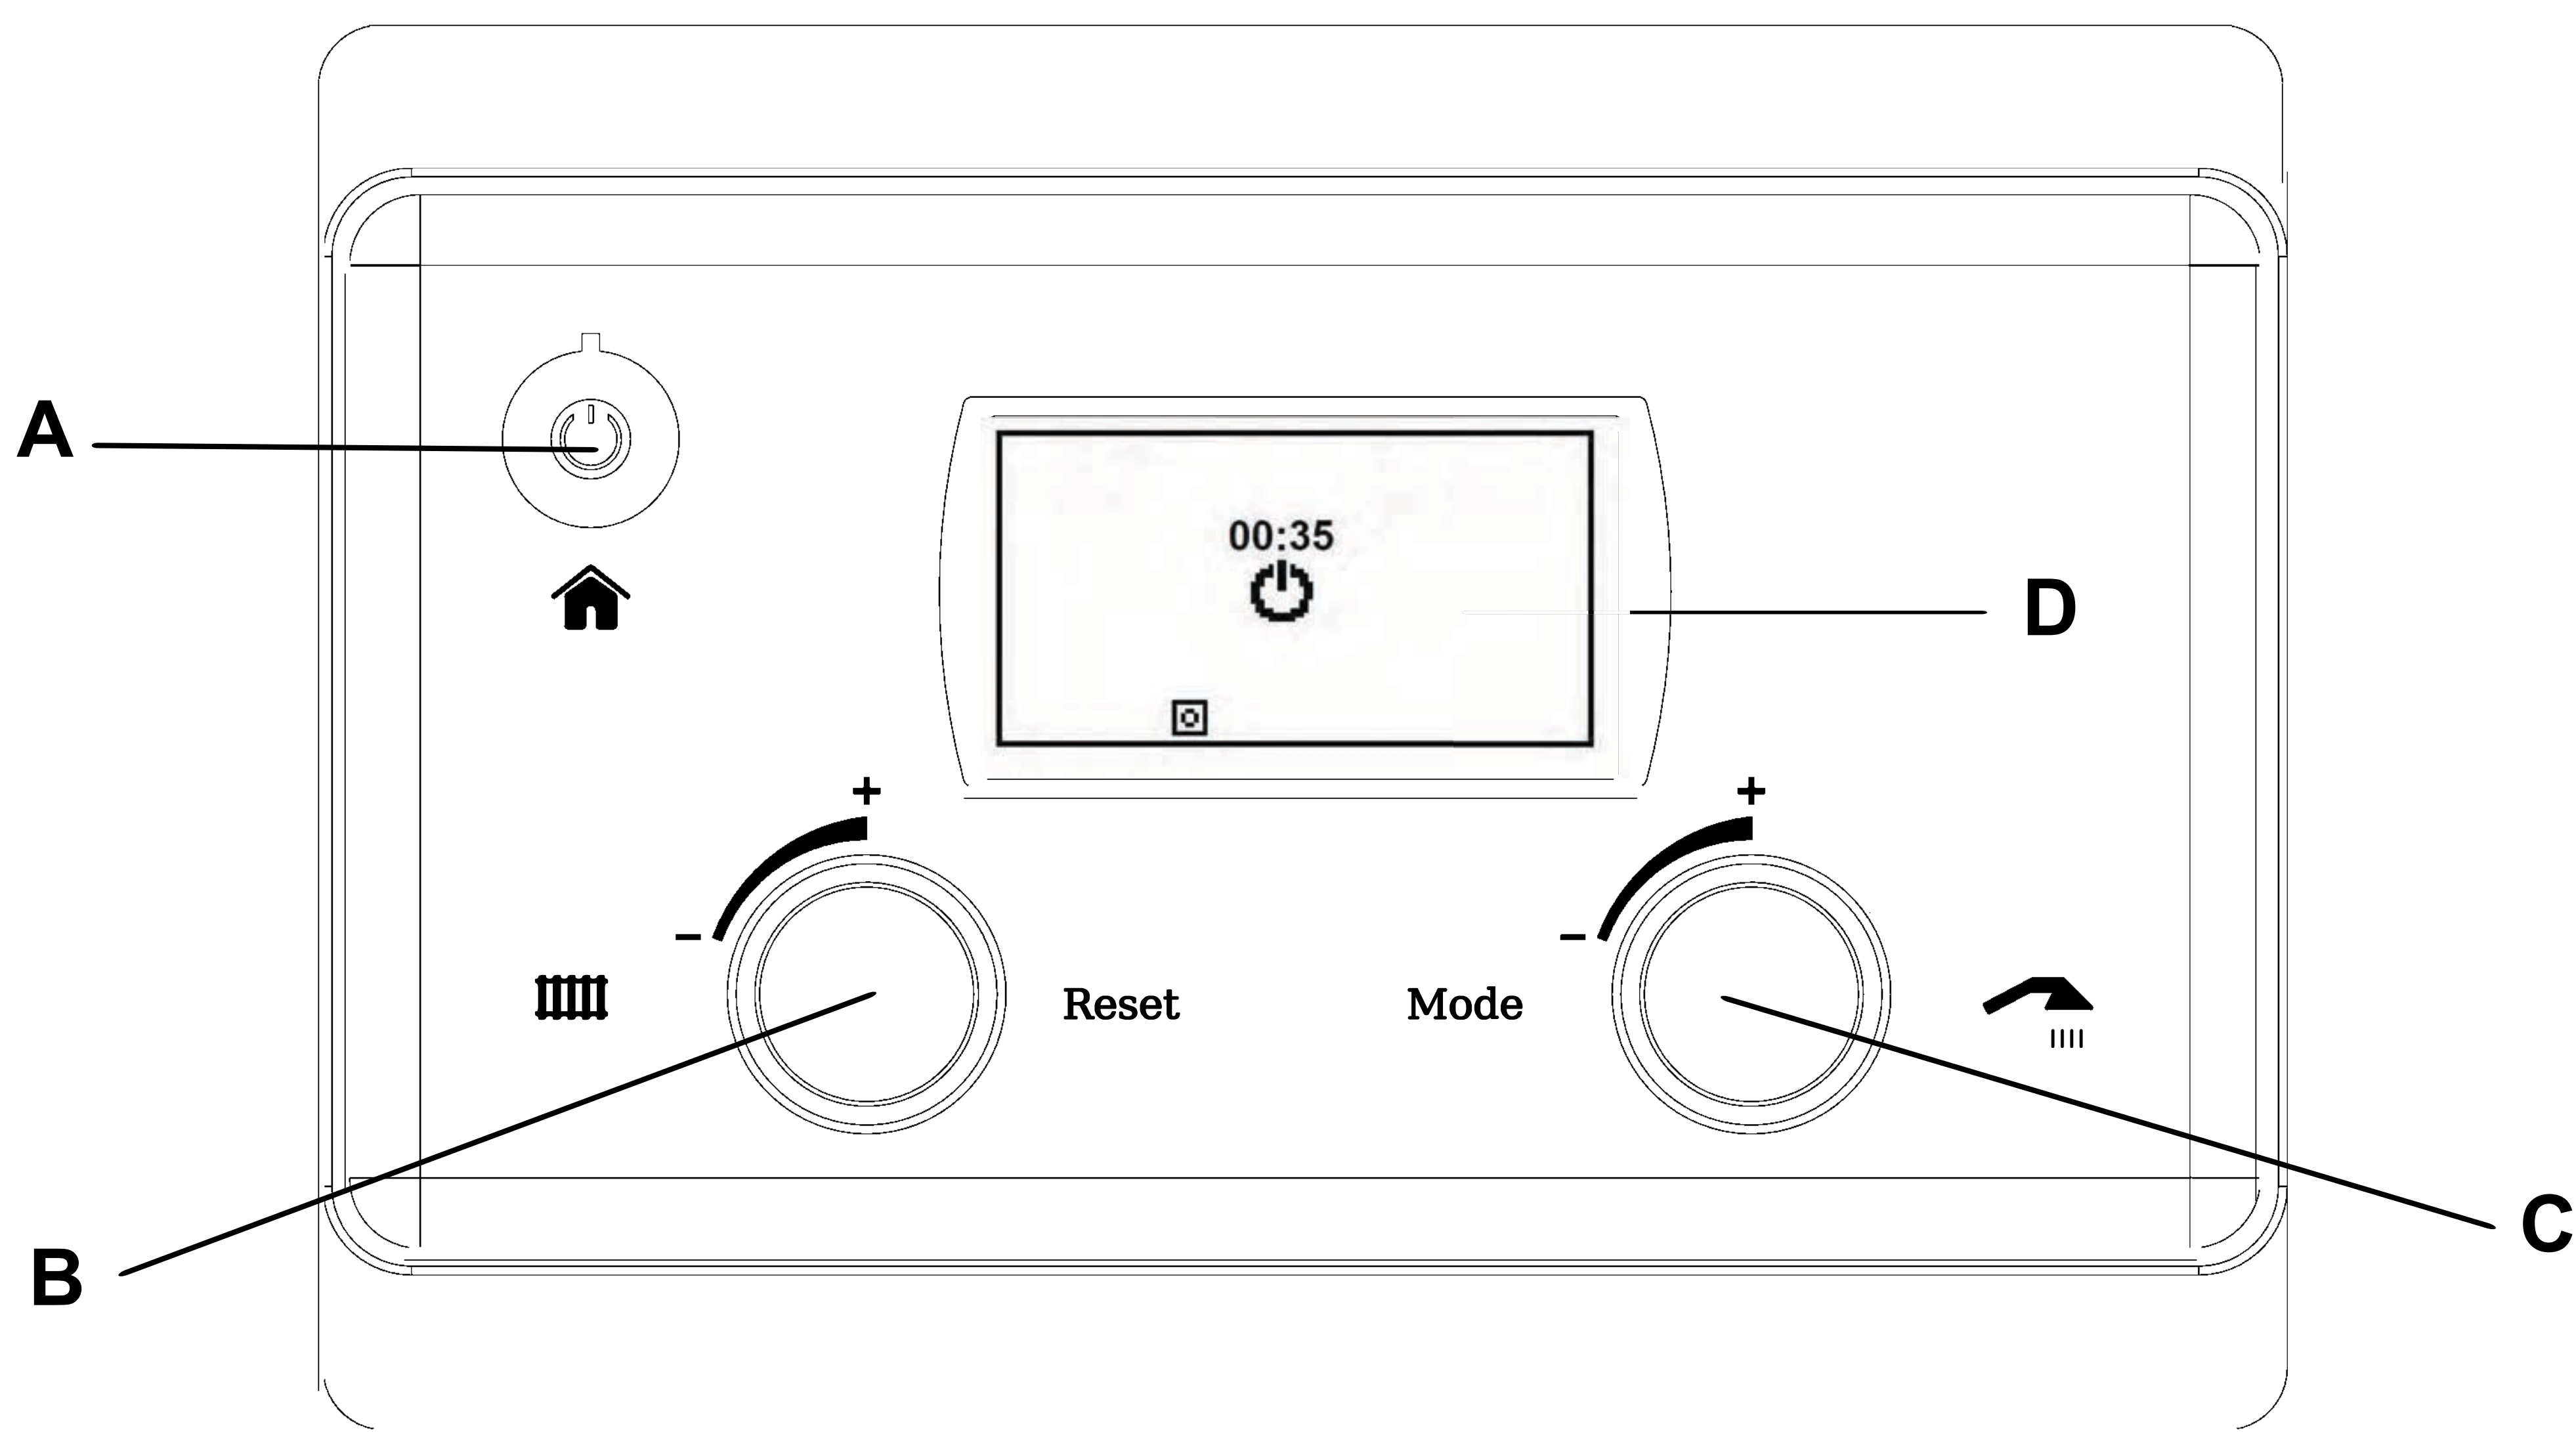

All functions required to run the boiler is done via two adjustment knobs and the on/off button on the control panel. All operation parameters and adjustments can be followed on the LCD screen. All failure reports are shown on the LCD screen with codes and explanations.

A. ON/OFF - HOME SCREEN BUTTON:

This is the on/off button for the boiler. Returns to the main screen whilst pressed inside a menu.

B. P1 KNOB :

On the operation screen, turn this knob to adjust the central heating water temperature between 30-80°C. Press on this knob to enter the main menu. You can turn this knob to scroll through the sub menus and press on the knob again to enter in the selected sub menu.


In case of a failure that requires a manual reset, pressing on P1 knob will perform the manual reset.

C.P2 KNOB:

P2 knob is used to change values when navigating the boilers menus and settings


D. LCD SCREEN

All operation parameters are shown with icons on the LCD screen. The definitions of the icons are explained below.

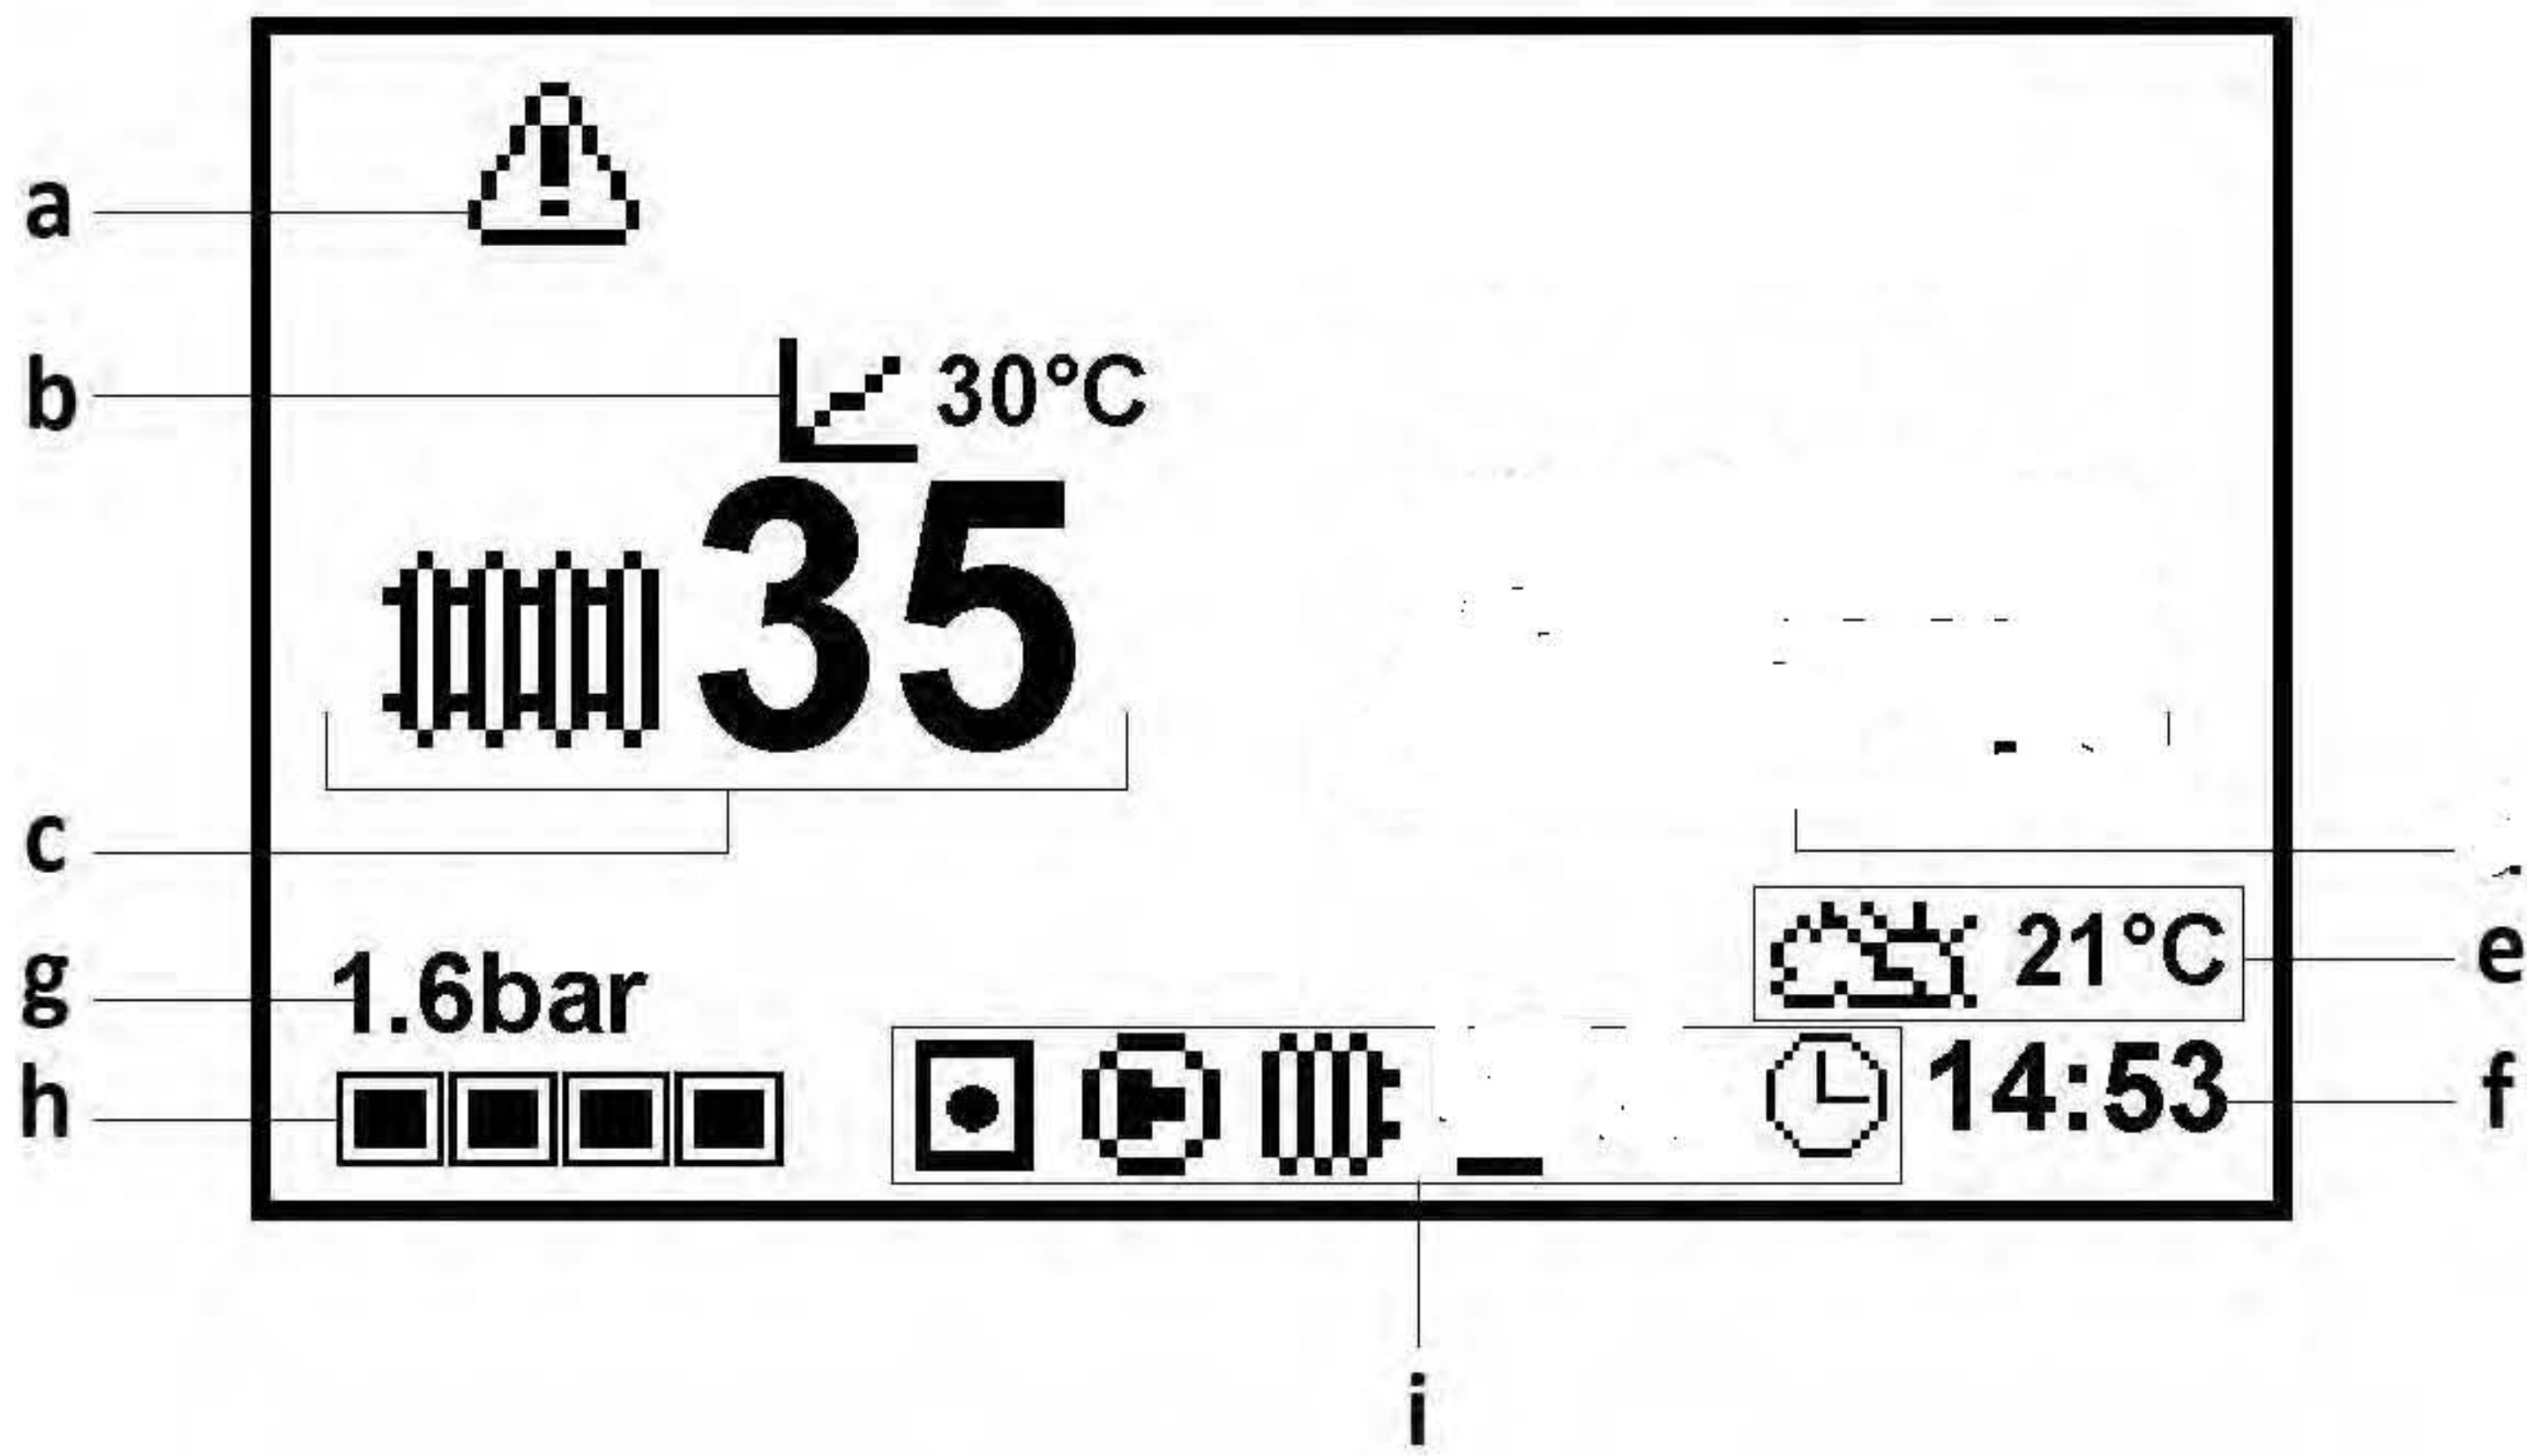

- a) **Error Icon:** Shows that there is an ongoing failure.
- b) **Outdoor Temperature Operation Curve:** Shows the automatic operation curve when the ambient temperature sensor is connected. Detailed information regarding automatic operation according to outdoor temperature is given in section 5.2.3.4 of this manual.
- c) **Central Heating Temperature:** Central heating temperature adjusted with P1 knob is shown here. Adjusted value will flash for 5 seconds and save. Central heating circuit instantaneous temperature value is shown on screen during operation. When the boiler is operating in central heating mode,  icon will be flashing on the screen.
- d) .
- e) **Outdoor Temperature Icon:** When the Outdoor temperature sensor is connected to the boiler, the measured outside weather temperature is shown in this section.. If the user disables automatic operation with ambient temperature function, only  icon is displayed, reminding the user the sensor is still connected.
- f) **Clock:** Time set by the user is shown on the LCD screen.
- g) **Water Pressure Indicator:** Closed circuit water pressure is shown in this section.
- h) **Modulation Indicator:** Shows which elements are currently in operation.

i) Operation Indicators:

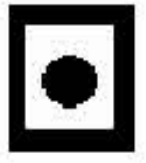

- **Room Thermostat Icon:** Where a room thermostat is connected (optional equipment) this icon indicates that the room reached the adjusted temperature and boiler operation is stopped by the room thermostat.

NOTE: In case of a room thermostat failure, this icon will be shown on the LCD screen constantly and the boiler will not start. Contact a competent engineer for a repair of the room thermostat or for checking the connections.




- **Pump Icon:** Indicates that the pump is working.



- **Central Heating Icon:** Shows that the boiler is operating in central heating mode.

5.2 OPERATION INSTRUCTIONS

5.2.1 TURNING ON THE BOILER

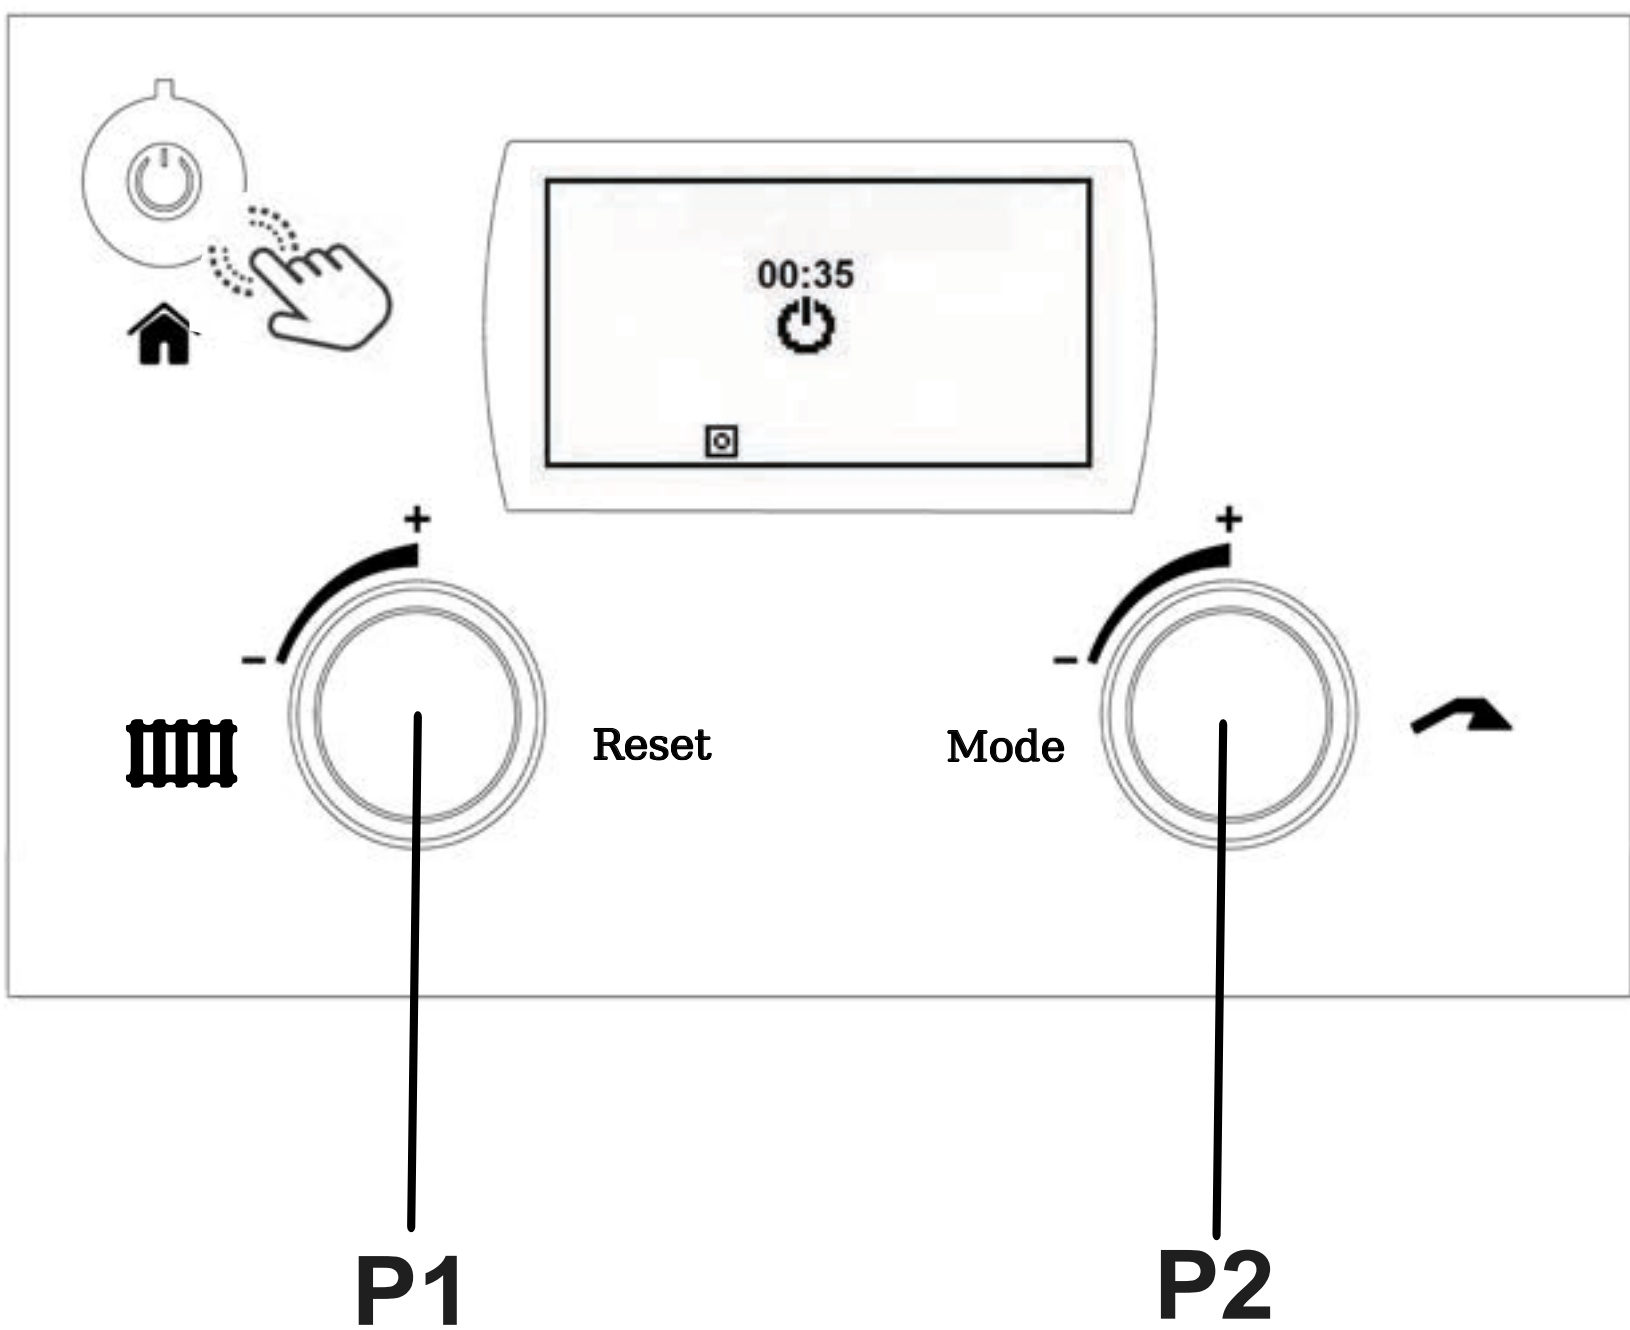

Press the ON/OFF (home) button to turn on the boiler. Adjust the central heating and domestic hot water temperatures shown on the LCD screen to your desired values and the boiler will operate according to your adjustments.

Turn the P1knob to adjust the central heating temperature. The adjusted value will flash on the screen for 5 seconds and save. The screen will show the central heating water temperature during operation.

To turn off the boiler, press the on/off button whilst on the operation screen.  icon will appear on the screen and boiler will be in stand-by mode. In stand-by mode, frost protection, pump motor anti-jamming functions are active.

NOTE: For the protection systems such as frost protection, pump and anti -jamming functions to operate properly, The electrical supply should be on and all the valves on the installation should be open. Any damage or breakdown occurring while the electricity is off or if the valves are kept closed is not covered by warranty.


! CAUTION! Frost damage which may occur in cases where the electricity is off or the installation valves are kept closed is not coevered by warranty.

5.2.2 BOILER OPERATION MODE SELECTION:

Press on the P1 knob to enter the main menu. Turn the P1 knob to scroll through the sub menus inside the main menu. Select the summer-winter mode tab by pressing P1 knob on it.



Inside this menu, you can select the desired operation mode by turning P2 knob. When you complete your selection, you can press on P1 to return to the main menu or press the home (on/off) button to return to operation screen.

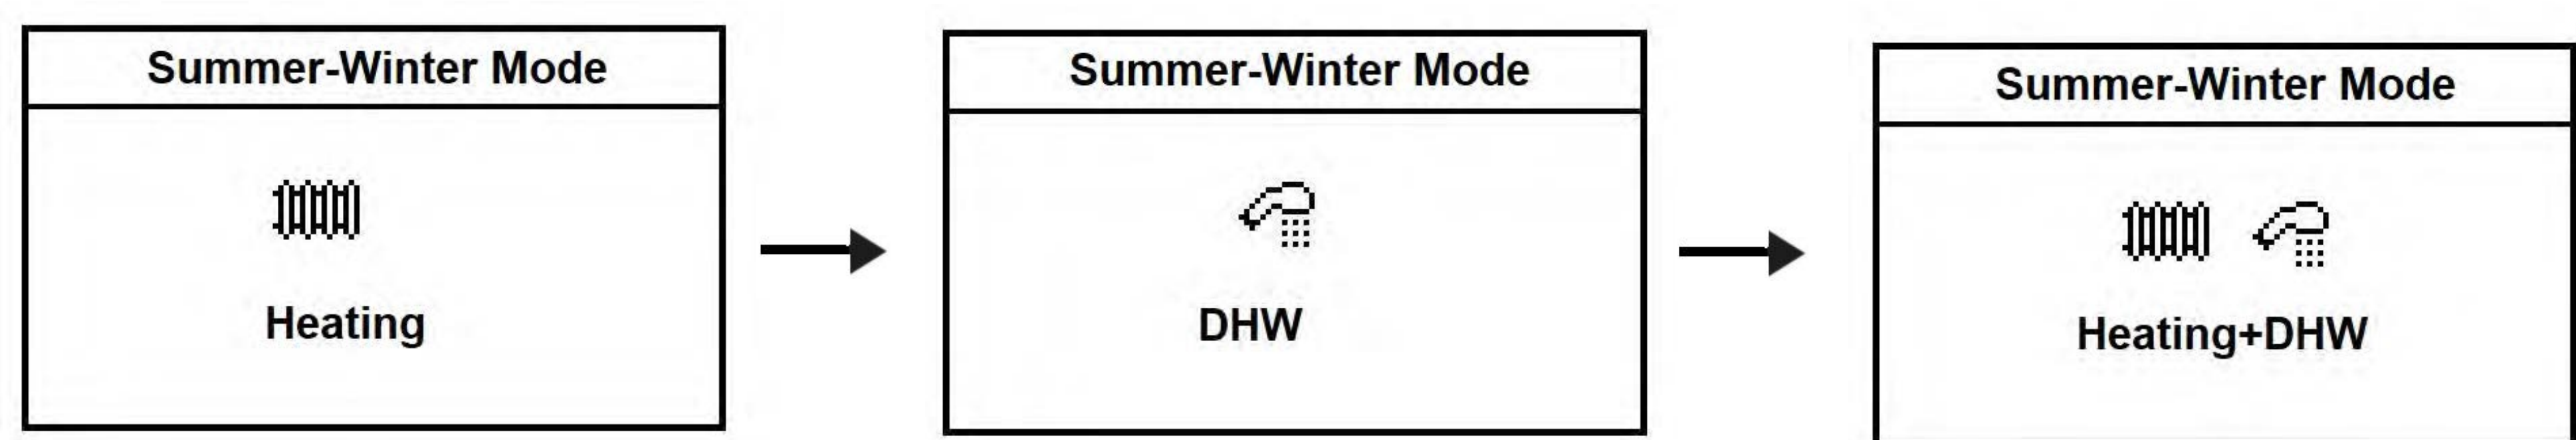

Boiler only works in CH mode to heat the radiators or the underfloor heating installation.

Summer mode only delivers domestic hot water for Taps and showers. Space heating is disabled.


Standard operation mode of the boiler. Supplies hot water both for space heating (CH) and DHW.

∞ While the boiler is in operation screen you can switch between operation modes by pressing on and holding the P2 knob for 3 seconds as a shortcut.

NOTE: In Heating+DHW mode, the DHW supply is prioritised.

5.2.3 SYSTEM SETTINGS:


Press the P1 knob to enter to main menu. Scroll to system settings tab by turning P1 and press P1 to enter into system settings menu. Below shown sub menus are present in system settings menu.

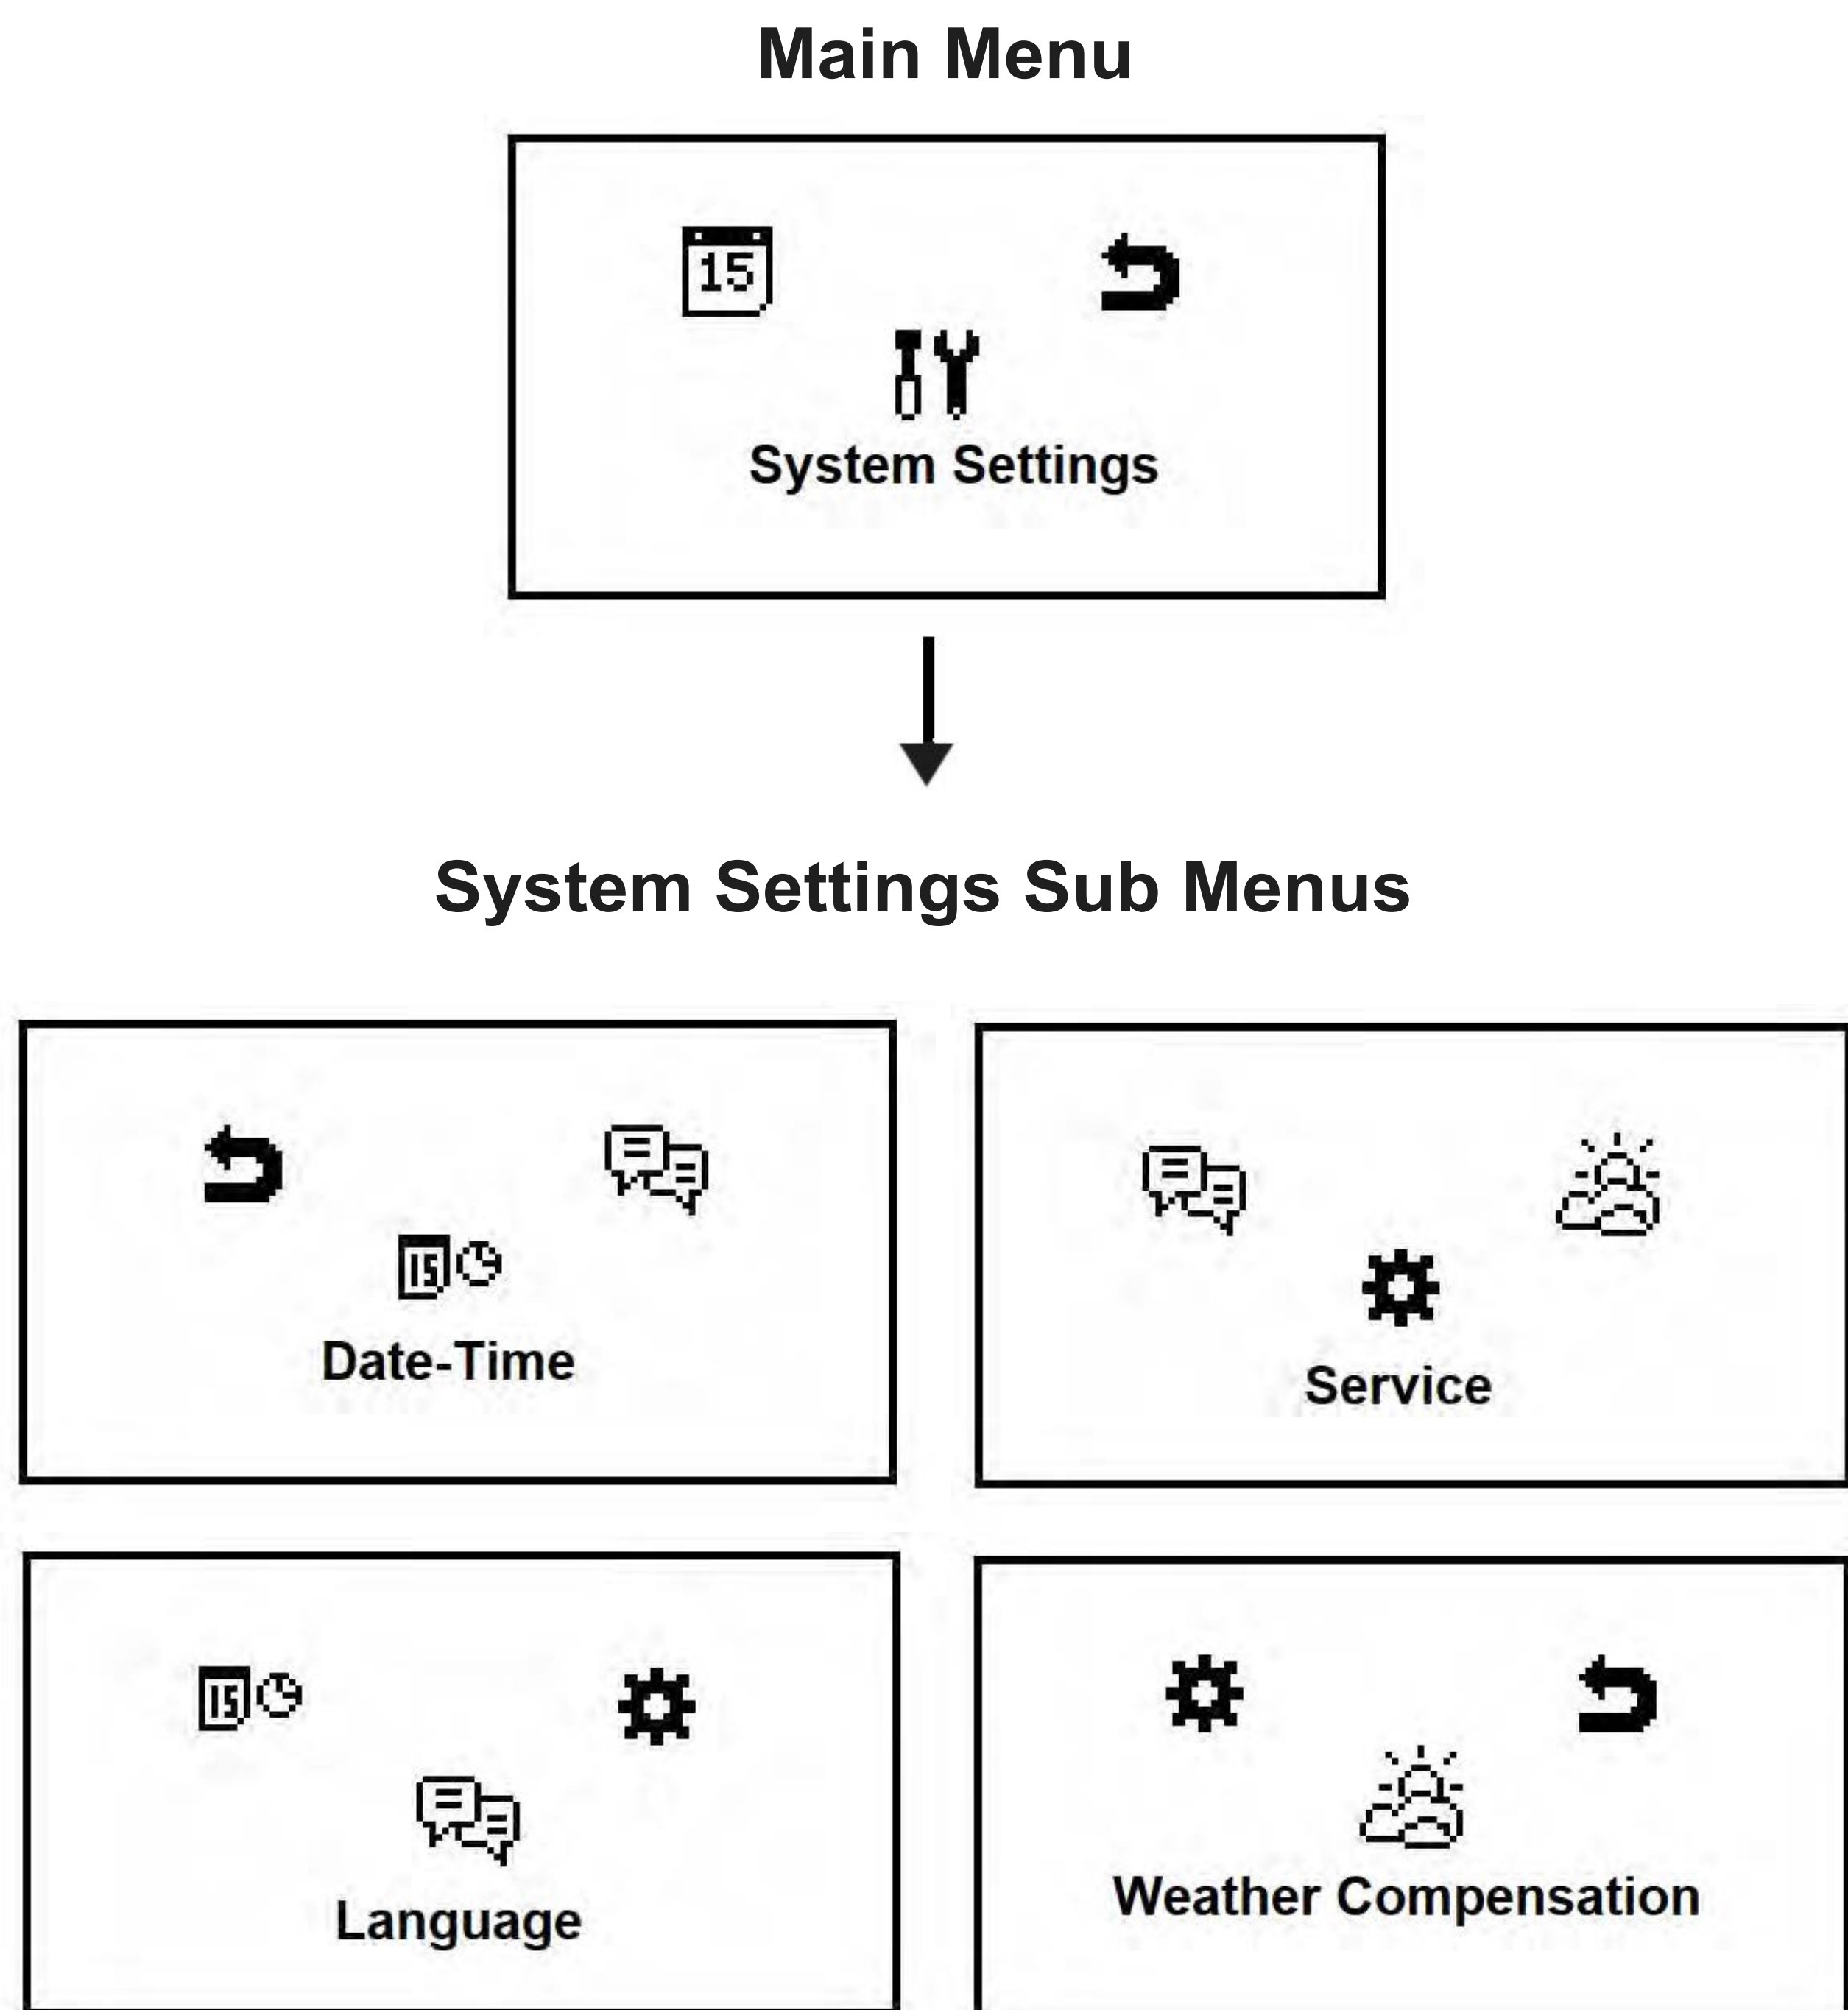

5.2.3.1 Date - Time Setting


Select the Date -Time setting menu with P1 knob. Turn P1 to scroll through units, turn P2 knob to adjust the desired values for selected units. When the adjustment is complete scroll to back icon and press P1 to return to system settings menu.

CAUTION! Date-Time setting must be made accurately in order to be able to use the weekly timer function. If the adjusted date and time setting is incorrect, the boiler will not operate in week timer mode correctly.

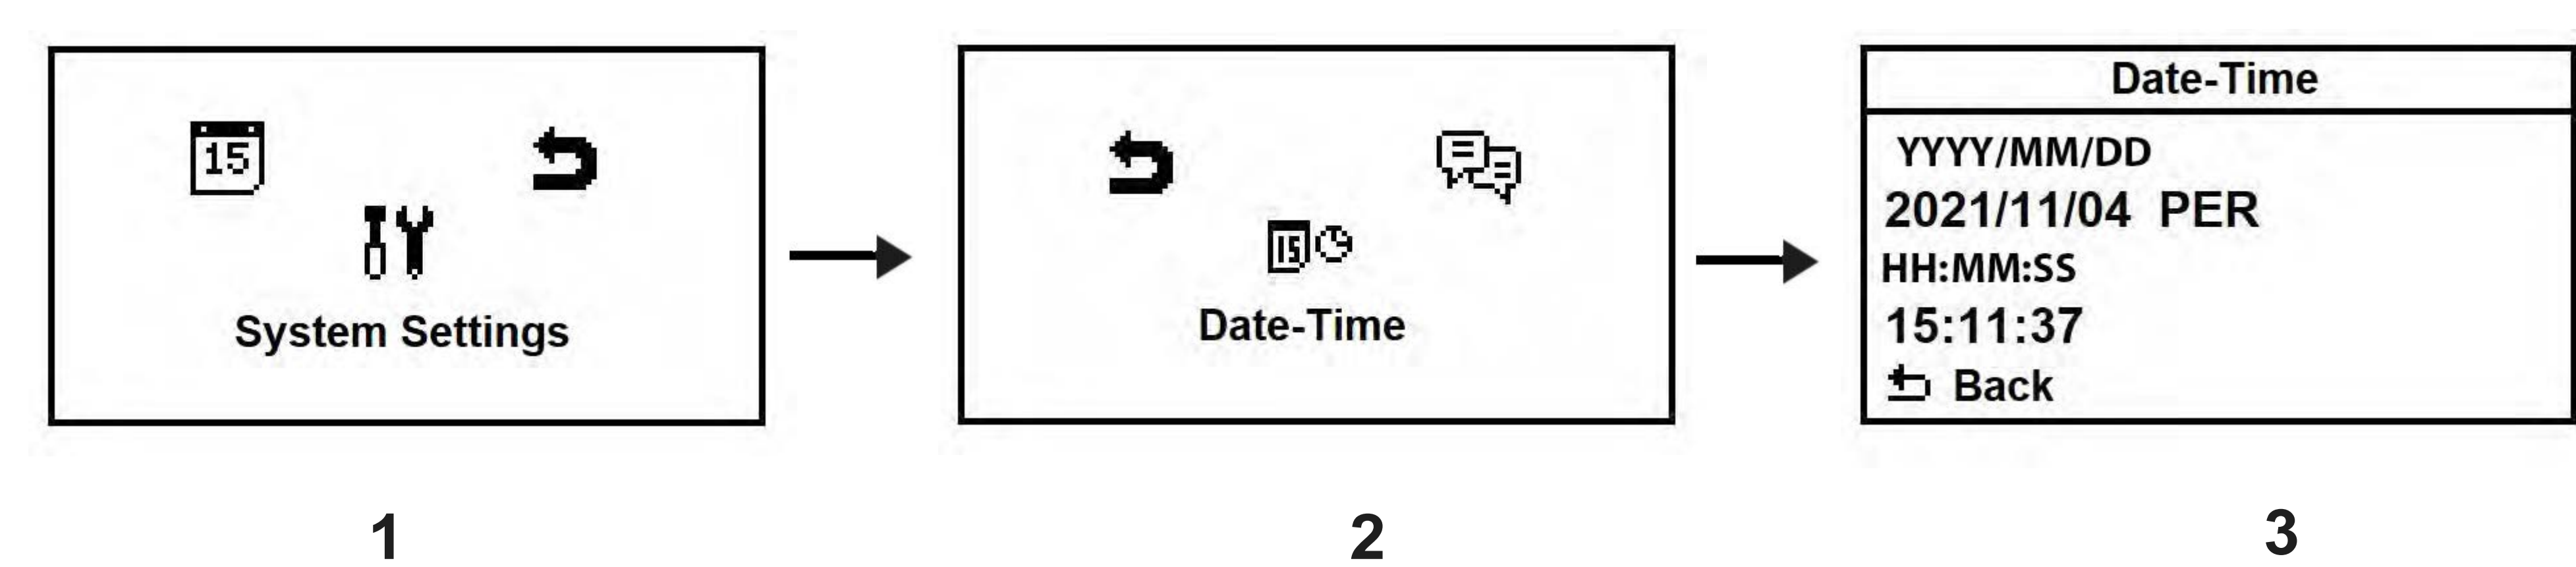

5.2.3.2 Language Selection

You can choose the LCD screen text language in language selection tab inside the system settings menu.

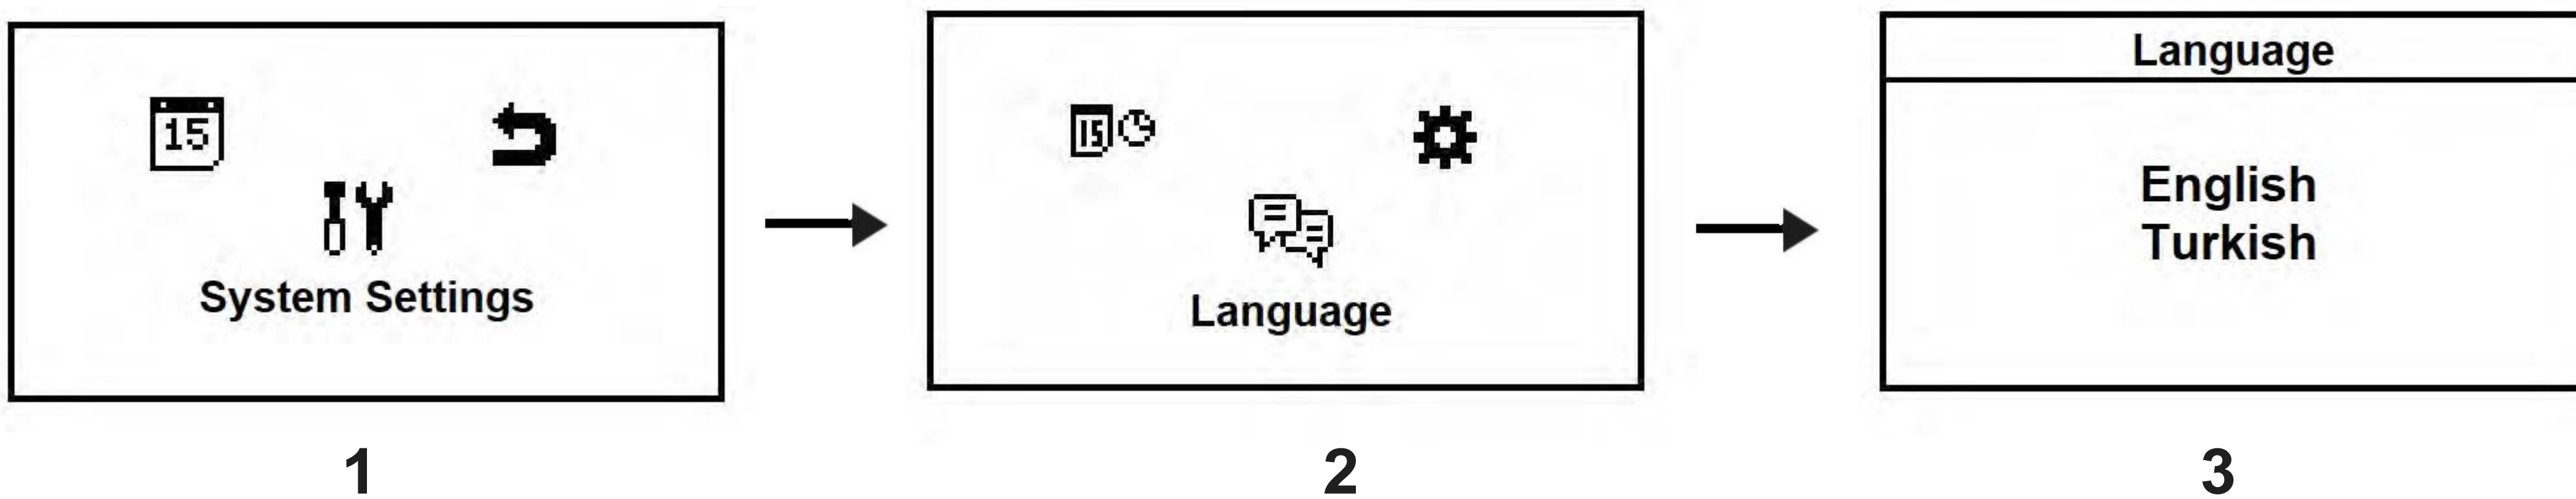


5.2.3.3 WEEKLY TIMER SCHEDULE

The Astro boiler's weekly schedule function enables you to set automatic operation time intervals for each day of the week directly from the boiler control panel.

Press P1 knob to enter the main menu and scroll to the Week Timer menu and select by pressing P1. Inside the weekly timer menu, there is a schedule which can be set separately for each day of the week. When the selection cursor is on the DAY tab, you can choose the day you want to make a setting for by turning the P2 knob. Once you get to the desired day, press P1 to activate the schedule for that day. Active box will be filled.

Turn the P1 knob to scroll the cursor though the schedule. Mark the time "On" intervals by pressing on P1. Your boiler will operate automatically in the marked time intervals for that day. Once you finish setting for that day, use P1 knob to scroll back to the DAY tab and choose the other day you want to set the schedule by turning P2. Press P1 to activate the schedule for that day and adjust the operation time intervals as instructed.



Once you finish all the adjustments, move the cursor to back tab and press P1 to return to the main menu. Your adjustments will be saved.

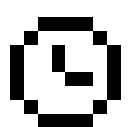When your boiler is set to operate automatically with weekly schedule function,  icon is shown on the LCD screen on the days selected within the weekly schedule.

During automatic operation of the weekly schedule, the boiler will operate at the set temperature values on the control panel. The schedule will instruct the boiler to turn and off according to the settings.

CAUTION! : In weekly schedule function, when the active box is filled for a day, the boiler will only operate in the adjusted time intervals for that day.


If you activate the schedule, tick the active box but do not make any operation interval markings, the boiler will not work for that day. Make sure to make the time interval settings accurately or deactivate the weekly schedule feature.

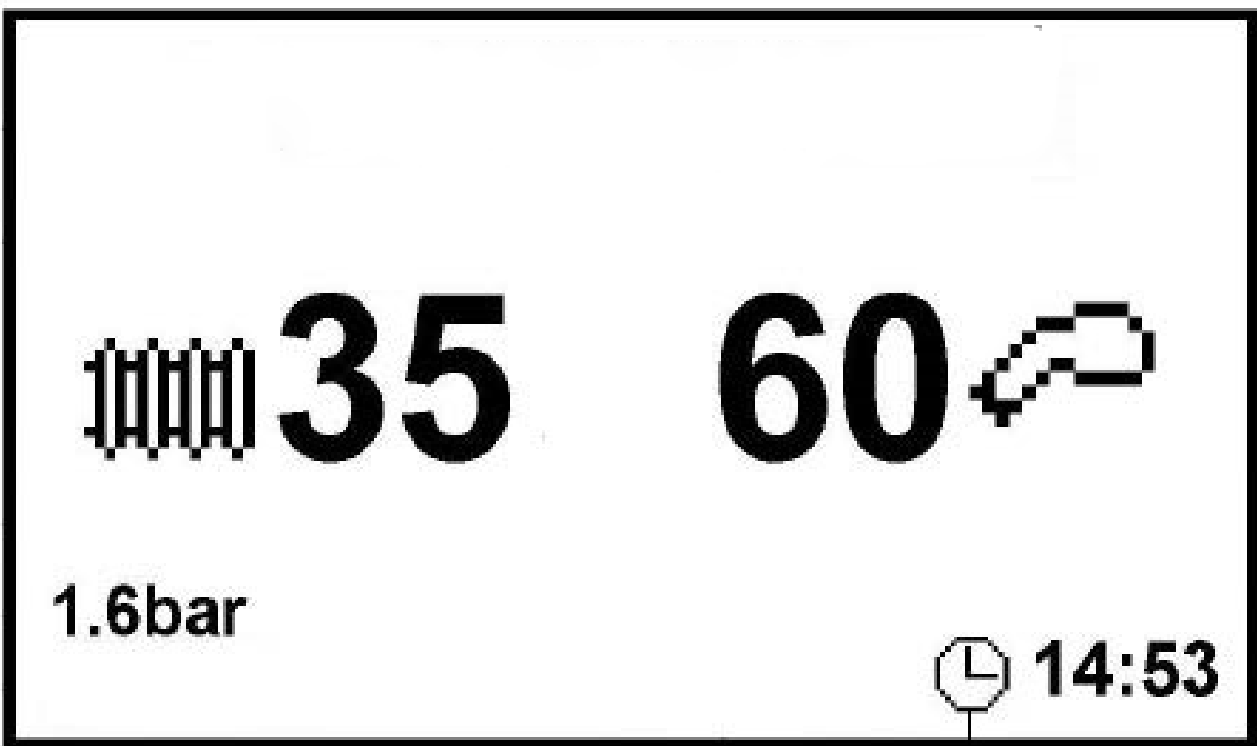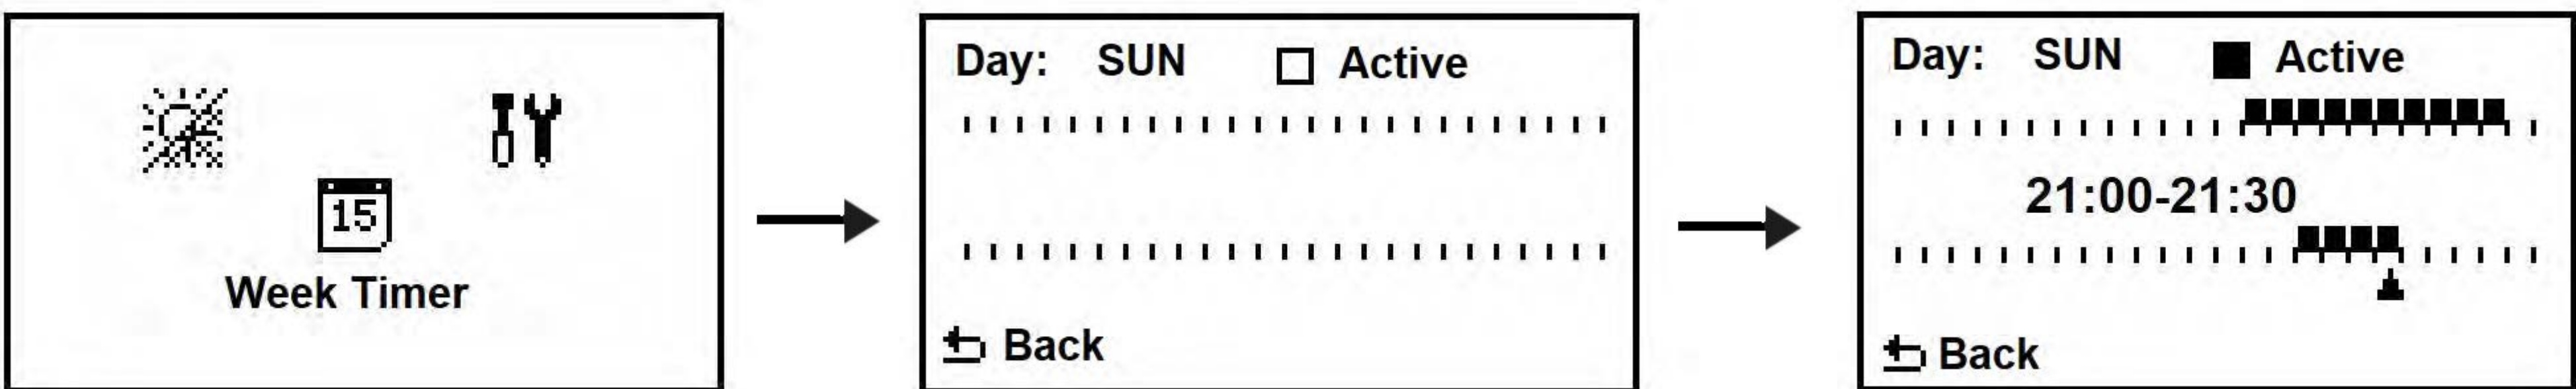


Weekly Schedule active

5.2.4 Weather Compensation


The Voltius boiler has an automatic operation feature with weather compensation when an optional ambient temperature sensor (**ASP0073**) is connected. When this sensor is installed to your boiler by a Competent Installer, the outdoor temperature icon, outdoor temperature value and weather compensation coefficient curve icon will be shown on the LCD screen.

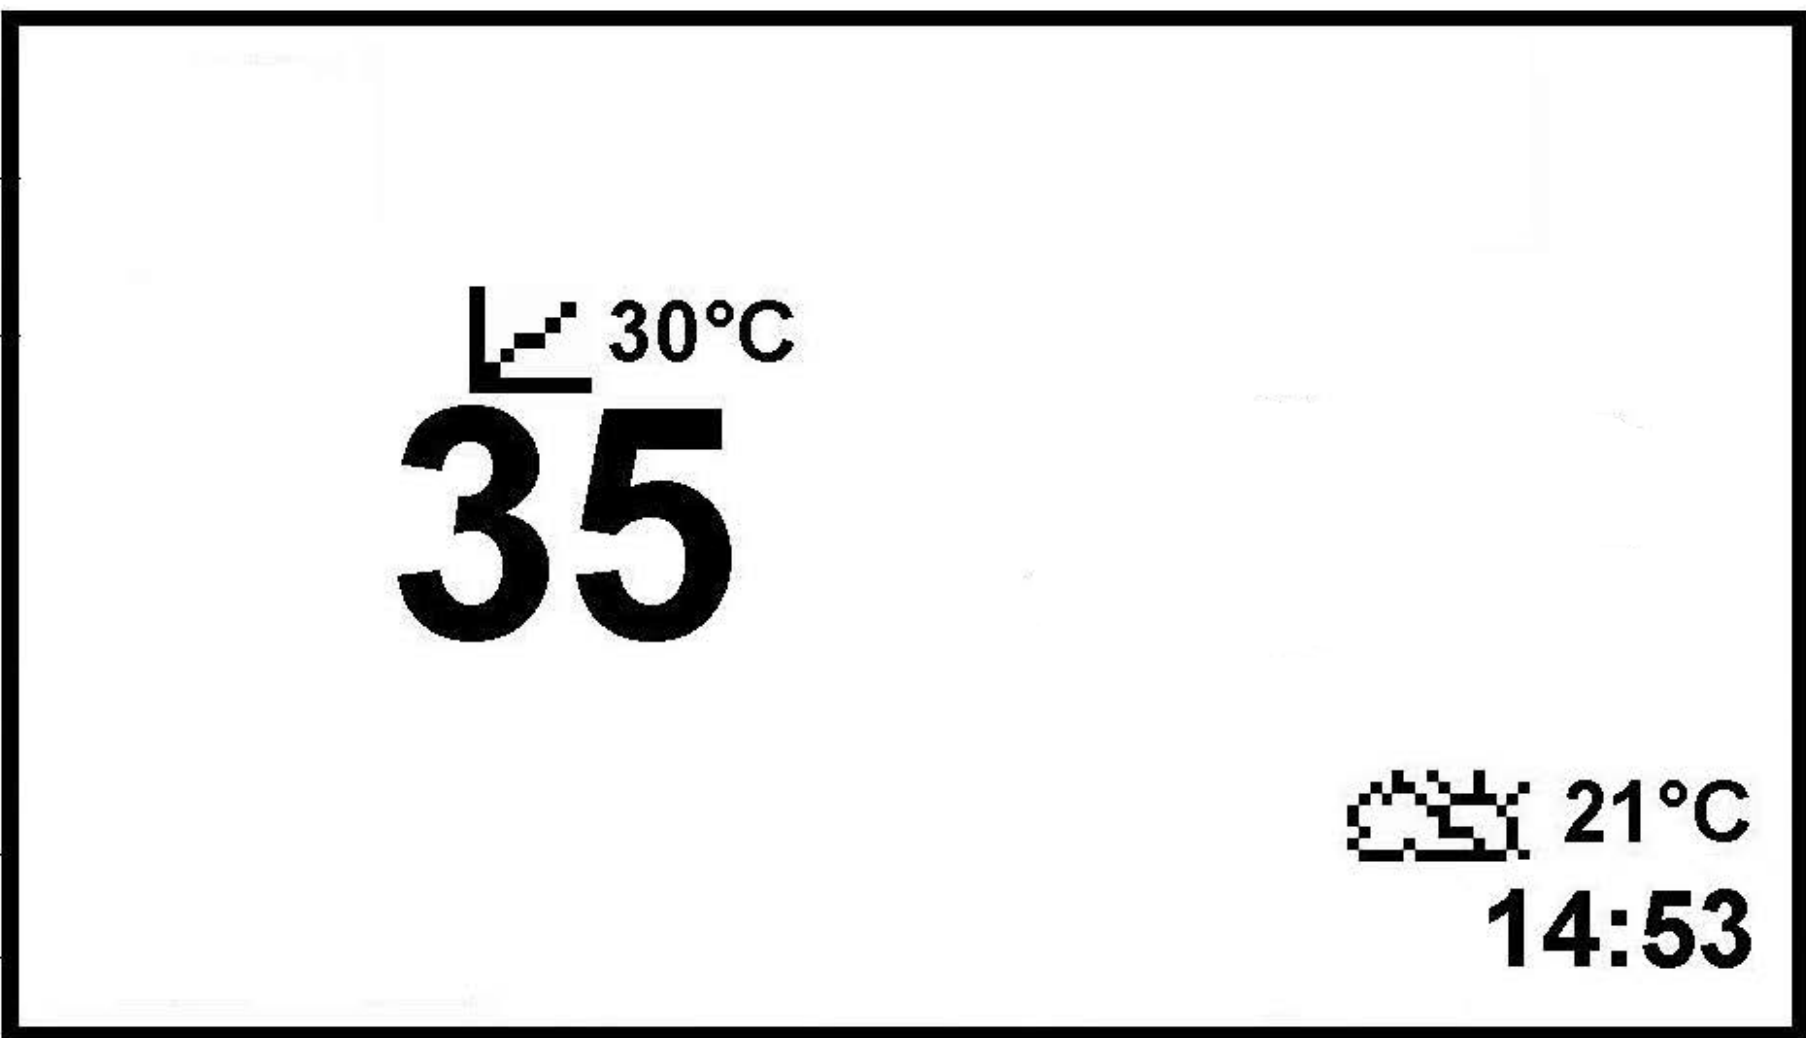


When the outdoor temperature sensor is connected, weather compensation menu will be activated inside the system settings menu. In this menu you can enable or disable the automatic operation with weather compensation function. When disabled, the boiler will resume operation according to the adjustments made on the control panel. Only outdoor temperature icon (will not show the outdoor temperature value) will be present on the LCD screen when weather compensation is disabled. Also in this menu you can change the weather compensation curve coefficient. This curve coefficient is used to increase or decrease the heating capacity of the boiler in automatic mode, depending on the insulation level of your home, Geographic location or your comfort preferences. Weather compensation curves and corresponding boiler water temperatures are given on page 38.

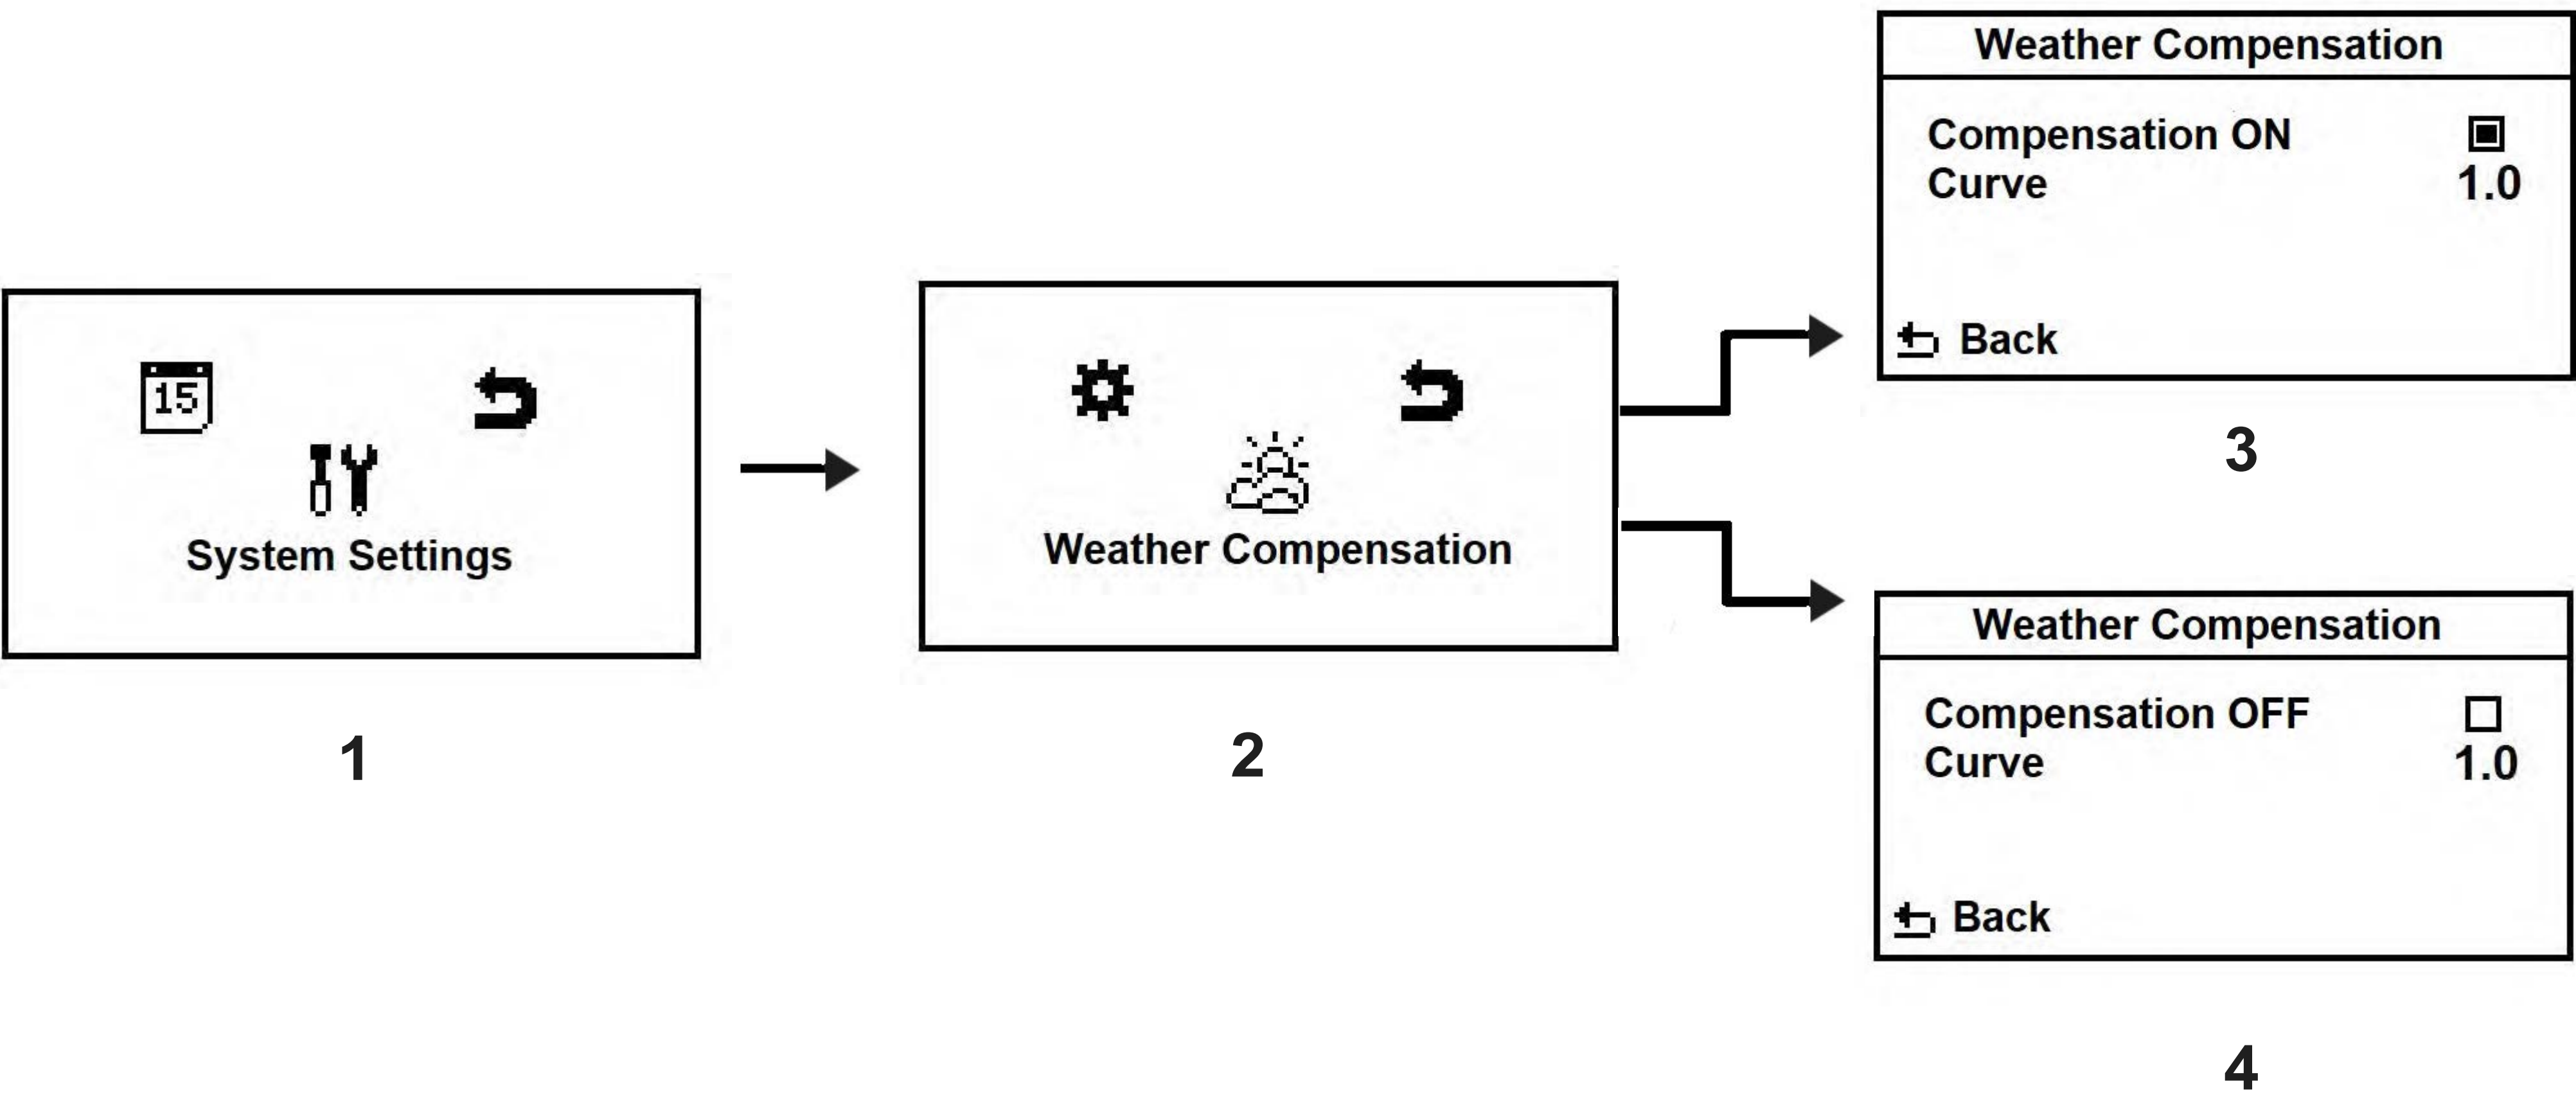

EHC strongly recommends the use of Weather Compensation to increase system efficiency and reduce energy consumption.

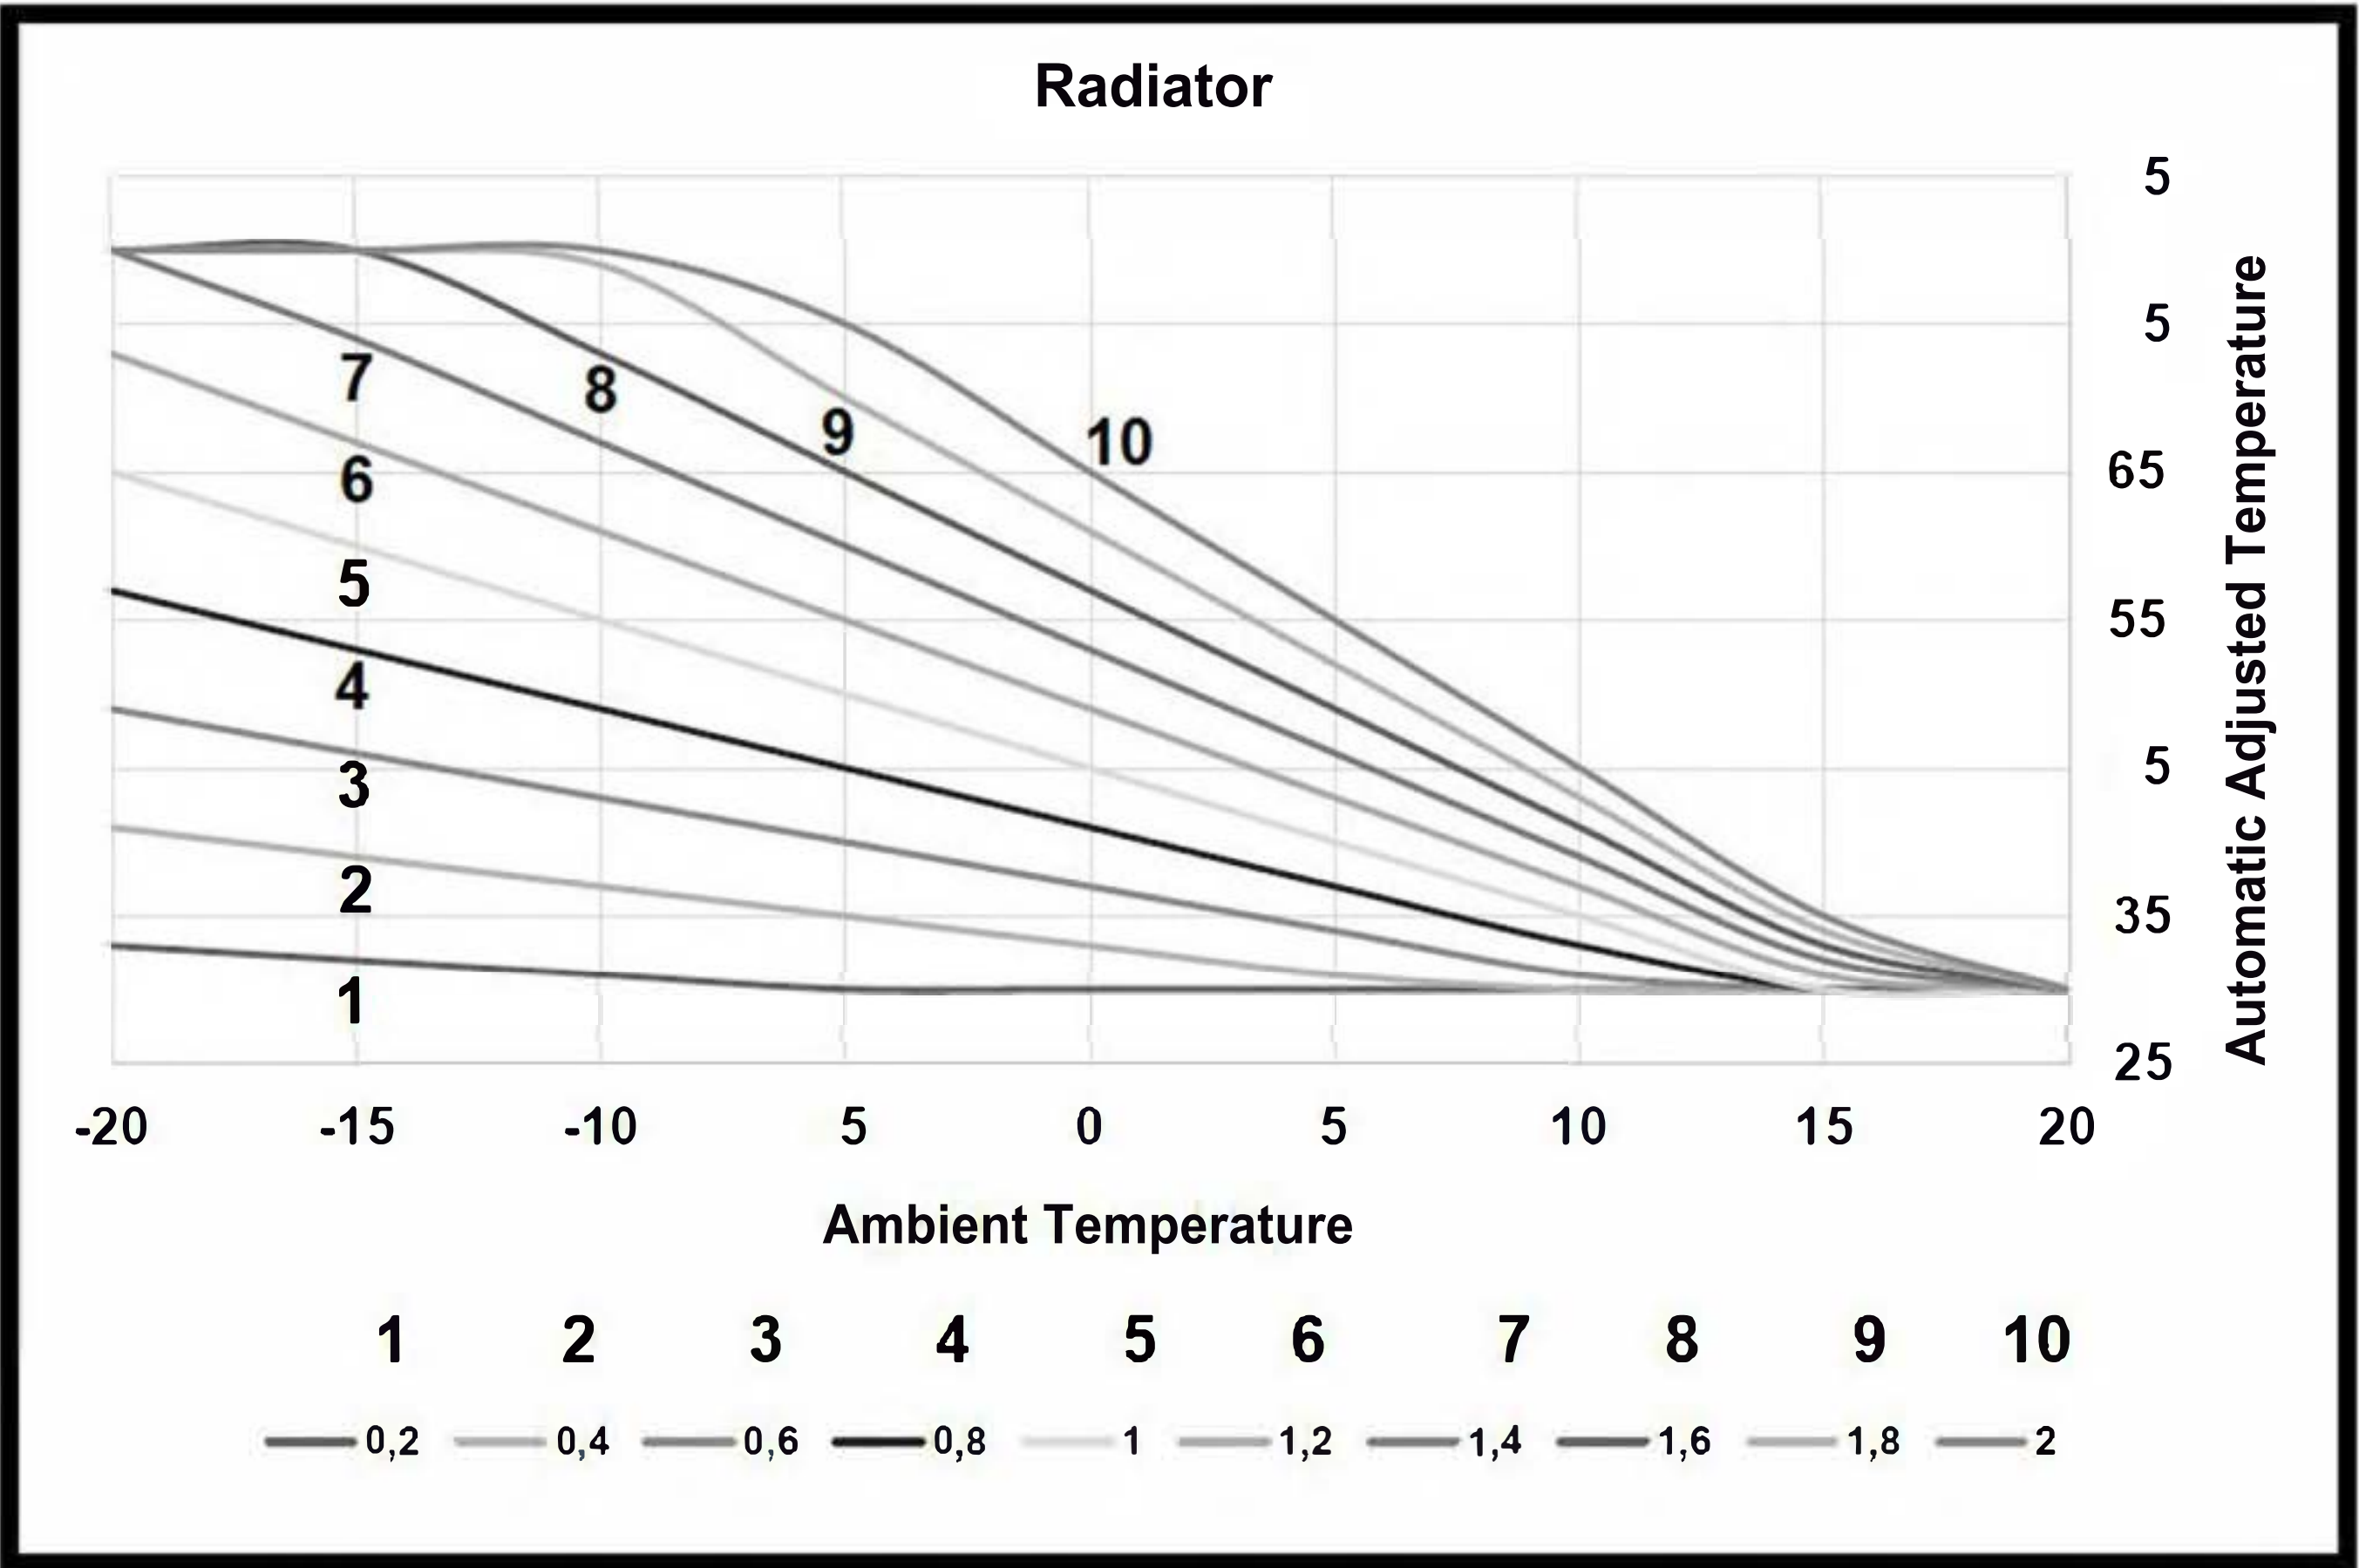


Heating Curve Coefficient		0,2	0,4	0,6	0,8	1	1,2	1,4	1,6	1,8	2
Outside Temperature	-20	33	41	49	57	65	73	80	80	80	80
	-15	32	39	46	53	60	67	74	80	80	80
	-10	31	37	43	49	55	61	67	73	79	80
	-5	30	35	40	45	50	55	60	65	70	75
	0	30	33	37	41	45	49	53	57	61	65
	5	30	31	34	37	40	43	46	49	52	55
	10	30	30	31	33	35	37	39	41	43	45
	15	30	30	30	30	30	31	32	33	34	35
	20	30	30	30	30	30	30	30	30	30	30

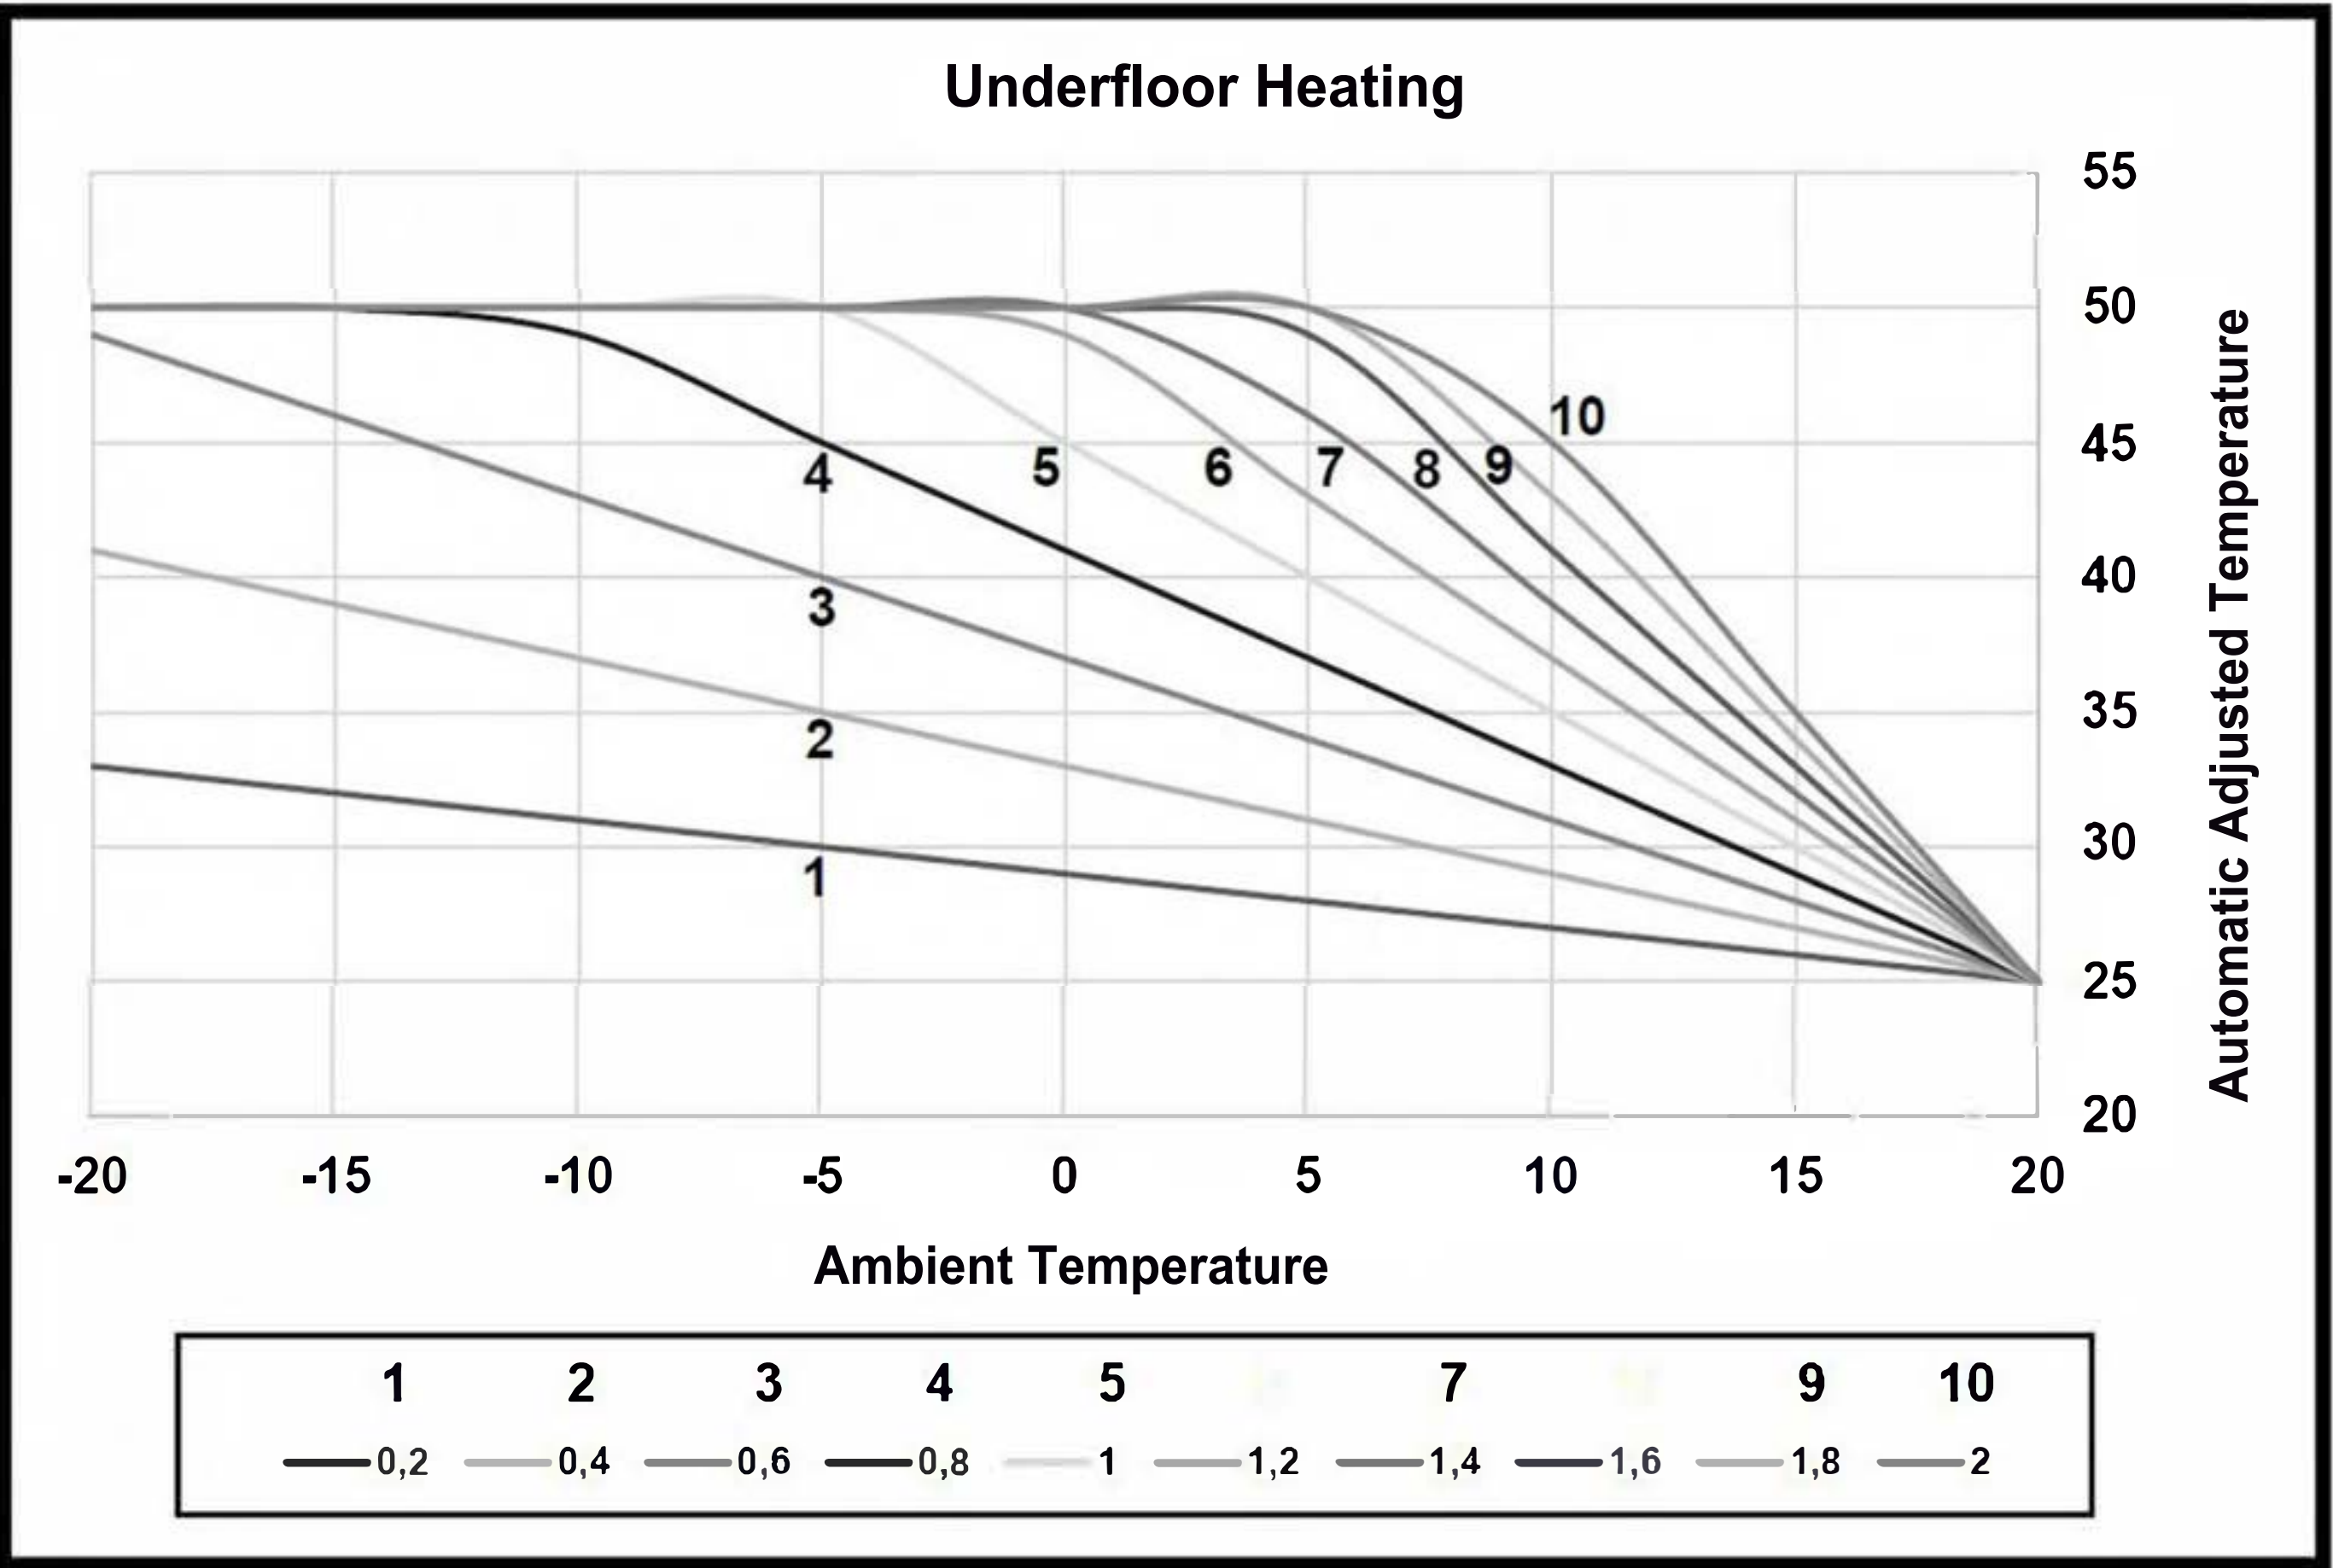



Heating Curve Coefficient		0,2	0,4	0,6	0,8	1	1,2	1,4	1,6	1,8	2
Outside Temperature	-15	32	39	46	50	50	50	50	50	50	50
	-10	31	37	43	49	50	50	50	50	50	50
	-5	30	35	40	45	50	50	50	50	50	50
	0	29	33	37	41	45	49	50	50	50	50
	5	28	31	34	37	40	43	46	49	50	50
	10	27	29	31	33	35	37	39	41	43	45
	15	26	27	28	29	30	31	32	33	34	35
	20	25	25	25	25	25	25	25	25	25	25
	25	24	23	22	21	20	20	20	20	20	20

5.3 Advanced Service Settings Menu

This menu contains settings and parameters for authorized service personnel to use during first start up and maintenance of the boiler. Access to these adjustable parameters of the boiler is restricted to only authorized engineers.

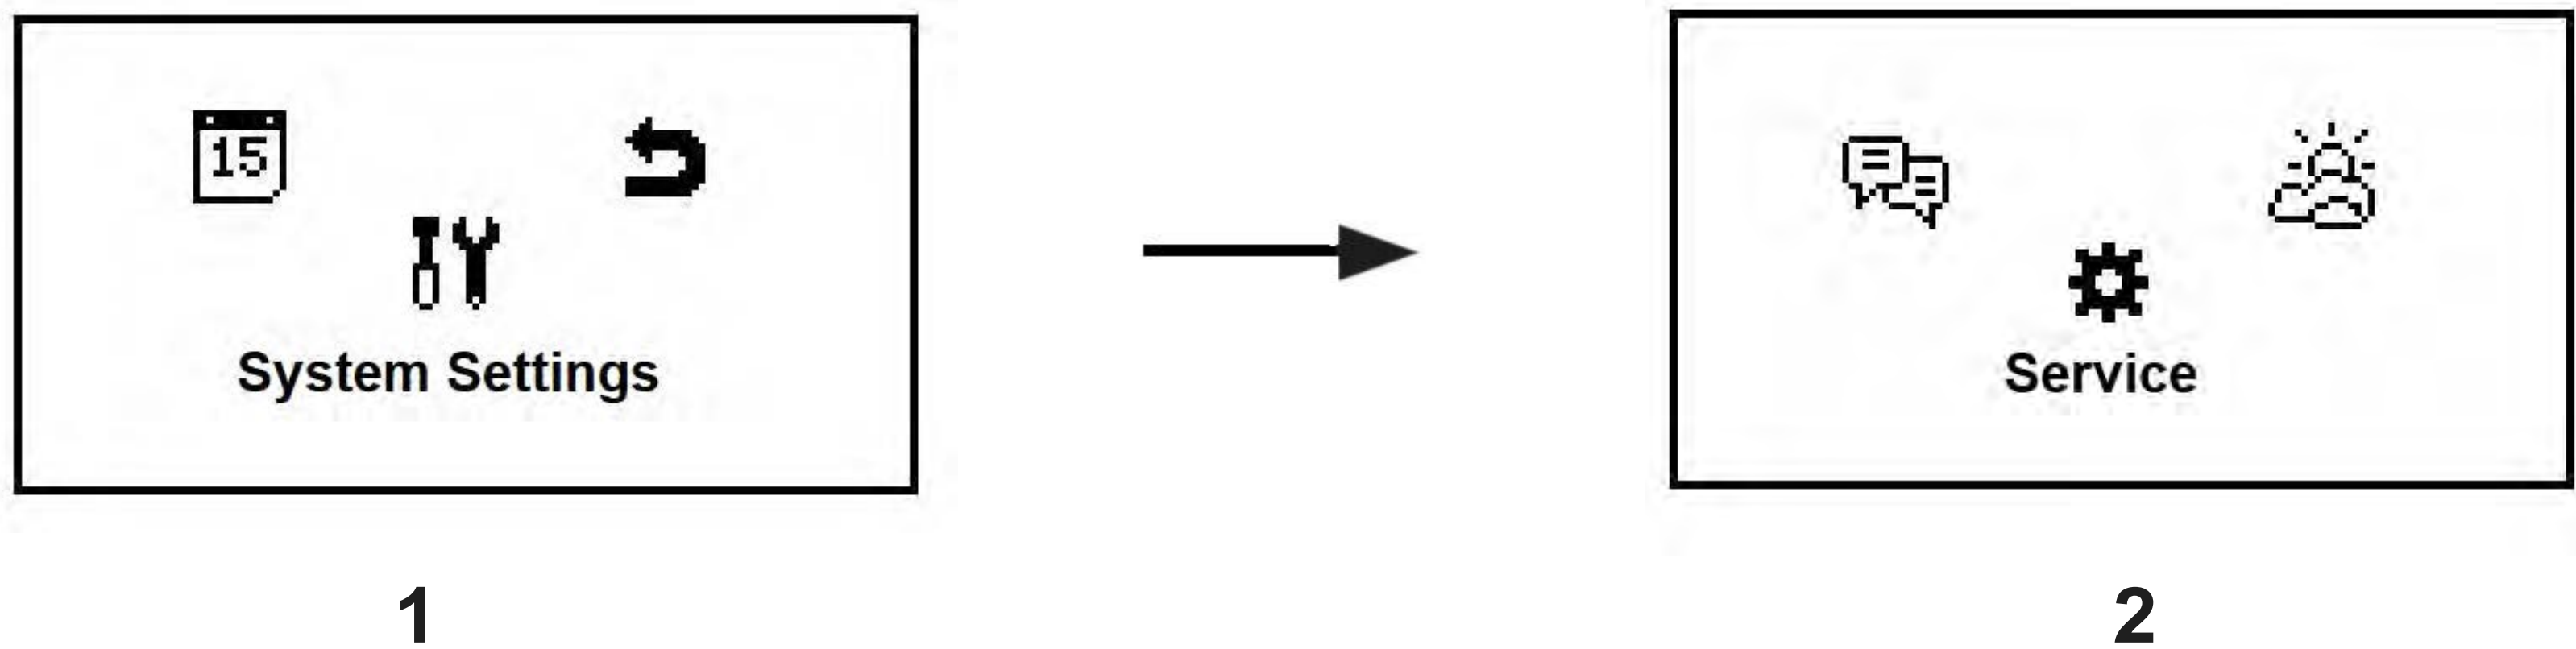


Enter PIN code **1977** to access the service menu

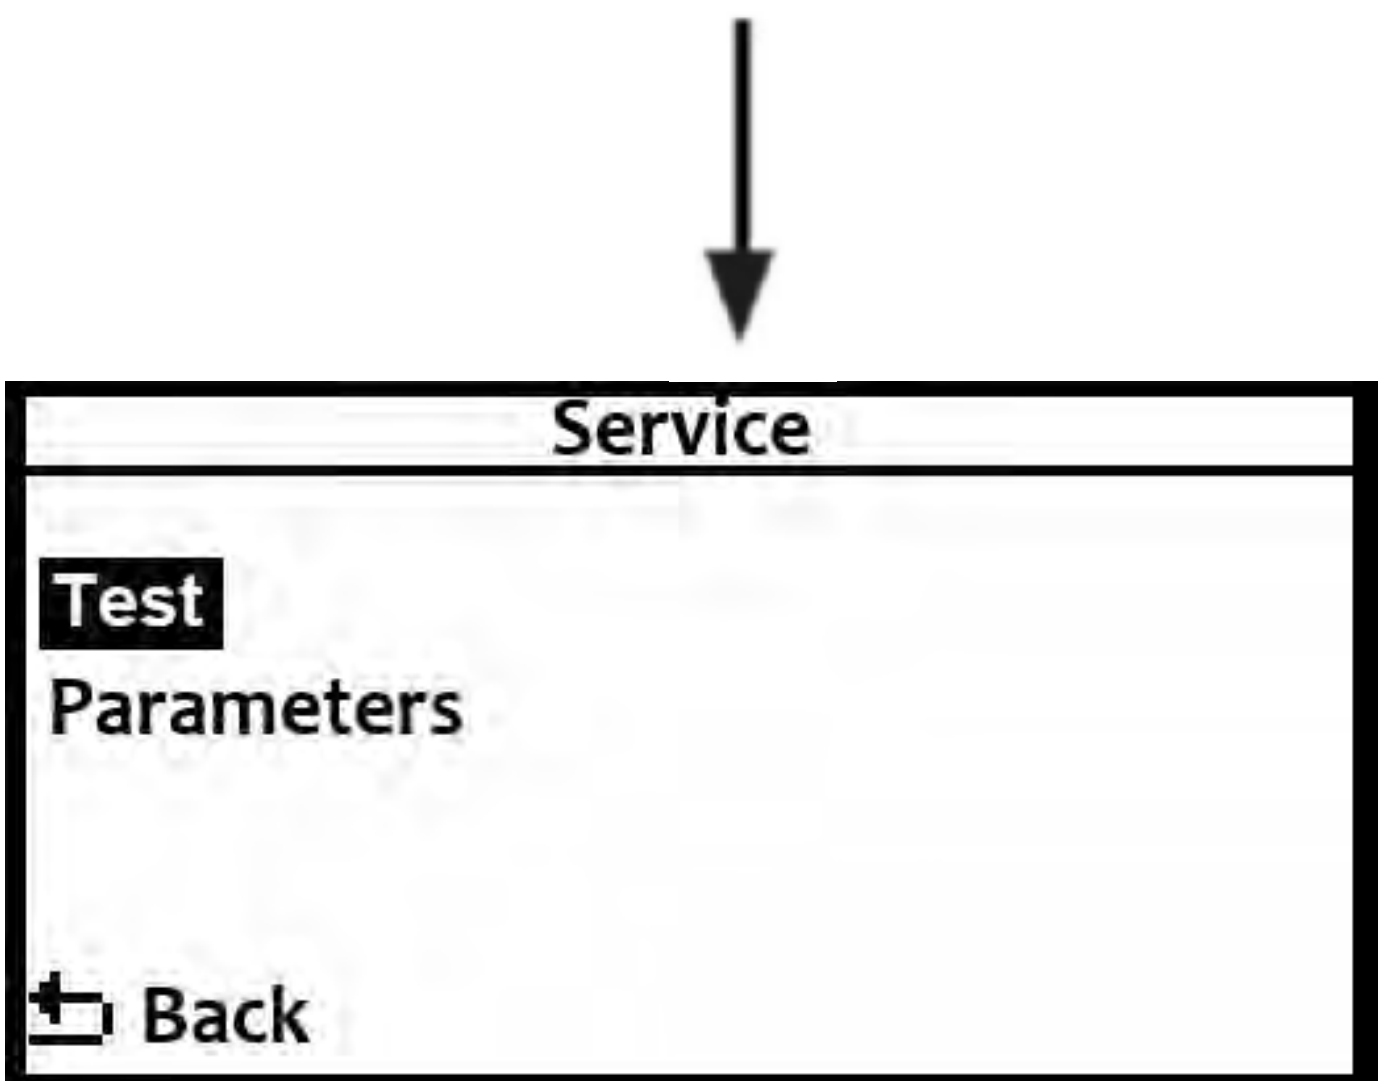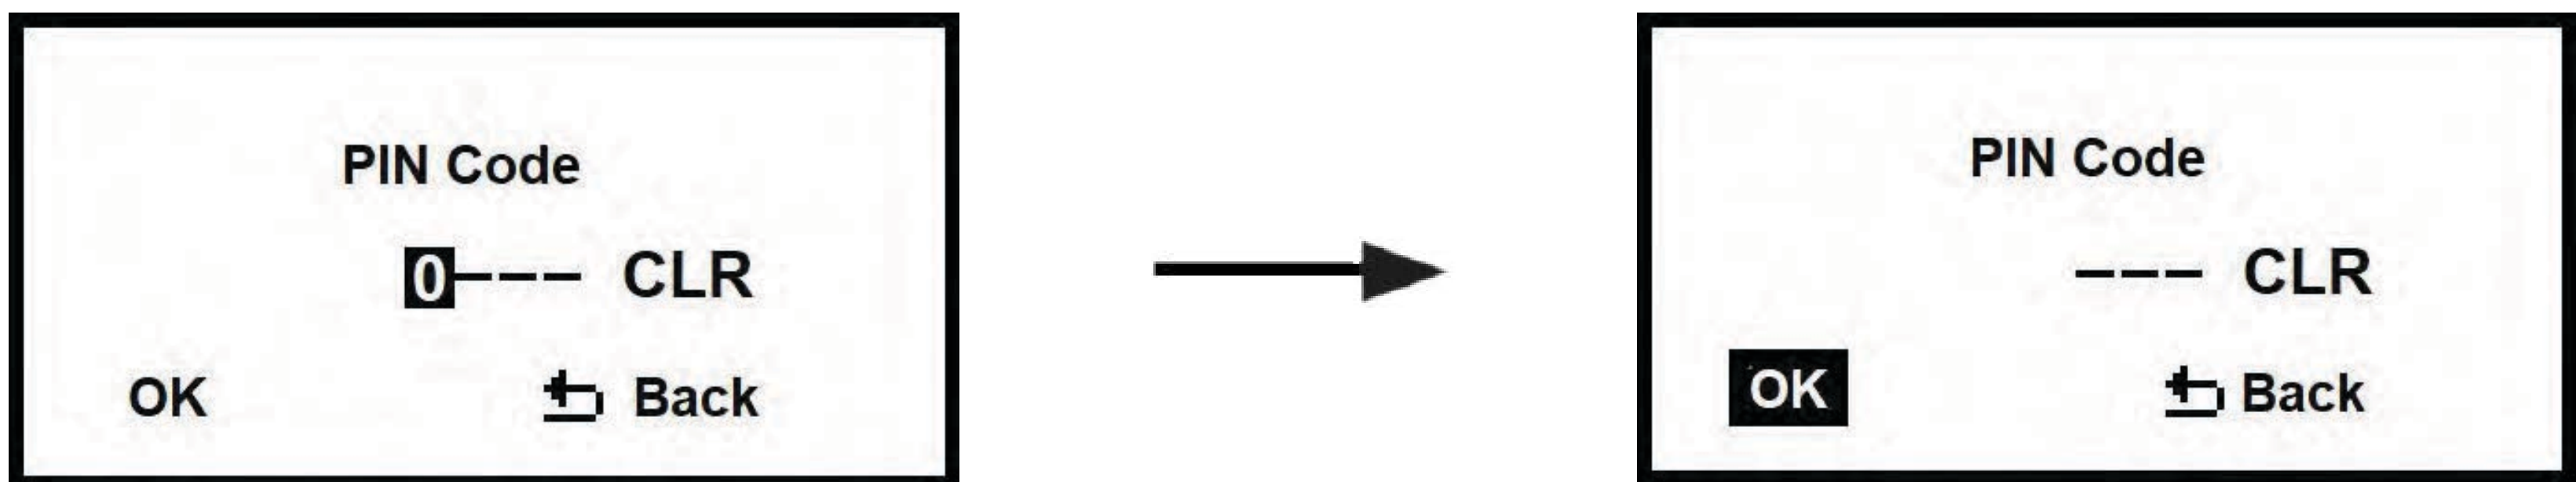

Test and Parameters sub menus are accessible in the service section. The test sub menu enables the service to make a diagnostic check and perform a functional test for components of the boiler individually.

Parameters sub menu is used to change the parameters of the main board according to type and intended use of the boiler. By changing the parameters a universal mainboard can be used in all capacities and types of Omega LCD boilers.

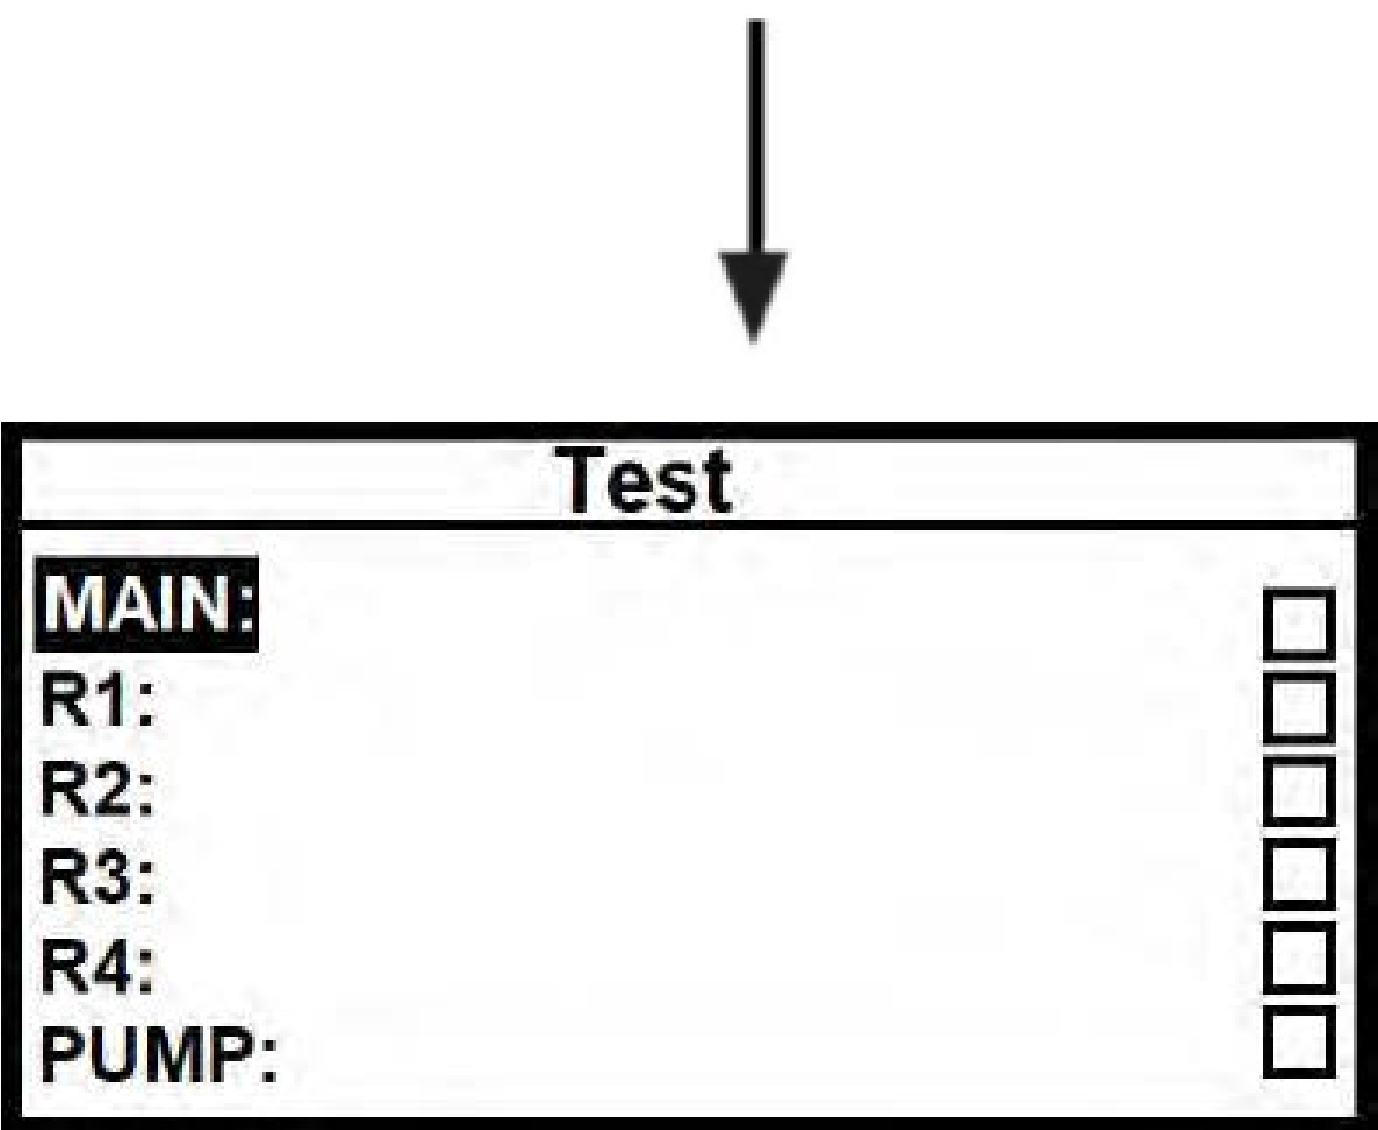

You can perform function test for the listed components by ticking the box and activating the part to start working.

Main: test contactor relay in models which have a contactor

R1-2-3-4 : Test the operation of each heating element separately.

Pump: Tests the circulation pump operation.

Test	
VALV:	☐
T1 CH Temp. Sensor	50°C
T2 DHW Temp. Sensor	32°C
T3 Ambient Temp. Sensor	25°C
Flow Sensor	☐



Test	
STB1 Limit Thermostat	☐
STB2 Safety Thermostat	☐
PSW Water Pressure Switch	☐
FSW Float Level Sensor	☐
Roomstat	☐
Back	

VALV: Test the 3 way valve motor operation

T1: actual CH water temperature

T2: actual DHW water temperature

T3: Actual ambient temperature (when an ambient temperature probe is installed)

Flow sensor: Tests the operation of the flow sensor signal

STB1: Test limit thermostat function

STB2: Test safety thermostat function

PSW: Test water pressure sensor function

FSW: Test float level sensor function

Roomstat: Test the room thermostat operation

In the parameters sub menu you can configure the main board to fit a specific boiler.

Service	
Test	
Parameters	
Back	

R1-R2-R3-R4 activation: By ticking these boxes you can choose how many elements are in use at the boiler. So you can configure the main board to fit from single heating element models to 4 heating element models.

Alternatively, you can disable a failed element and continue operating the boiler until the element can be replaced.

Parameters	
R1 active	☒
R2 active	☒
R3 active	☒
R4 active	☐
Floor heating	☐
Without DHW	☐

Floor Heating: Floor heating mode can be enabled here to limit the max. CH temperature of the boiler to 50C so it can be used safely in underfloor heating installations.

Parameters	
Classic mode	☒
External DHW	☐
Pressure sensor	☐
Logo	☒
Weather comp. Active	☐
Back	

Heating Mode Selection: Boiler operation mode can be selected as without DHW(heating only), classic mode(combi) Heating & Hot Water

Pressure sensor: Activates pressure sensor for models equipped with one.

Logo: Activates the company logo on the screen

Weather comp. active: When an ambient temperature probe is installed, operation with weather compensation is activated here.

5.4 ERROR CODES AND TROUBLESHOOTING

Error Code	Explanation	Reason	Solution
H1	CH Temperature Sensor Error	• Disconnected sensor cable • NTC sensor failure • Mainboard failure	❖ Check the cable and socket ❖ Replace the NTC sensor ❖ Replace the mainboard
H2	DHW Temperature Sensor Error	• Disconnected sensor cable • NTC sensor failure • Mainboard failure	❖ Check the cable and socket ❖ Replace the NTC sensor ❖ Replace the mainboard
H3	CH Circuit Low Water Pressure Error	• Air trapped in the system • Water leakage from boiler or installation • Expansion tank failure	✓ Vent the air from boiler and radiators then fill system upto 1.5 bars. ✓ Check all piping and connections for leakage ❖ Check the counter pressure of the expansion tank. Pressurize the tank upto 1.1 bars with nitrogen. If membrane is damaged replace the tank.
H4	Safety Thermostat Error Boiler temp >=95°C	• Air trapped inside the system • Valves on the installation may be closed • Thermostat failure • Particule filters may be clogged. • Circulation pump failure • Mainboard failure	✓ Vent the air from boiler and radiators then fill system upto 1.5 bars. ✓ Make sure all the valves are open ❖ Check the thermostat connections, replace thermostat if necessary. ❖ Clean the filters. ❖ Turn the rotor manually, check pump electric connection, replace pump if needed. ❖ Replace the mainboard.
H5	Limit Thermostat Error Boiler temp >=93°C	• Air trapped inside the system • Valves on the installation may be closed • Thermostat failure • Particule filters may be clogged. • Circulation pump failure • Mainboard failure	✓ Vent the air from boiler and radiators then fill system upto 1.5 bars. ✓ Make sure all the valves are open ❖ Check the thermostat connections, replace thermostat if necessary. ❖ Clean the filters. ❖ Turn the rotor manually, check pump electric connection, replace pump if needed. ❖ Replace the mainboard.
H6	Main Heat Exchanger Water Level Error	• Air trapped in main heat exchanger • Float water level sensor failure	✓ Vent the air inside the mani heat exchanger using the manual air vent. Fill the system upto 1.5 bar. ❖ Check the cable of folat water level sensor ❖ Check if the folater is stuck, clean the part so the floater moves freely. Replace the float water level sensor if neccessary.
H7	CH Circuit High Water Pressure Error	• Filling valve malfunction • Expansion tank failure • Plate heat exchanger failure • Return manifold failure	✓ Drain the excess water prom the drain valve on the installation to reduce pressure. ✓ Check if the filling valve tightly closed. ❖ Replace the filling valve if its leaking. ❖ Check the counter pressure of the expansion tank. Pressurize the tank upto 1.1 bars with nitrogen. If membrane is damaged replace the tank. ❖ Replace the palte heat exchanger. ❖ Replace the return manifold.
H8	Ambient Temperature Probe Error	• Disconnected or damaged probe cable • Temperature probe malfunction	❖ Check the cable and connection. ❖ Replace the ambient temperature probe.
❖ These solutions can only be performed by AUTHORIZED SERVICE PERSONNEL. ✓ These solution steps can be performed by end users.			

6. SAFETY SYSTEM OF THE DEVICE

The Voltius Electric Boiler has the following safety features in order to ensure the highest level of safety and highest technology.

6.1 RCD DEVICE (SHORT CIRCUIT RELAY)

In case of short circuit, the relay shuts off the electricity connection and prevents any possibility of electrocution, protecting human health and safety. For the RCD device to work properly, an earth connection with proper dimension and ground resistance must be connected to the boiler by a certified electrician. Failure to do so will cause the RCD device to malfunction. In such a case, the manufacturer is not responsible for any harm to people or environment.

6.2 HEATING TANK FLOAT WATER LEVEL SENSOR (H6)

This sensor prevents the boiler from running without sufficient water inside the heating tank therefore avoids any damage to the heating elements. In case of low water level, H06 is displayed on the device's screen. The air trapped must be completely removed from the air vent valve which is placed on top of the device. If the water pressure drops after the air is taken, the display shows H03. In this case, water should be added from the filling valve.

6.3 LOW / HIGH WATER PRESSURE

If the pressure in the heating circuit is below 0.7 bar, the boiler will not operate and the H3 warning code will appear on the digital display, preventing damage caused from running without sufficient water.

What to Do: The heating system pressure is increased by adding water up to the desired level by the filling valve. You can view the pressure of the water filled on the LCD screen.

Also if the water pressure increases beyond 2.7bars, H7 high water pressure error is shown on the display. The pressure should be dropped by discharging water from the drain valve to continue operation. In the event of repeat high pressure the boilers expansion vessel pressure should be checked by a competent engineer. On larger systems greater than 70 litres an additional expansion vessel may be required on the primary heating circuit.

6.4 OVERHEAT LIMIT THERMOSTAT

If the water temperature at the heating system is above 93°C, the system energy is cut off by the main board and H5 warning code is shown on the LCD screen.

What to Do: When the water temperature of heating system drops down to 60°C, the boiler will start working again. If this failure occurs two times consequently, please turn off the boiler and call an authorized service engineer.

6.5 SAFETY THERMOSTAT

This is a secondary safety measure to prevent overheating in the boiler. If the limit thermostat does not function and the boiler temperature reaches 96°C, the safety thermostat shorts neutral to the boiler chassis and the RCD device shuts off the electricity supply. Proper earth connection is required for the safety thermostat to work properly.

6.6 FROST PROTECTION

When the temperature in the heating system drops down to 5°C, there is security system that automatically activates the heating elements. When the water temperature reaches 30°C, the heating elements are stopped. This system prevents the water inside the boiler from freezing and subsequent damage to the components.

In order for this system to work, the main switch to which the device is connected must be turned on and the valves on the installation should be open. Malfunctions and damages caused by frost when the electricity is off or if the valves are closed are not covered by warranty.

6.7 CENTRAL HEATING NTC SENSOR

When a sensor failure occurs in central heating system.H1 warning code appears on the LCD screen

6.8 HIGH WATER PRESSURE PROTECTION

When there is over pressure in the heating system, the 3 bar safety valve discharges water and decreases the pressure.

6.9 CIRCULATION PUMP ANTI-JAMMING SYSTEM

When the boiler is in the OFF position, the pump is operated in every 24 hours by the control card for a certain period of time to prevent locking and jamming of the pump.



CAUTION!

- The stand-by safety systems of the boiler; such as frost protection, pump lock protection are only active if the electricity connection of the boiler is on. The valves on the installation should not be closed.
- Especially during winter, when the ambient temperature decreases below 0°C there is a risk of freezing and the system water must be drained if the electrical connection of the device is interrupted during these periods.

7. TECHNICAL TABLE

CAPACITY															
Heating Power		KW	6	10	12	15	18	24	30	35	40	50	60	80	100
Capacity		kcal/h	5160	8600	10320	12900	15480	20640	25800	30100	34400	43000	51600	68800	86000
Max.Working Pressure (Heating Circuit)		Bar	3	3	3	3	3	3	3	3	3	3	3	3	3
Heating Circuit Temperature Setting Range		°C	30-80	30-80	30-80	30-80	30-80	30-80	30-80	30-80	30-80	30-80	30-80	30-80	30-80
DIMENSIONS															
Height		mm	650	650	650	650	650	650	650	740	740	755	755	755	755
Width		mm	440	440	440	440	440	440	440	435	435	571	571	571	571
Depth		mm	274	274	274	274	274	274	274	320	320	320	320	320	320
ELECTRICITY															
Electrical Supply Cable (3-Phase)*		pcs./mm2	—	—	—	—	6	6	10	10	10	16	16	25	35
Electrical Supply Cable (Monophase)*		pcs./mm2	6	10	10	16	—	—	—	—	—	—	—	—	—
Residual Current Device		A/mA	40-25/30	25/30	25/30	25/30	40/30	40/30	63/30	63/30	63/30	80/30	100/30	2x63/30	2x80/30
Voltage/Frequency		V~Hz	230/50	230/50	230/50	230/50	400/50	400/50	400/50	400/50	400/50	400/50	400/50	400/50	400/50
Nominal Operating Current		A	26	44	52	65	26	35	43	51	58	75	87	115	144
Maximum Operating Current**		A	29	49	57	72	28	37	45	54	61	76	92	123	154
Circuit Protection		A	32	50	63	80	32	40	50	63	63	80	100	125	160
Electrical Isolation Degree		IP	X4D	X4D	X4D	X4D	X4D	X4D	X4D	X4D	X4D	X4D	X4D	X4D	X4D
INSTALLATION															
Heating Installation Pipe Diameter		inch	3/4"	3/4"	3/4"	3/4"	3/4"	3/4"	3/4"	3/4"	3/4"	1"	1"	1"	1"
Cold Water Inlet Pipe Diameter		inch	1/2"	1/2"	1/2"	1/2"	1/2"	1/2"	1/2"	1/2"	1/2"	1/2"	1/2"	1/2"	1/2"
Integral Expansion Vessel***		Litre	7	7	7	7	7	7	7	7	7	2x7	2x7	2x7	2x7
ENERGY EFFICIENCY															
Space heating efficiency class		ERP	D	D	D	D	D	D	D	D	D	D	D	D	D

* Stated cable sizes are the minimum permitted for this appliance. The required cable size for the installation should be calculated by a qualified electrician based on a cable calculation in line with BS7671 Wiring Regulations taking into account cable type, cable routing and changes of boiler characteristics based on deviation of the site supply voltage.

** The maximum operating current is based on the upper limit of the permitted UK voltage supply of 253V Single Phase and 440V 3 Phase.

*** For boiler capacities greater than 40kW, a low loss header is required to separate the primary and secondary heating circuits. The primary circuit is from the boiler(s) to the low loss header vessel. For the secondary heating circuit an additional external expansion vessel and circulation pump is required according to the size and water volume of the heating installation.

8. MAINTENANCE

The following checks should be carried out annually by a competent engineer and recorded By Scanning the Boiler Smart Tag;

- 1- Check for leaks in the water circuit and, if necessary, replace the joints to ensure water tightness.
- 2- Check the status of the device visually.
- 3- Check the safety system of the heating system are working properly. Activate the test button on the internal RCD (Short Circuit Relay)
- 4- Check all electrical connections of the device. Fasten any loosened cables.
- 5- Clean the Magnetic Filter
- 6- Check the general operation of the device.
- 7- Check & adjust the expansion vessel pre-charge pressure to 1.5 bar
- 8- In accordance with Part L of the building regulations check system water condition and inhibitor strength levels. EHC recommends the use of Adey Pro Check for this task.

9. GUARANTEE CONDITIONS

This guarantee starts at the boiler's invoice date and continues to the period of time stated in guarantee certificate. In order for this guarantee to be valid, the commissioning certificate must be completed and warranty registration submitted. First installation and periodical maintenance must be performed by a Competent Engineer in your area.

ATTENTION!: The selection of the area where the boiler is installed, must be in conformity with all relevant directives and laws of the country.

The Electric Heating Company cannot be held liable for any adverse situation as a result of non conformance or incorrect installation.

The guarantee of the boiler is not valid under these circumstances:

- 1- Improper installation, improper electrical connection. Please check the installation manual and boiler startup request form for installation requirements.
- 2- Damages arising from the installation of the device in places with humidity or water contact.
- 3- The assembling of non authentic and non approved parts to the boiler.
- 4- Extreme high or low temperature of the working environment.
- 5- Damages that occur as a result of inappropriate storing.
- 6- Damages which are results of damaged parts during transport.
- 7- Damages caused by hard water (lime scale) in hot water circulation (ideal water hardness will be less than 200ppm)
- 8- Failure to install a magnetic filter on the primary circuit return.
- 9- Damages as a result of installation and maintenance that are not in conformance with relevant directives and rules.

- 10- Use of the boiler for purposes other than the device is designed for.
- 11- Boilers that are kept inappropriately, as showroom items for a long time.
- 12- Unavailability of the commissioning, servicing and warranty registration documents
The user must keep these documents at all times.
- 13- Boilers with damaged or modified serial numbers.
- 14- When the temperature of the water drops below 0°C there is a risk of freezing and the system water must be drained if the electrical connection of the device is not connected.
Otherwise damages that occur because of freezing are not covered by the warranty.
- 15- Damages to the relay board or the main board because of high voltage or surges from the electric grid.
- 16- Damages caused by dirty closed circuit water in old installations. The installation must be cleaned and flushed before installing the boiler and operating on the closed circuit.
- 17- Damages that may occur when the electrical connection and valves on the installation are kept closed in standby mode disabling the stand-by safety systems.
- 18- In cases where the boiler is taken out of the box and hung on the wall but not commissioned, damages that may occur because of the adverse conditions.
- 19- Damages to the boiler during mounting and installation.
- 20- Damages to the boiler because of unsuitable and dirty water in the closed circulation circuit. Make sure the system pipework is clean even if the installation is new.
- 21- If there is a risk of freezing in the boiler location before the system is made fully operational, the water in the system should be discharged after the system is tested for leakage by the installer. If water is left inside the boiler prior to full commissioning and normal system operation, the damages that may occur because of freezing are not covered by manufacturer's warranty.
- 22- Failure to carry out annual maintenance tasks detailed within this manual.


Further guidance on The Electric Heating Company's General Warranty Terms in addition to the above can be viewed at the following web address;

www.electric-heatingcompany.co.uk/warranty-terms-conditions

10. EXPLODED VIEW (6-30 kW MODELS)


Below drawing belongs to 24kW model.

- 6-12 kW models have a single heating element.
- 15-30 kW models have 3 heating elements.

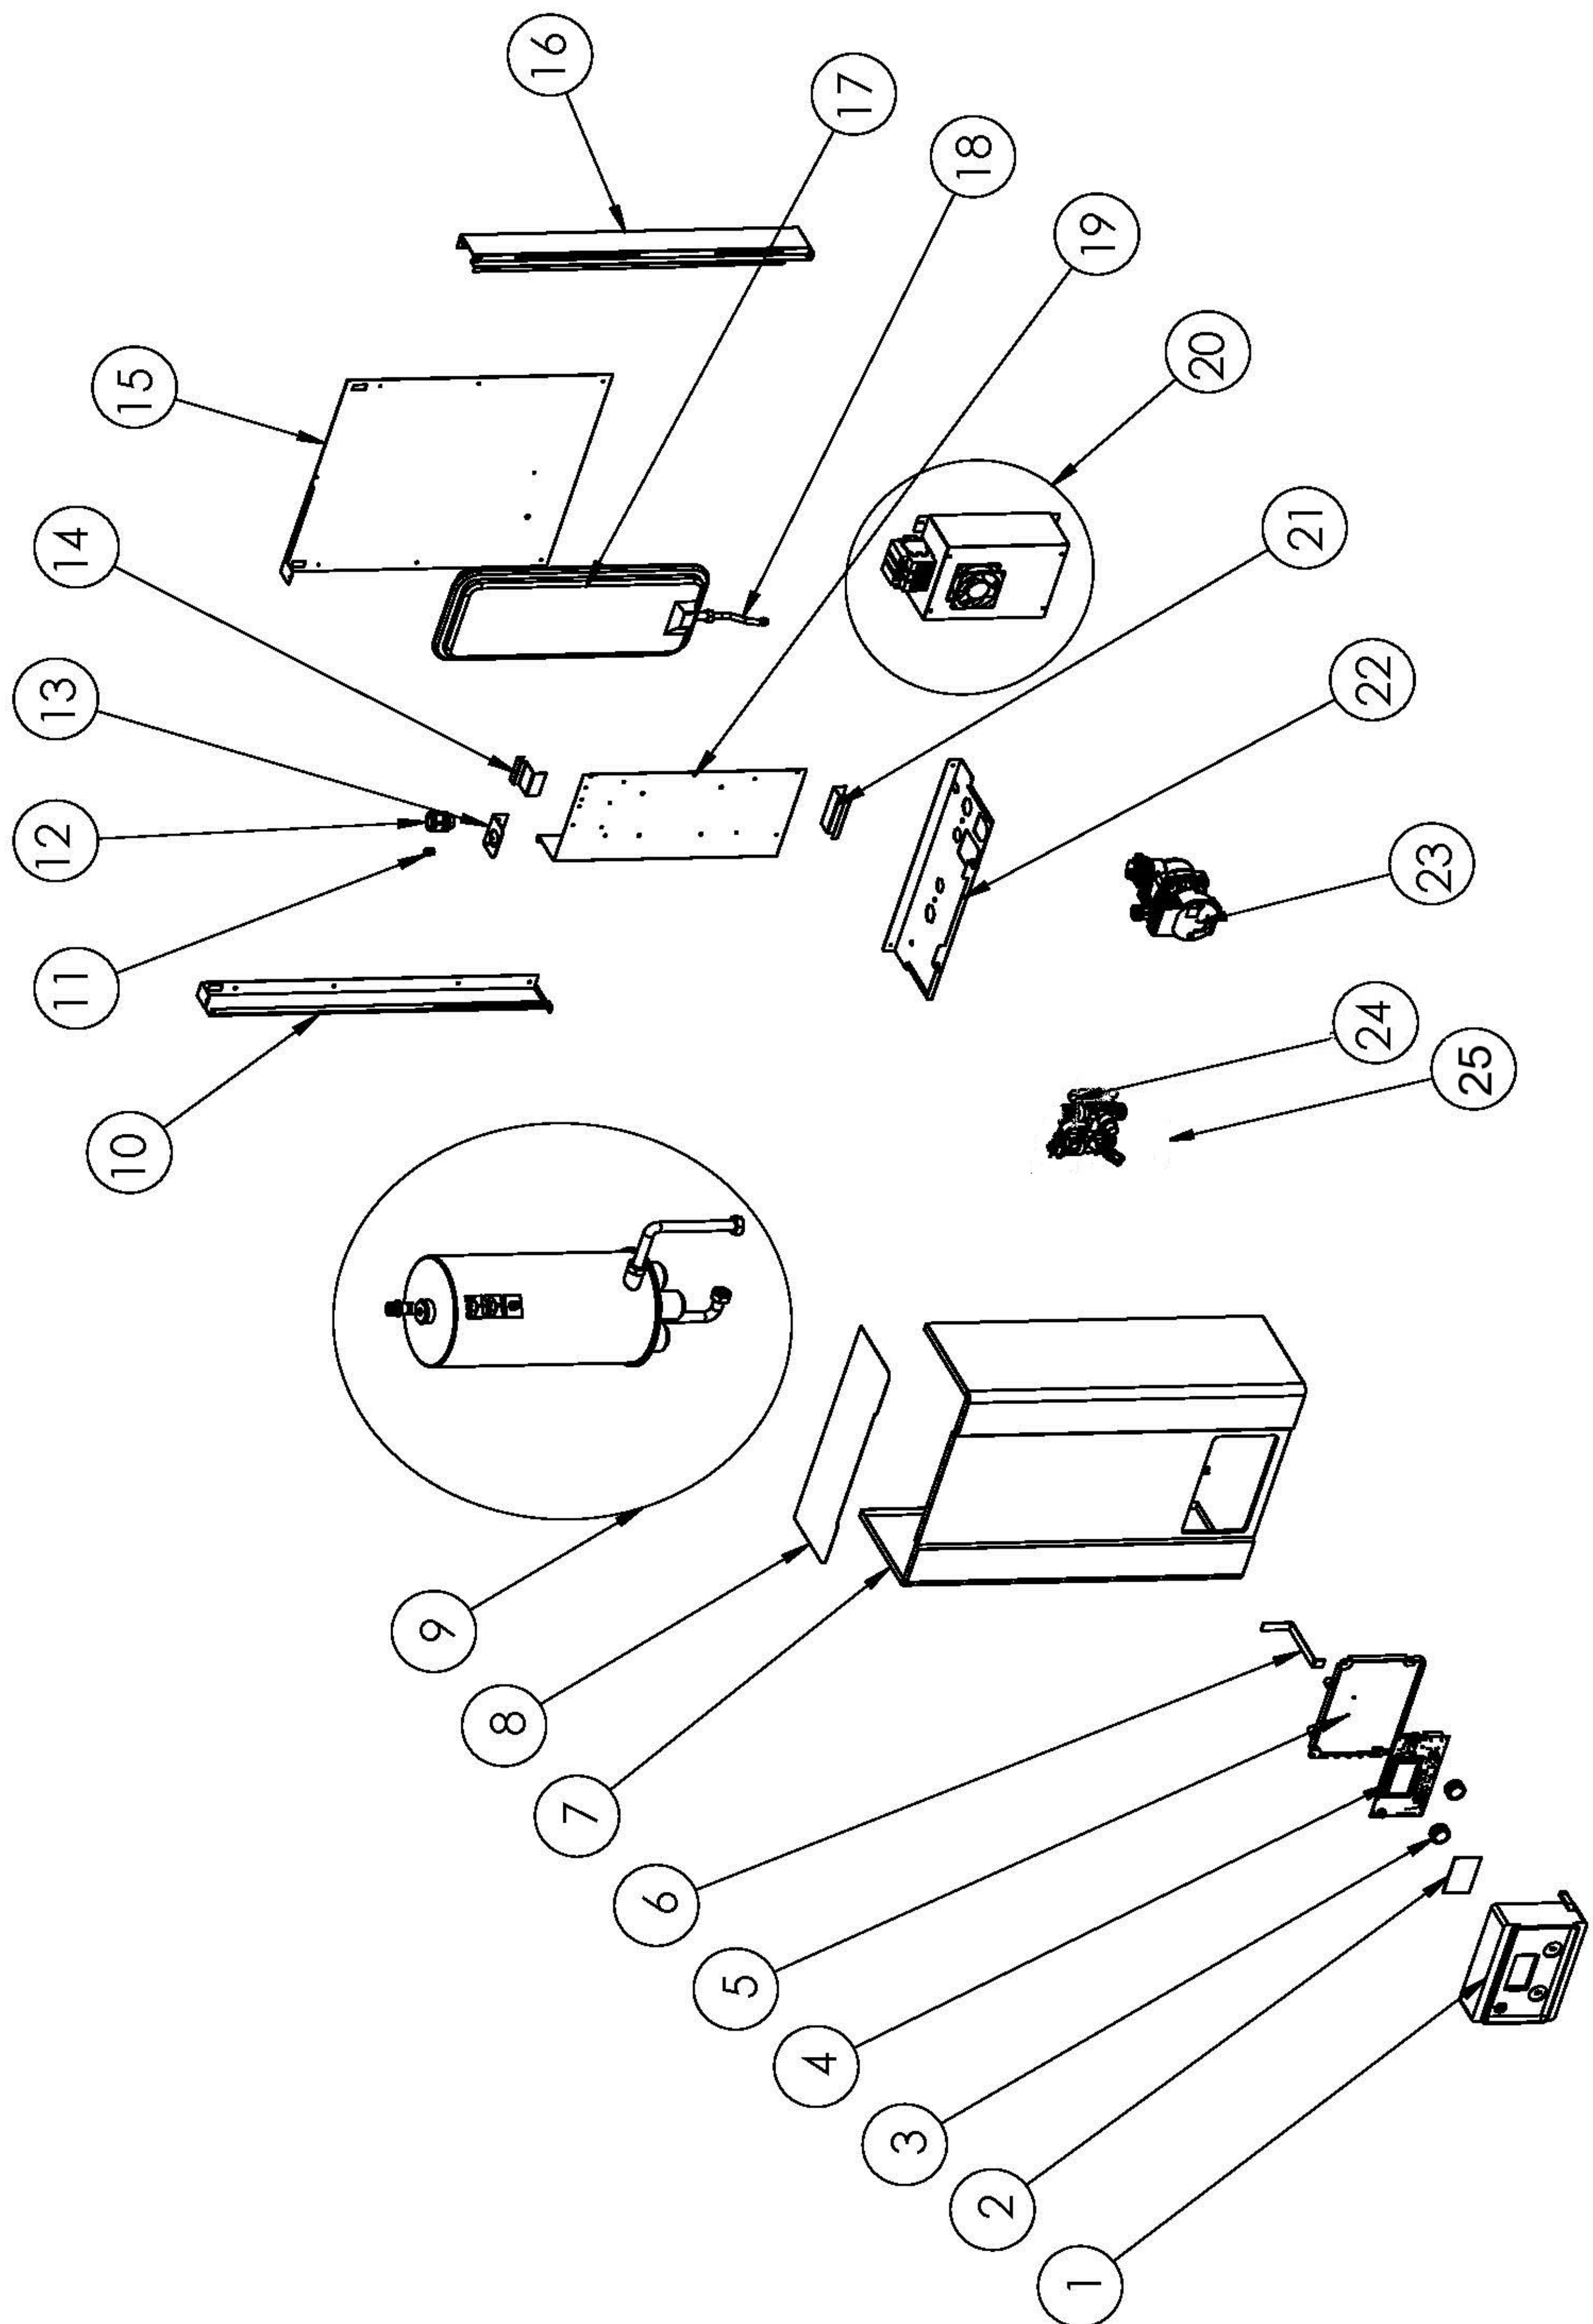


❖ The manufacturer reserves the right to make changes to the parts and design of the boiler.

10.1 MAIN HEAT EXCHANGER GROUP DETAIL (6-30 kW MODELS)

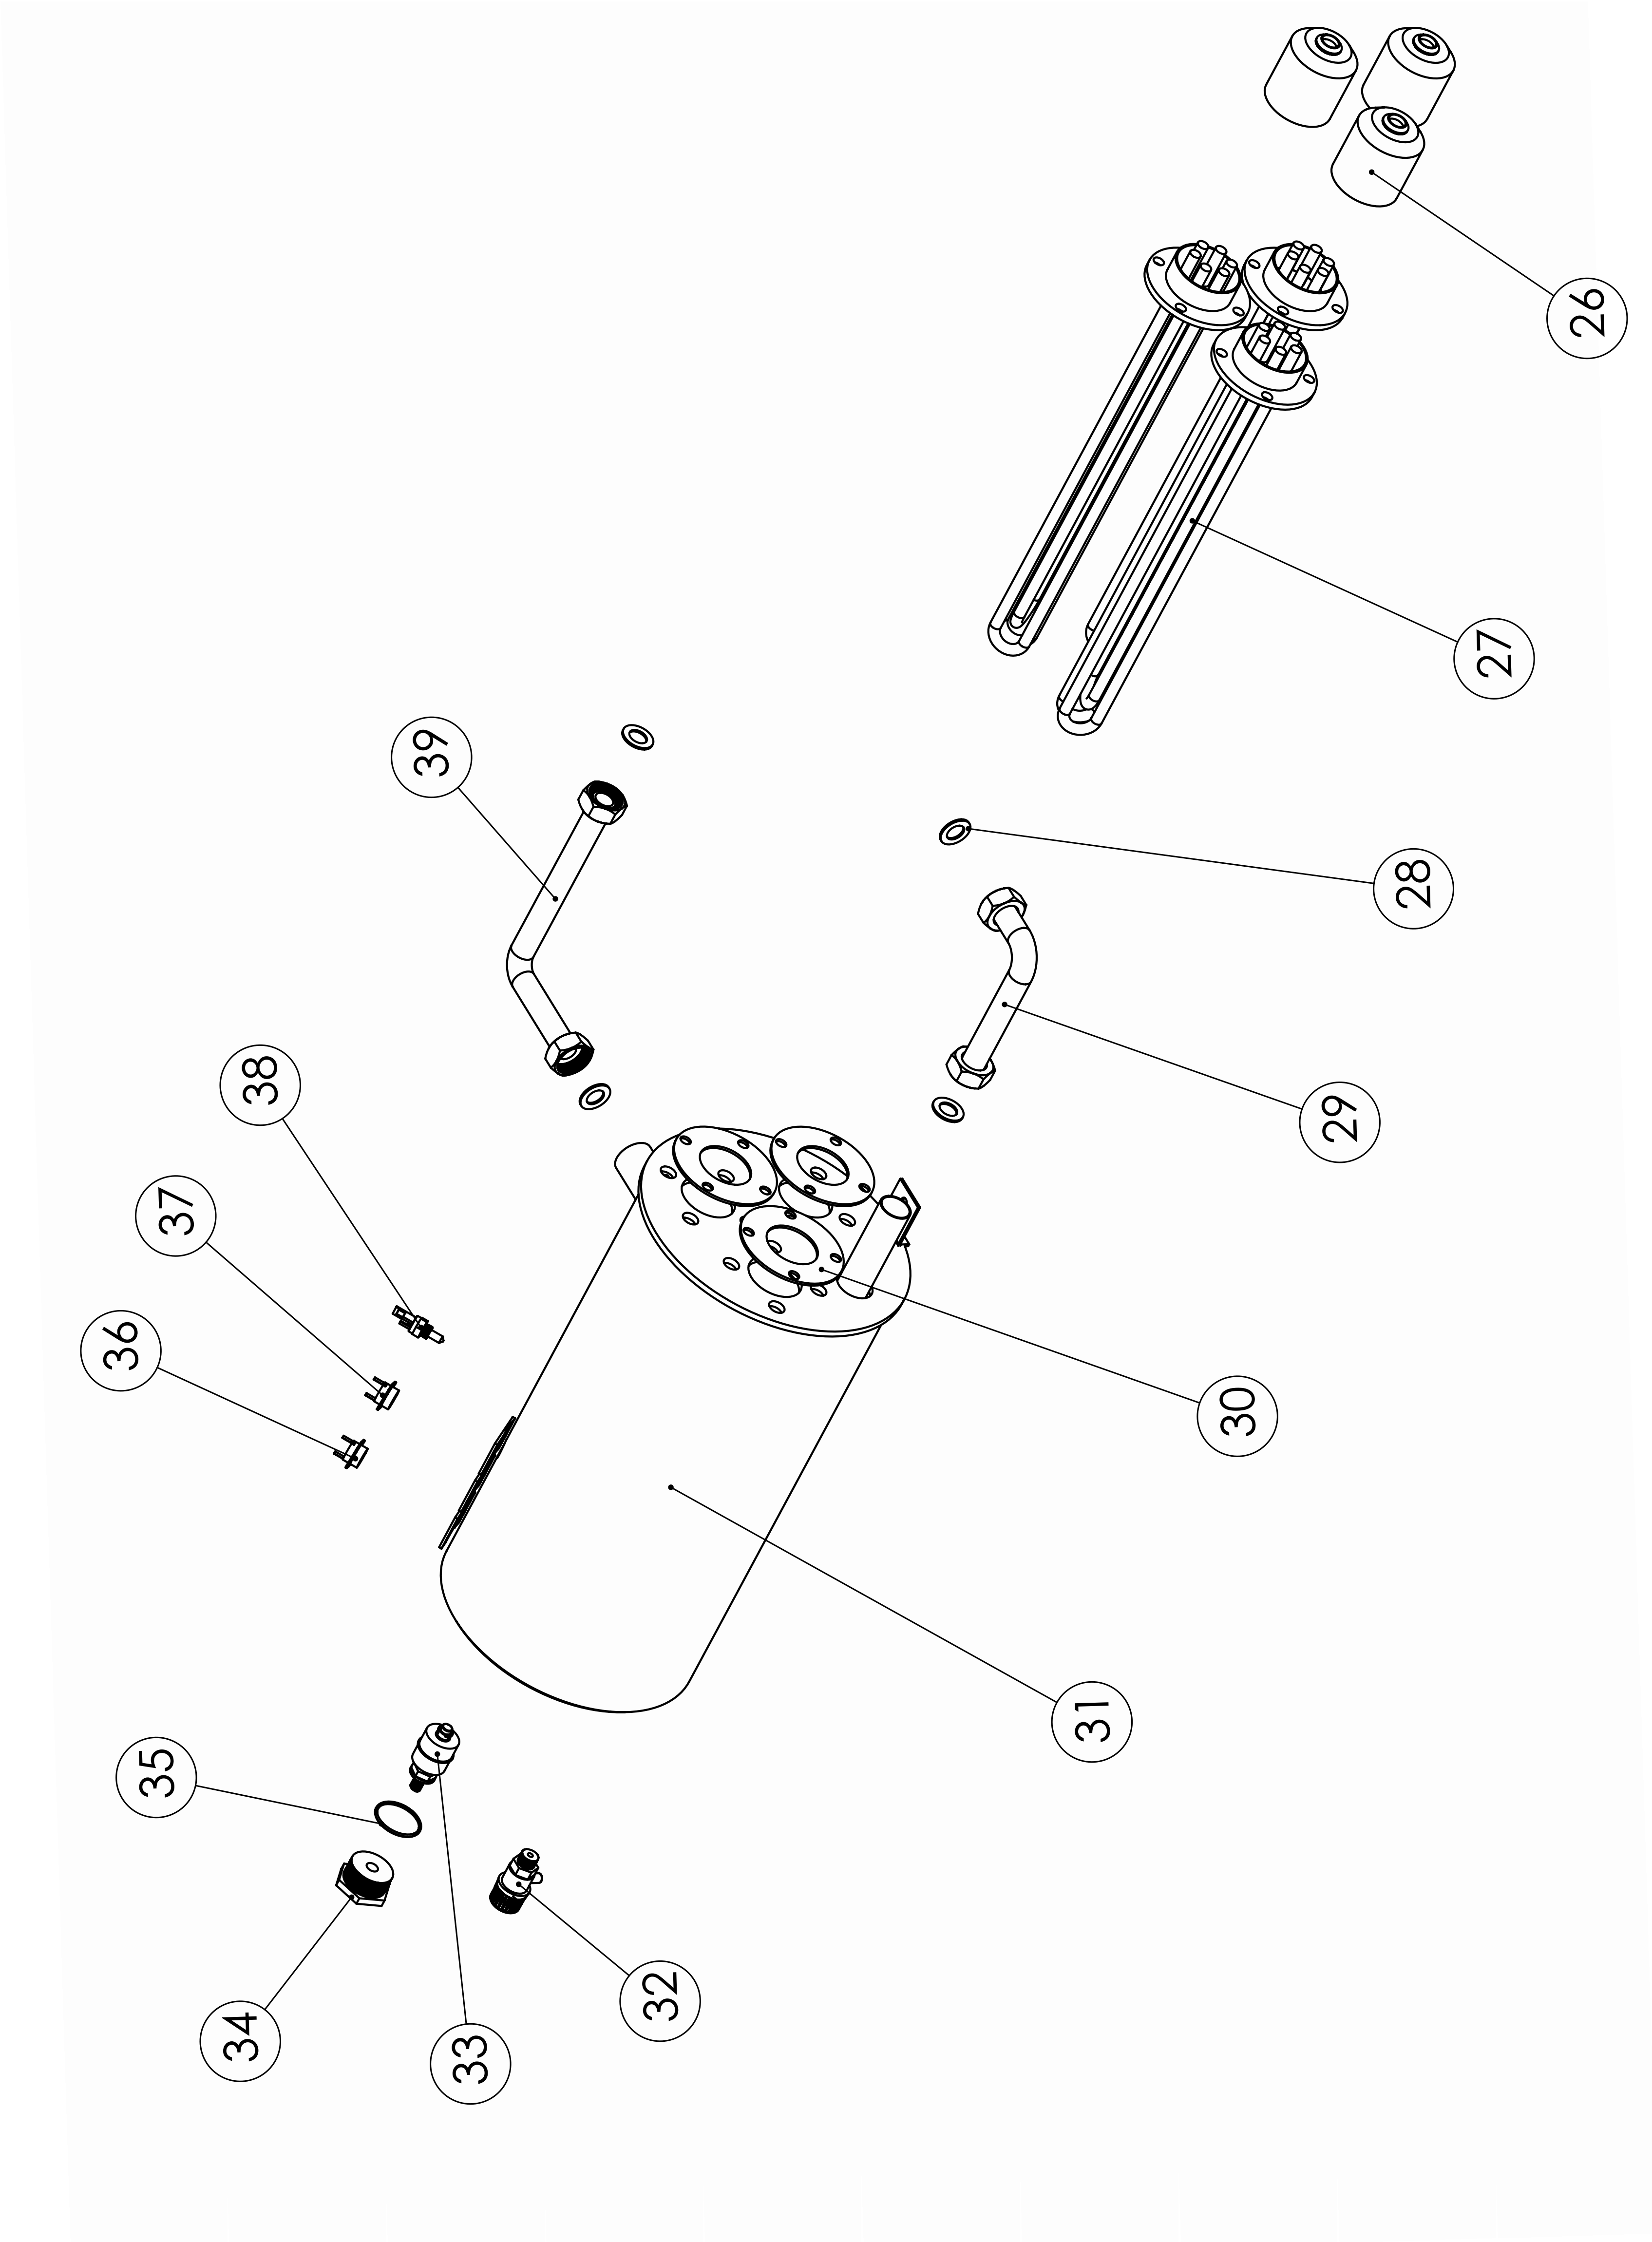


10.2 RELAY BOARD GROUP DETAIL (6-30 kW MODELS)

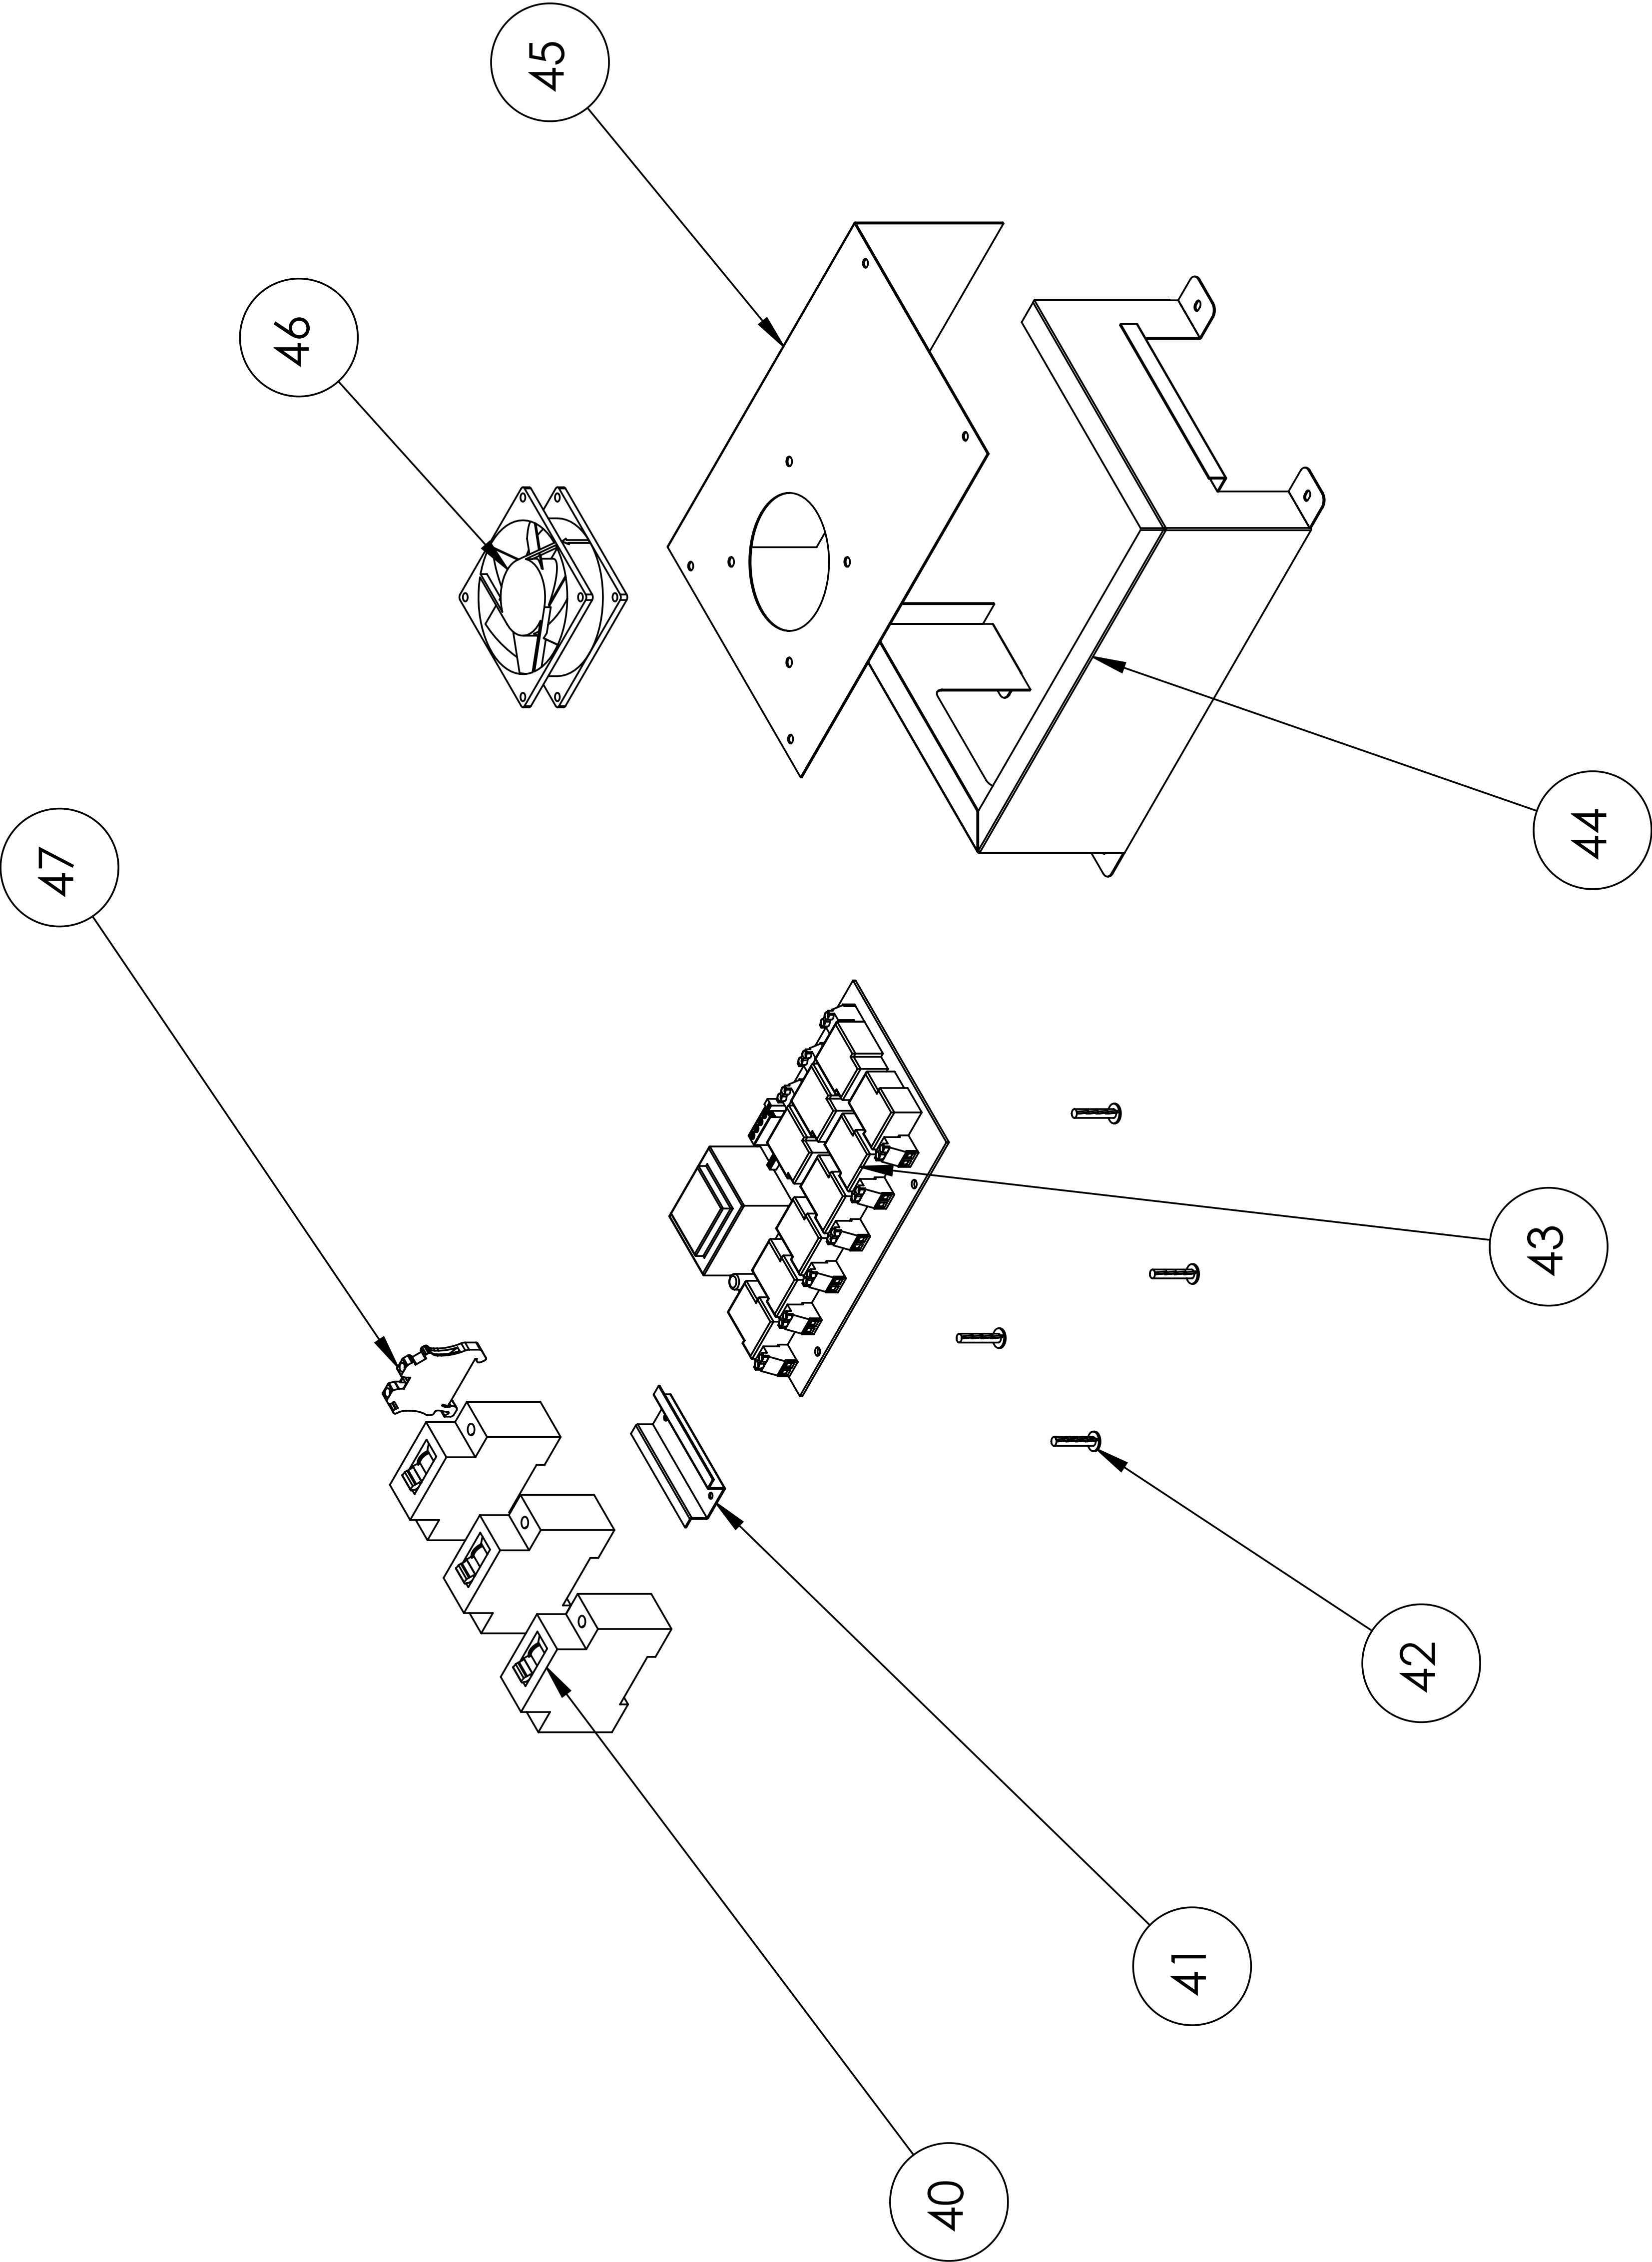

10.3 EXPLODED VIEW PARTS LIST (6-30 kW MODELS)


- | | |
|-----------------------------------|-------------------------------|
| 1. Control panel | 30. Heating element gasket |
| 2. LCD screen glass | 31. Main heat exchanger |
| 3. Control knobs | 32. Manuel air vent |
| 4. Mainboard | 33. Float water level sensor |
| 5. Control panel rear cover | 34. Float sensor connector |
| 6. Panel fixing plate | 35. Float sensor o-ring |
| 7. Front boiler cover | 36. Limit thermostat |
| 8. Top boiler cover | 37. Safety thermostat |
| 9. Main heat exchanger group | 38. CH temperature NTC sensor |
| 10. Left chassis | 39. Copper return pipe |
| 11. Earth connection | 40. RCD Device |
| 12. Cable gland | 41. Mounting rail |
| 13. Cable fixing plate | 42. Plastic spacers |
| 14. Expansion tank top fixer | 43. Relay board |
| 15. Boiler main chassis | 44. Relay board lower cover |
| 16. Right chassis | 45. Relay board upper cover |
| 17. Expansion tank | 46. Relay board cooling fan |
| 18. Expansion tank copper pipe | 47. Neutral cable terminal |
| 19. Relay board mounting plate | |
| 20. Relay board group | |
| 21. Expansion tank bottom fixer | |
| 22. Hydrolic group mounting plate | |
| 23. Circulation pump | |
| 24. 3bar Safety valve | |
| 25. Return manifold (heat only) | |
| 26. Insulator caps | |
| 27. Heating elements | |
| 28. 3/4" gasket | |
| 29. Copper flow pipe (heat only) | |

11. EXPLODED VIEW (32-40kW MODELS)

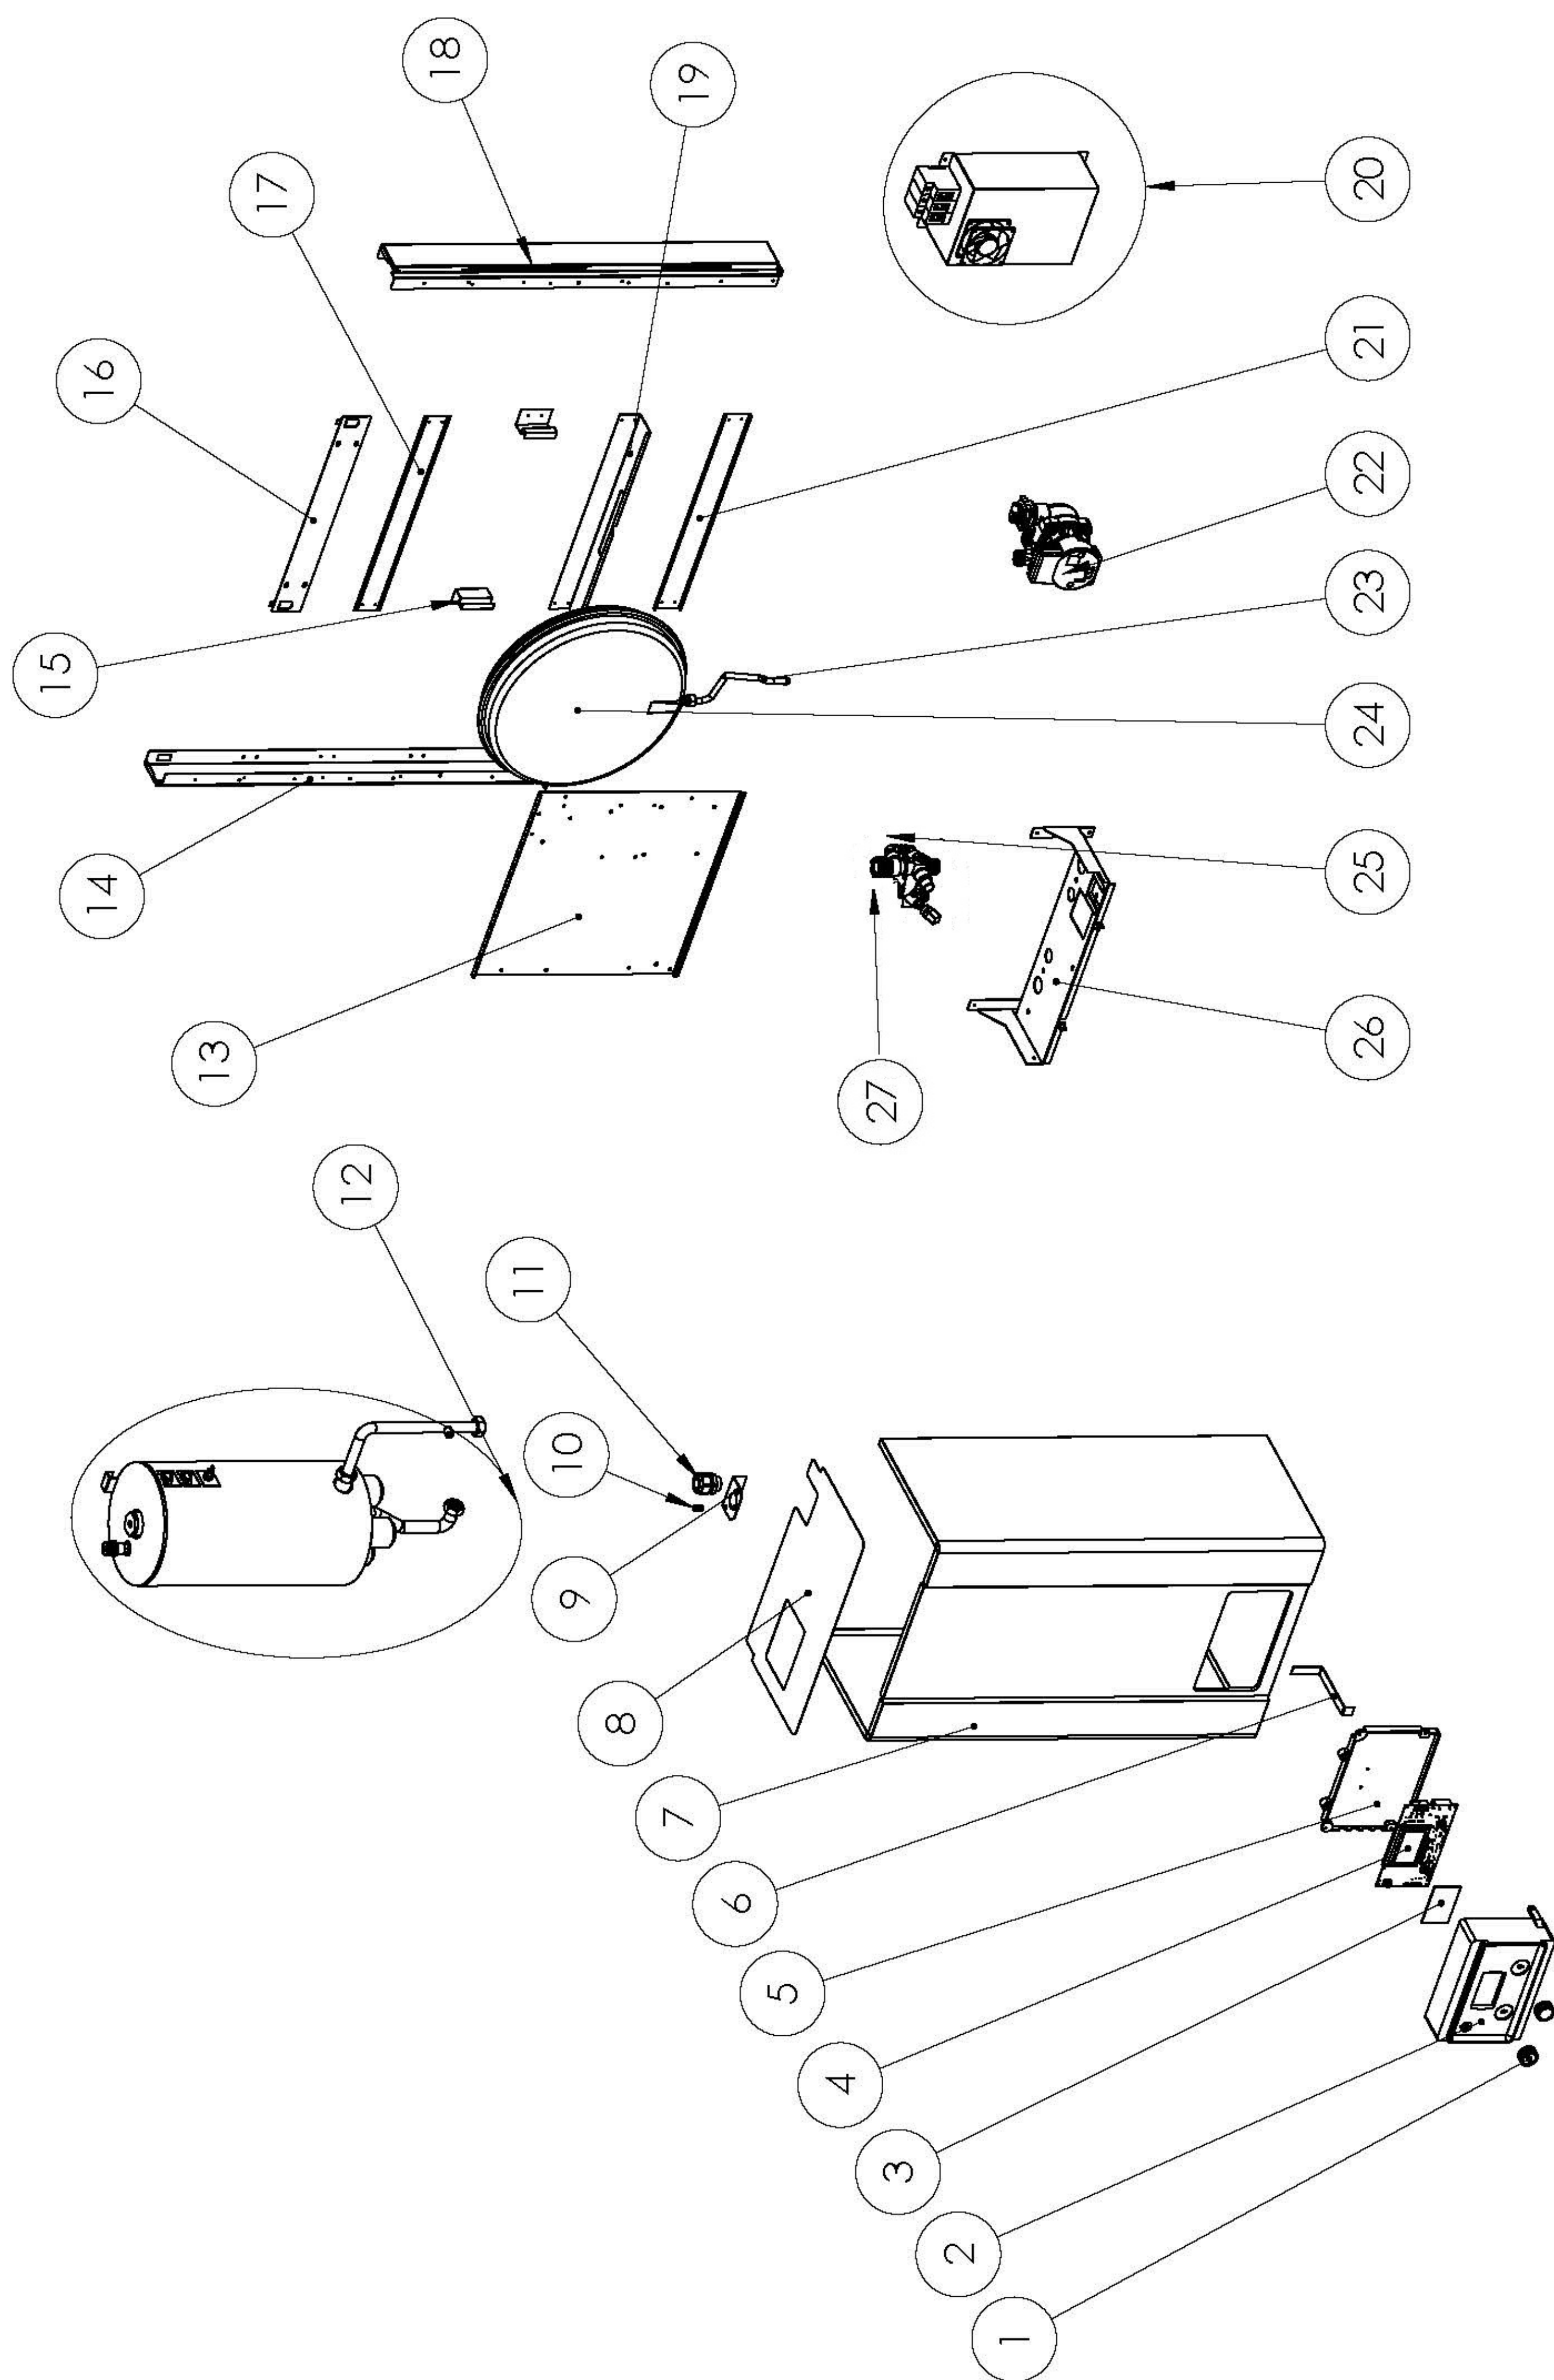


- ❖ The manufacturer reserves the right to make changes to the parts and design of the boiler.

11.1 MAIN HEAT EXCHANGER GROUP DETAIL (32-40 kW MODELS)

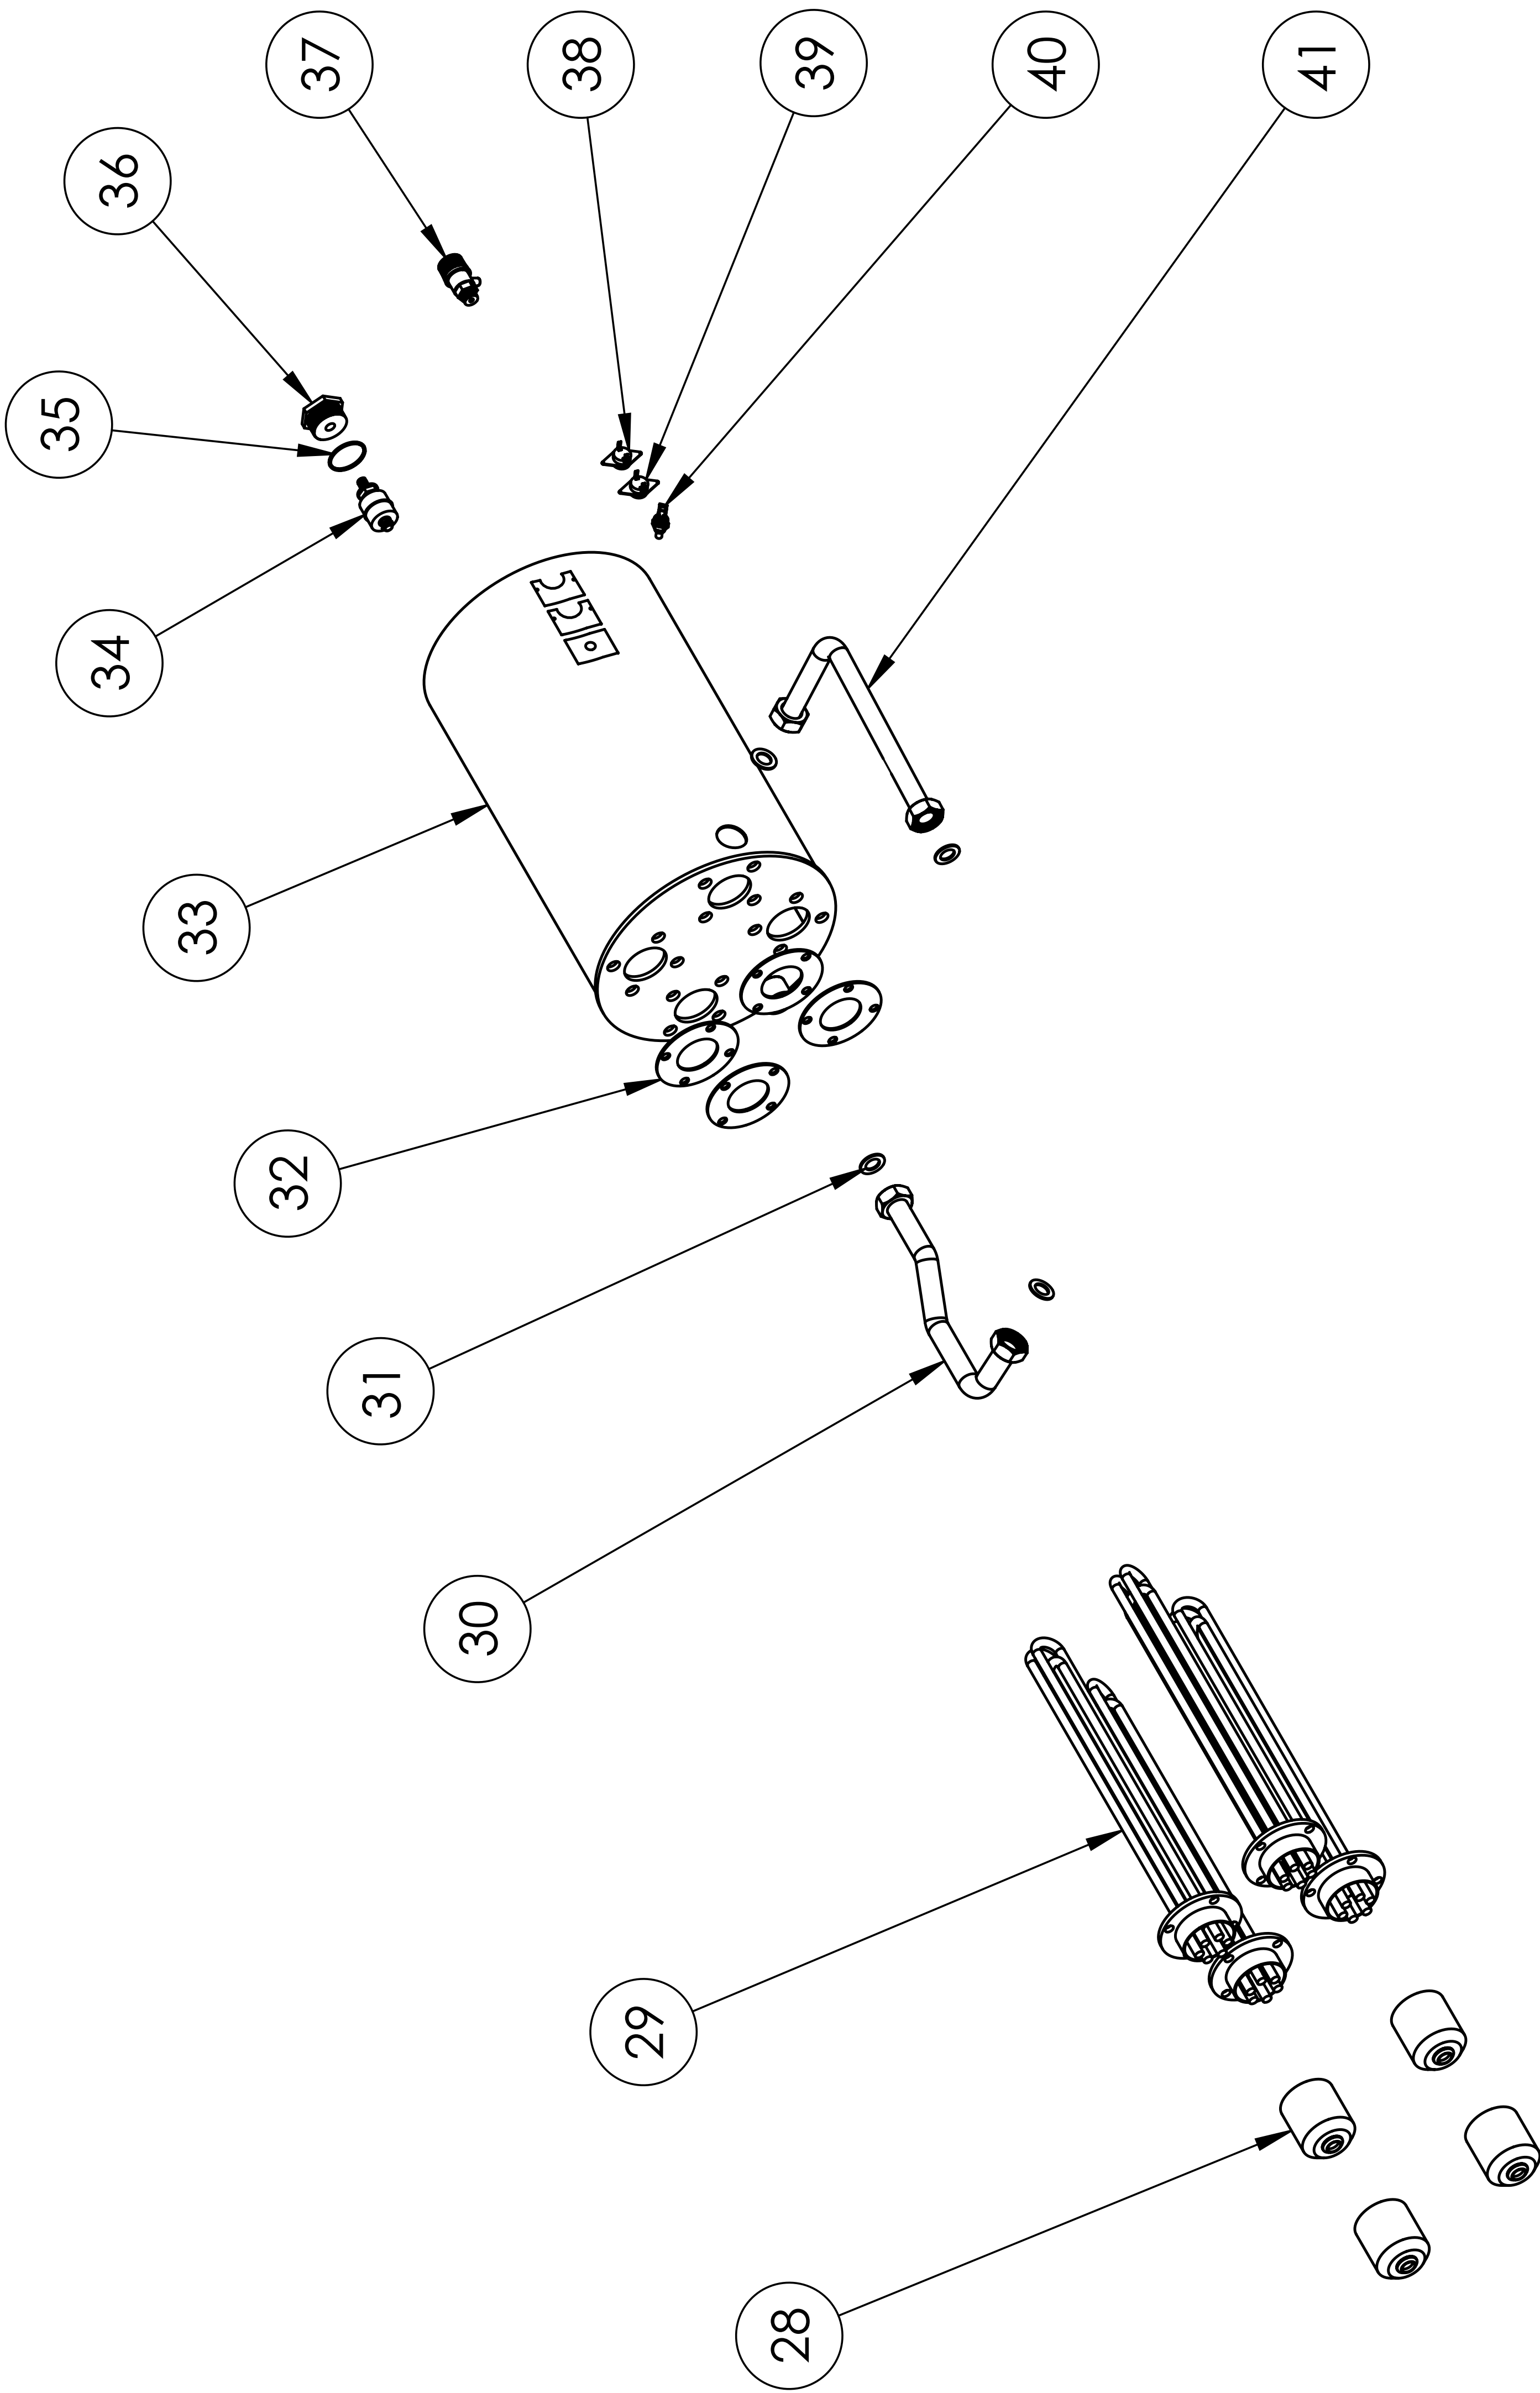


11.2 RELAY BOARD GROUP DETAIL (32-40 kW MODELS)

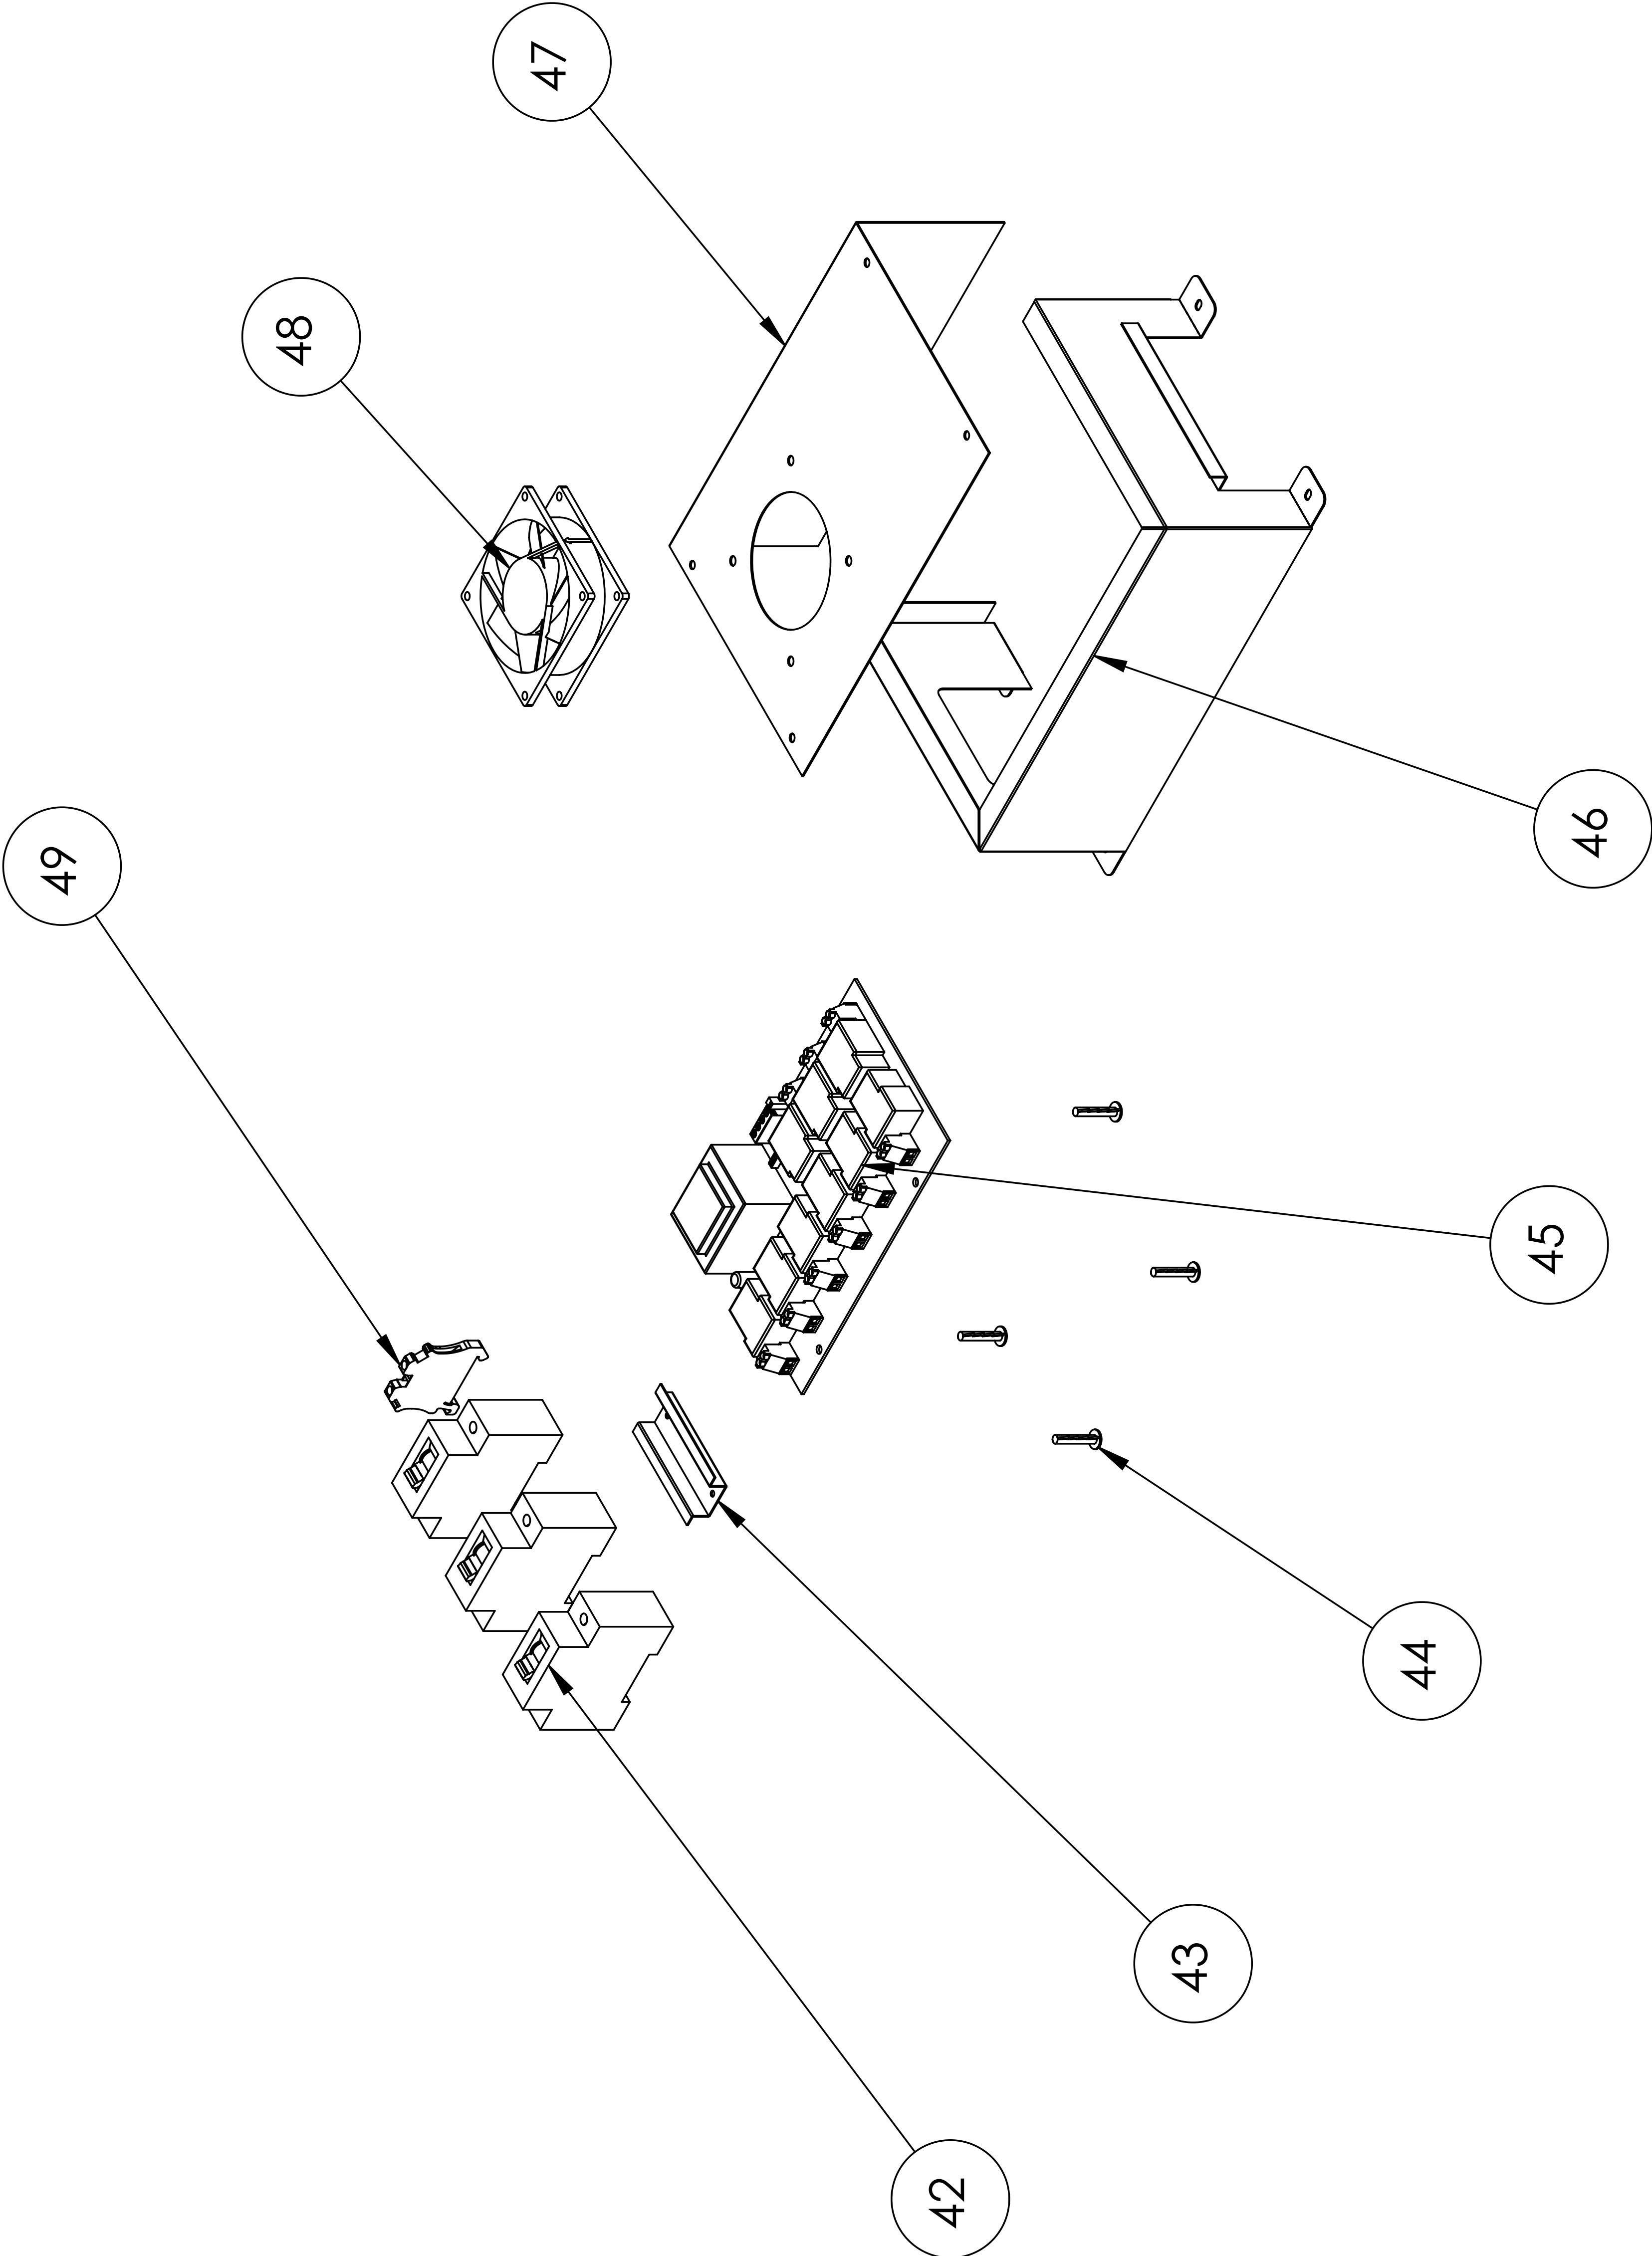

11.3 EXPLODED VIEW PARTS LIST (32-40 kW MODELS)


- | | |
|---|--|
| <ul style="list-style-type: none">1. Control knobs2. Control panel3. LCD screen glass4. Mainboard5. Control panel rear cover6. Panel fixing plate7. Front boiler cover8. Top boiler cover9. Cable fixing plate10. Earth connection11. Cable gland12. Main heat exchanger group13. Boiler main chassis14. Left chassis15. Expansion tank fixers16. Wall mounting plate17. Upper support plate18. Right chassis19. Expansion tank support plate20. Relay board group21. Lower support plate22. Circulation pump23. Expansion tank copper pipe24. Expansion tank25. Return manifold (heat only)26. Hydrolic group mounting plate27. 3bar safety valve28. Insulator caps29. Heating elements30. Copper flow pipe31. 3/4" gasket | <ul style="list-style-type: none">32. Heating element gasket33. Main heat exchanger34. Float water level sensor35. Float sensor o-ring36. Float sensor connector37. Manual air vent38. Limit thermostat39. Safety thermostat40. CH temperature NTC sensor41. Copper return pipe42. RCD Device43. Mounting rail44. Plastic spacers45. Relay board46. Relay board lower cover47. Relay board upper cover48. Relay board cooling fan49. Neutral cable terminal |
|---|--|

12. EXPLODED VIEW (50-80 kW MODELS)

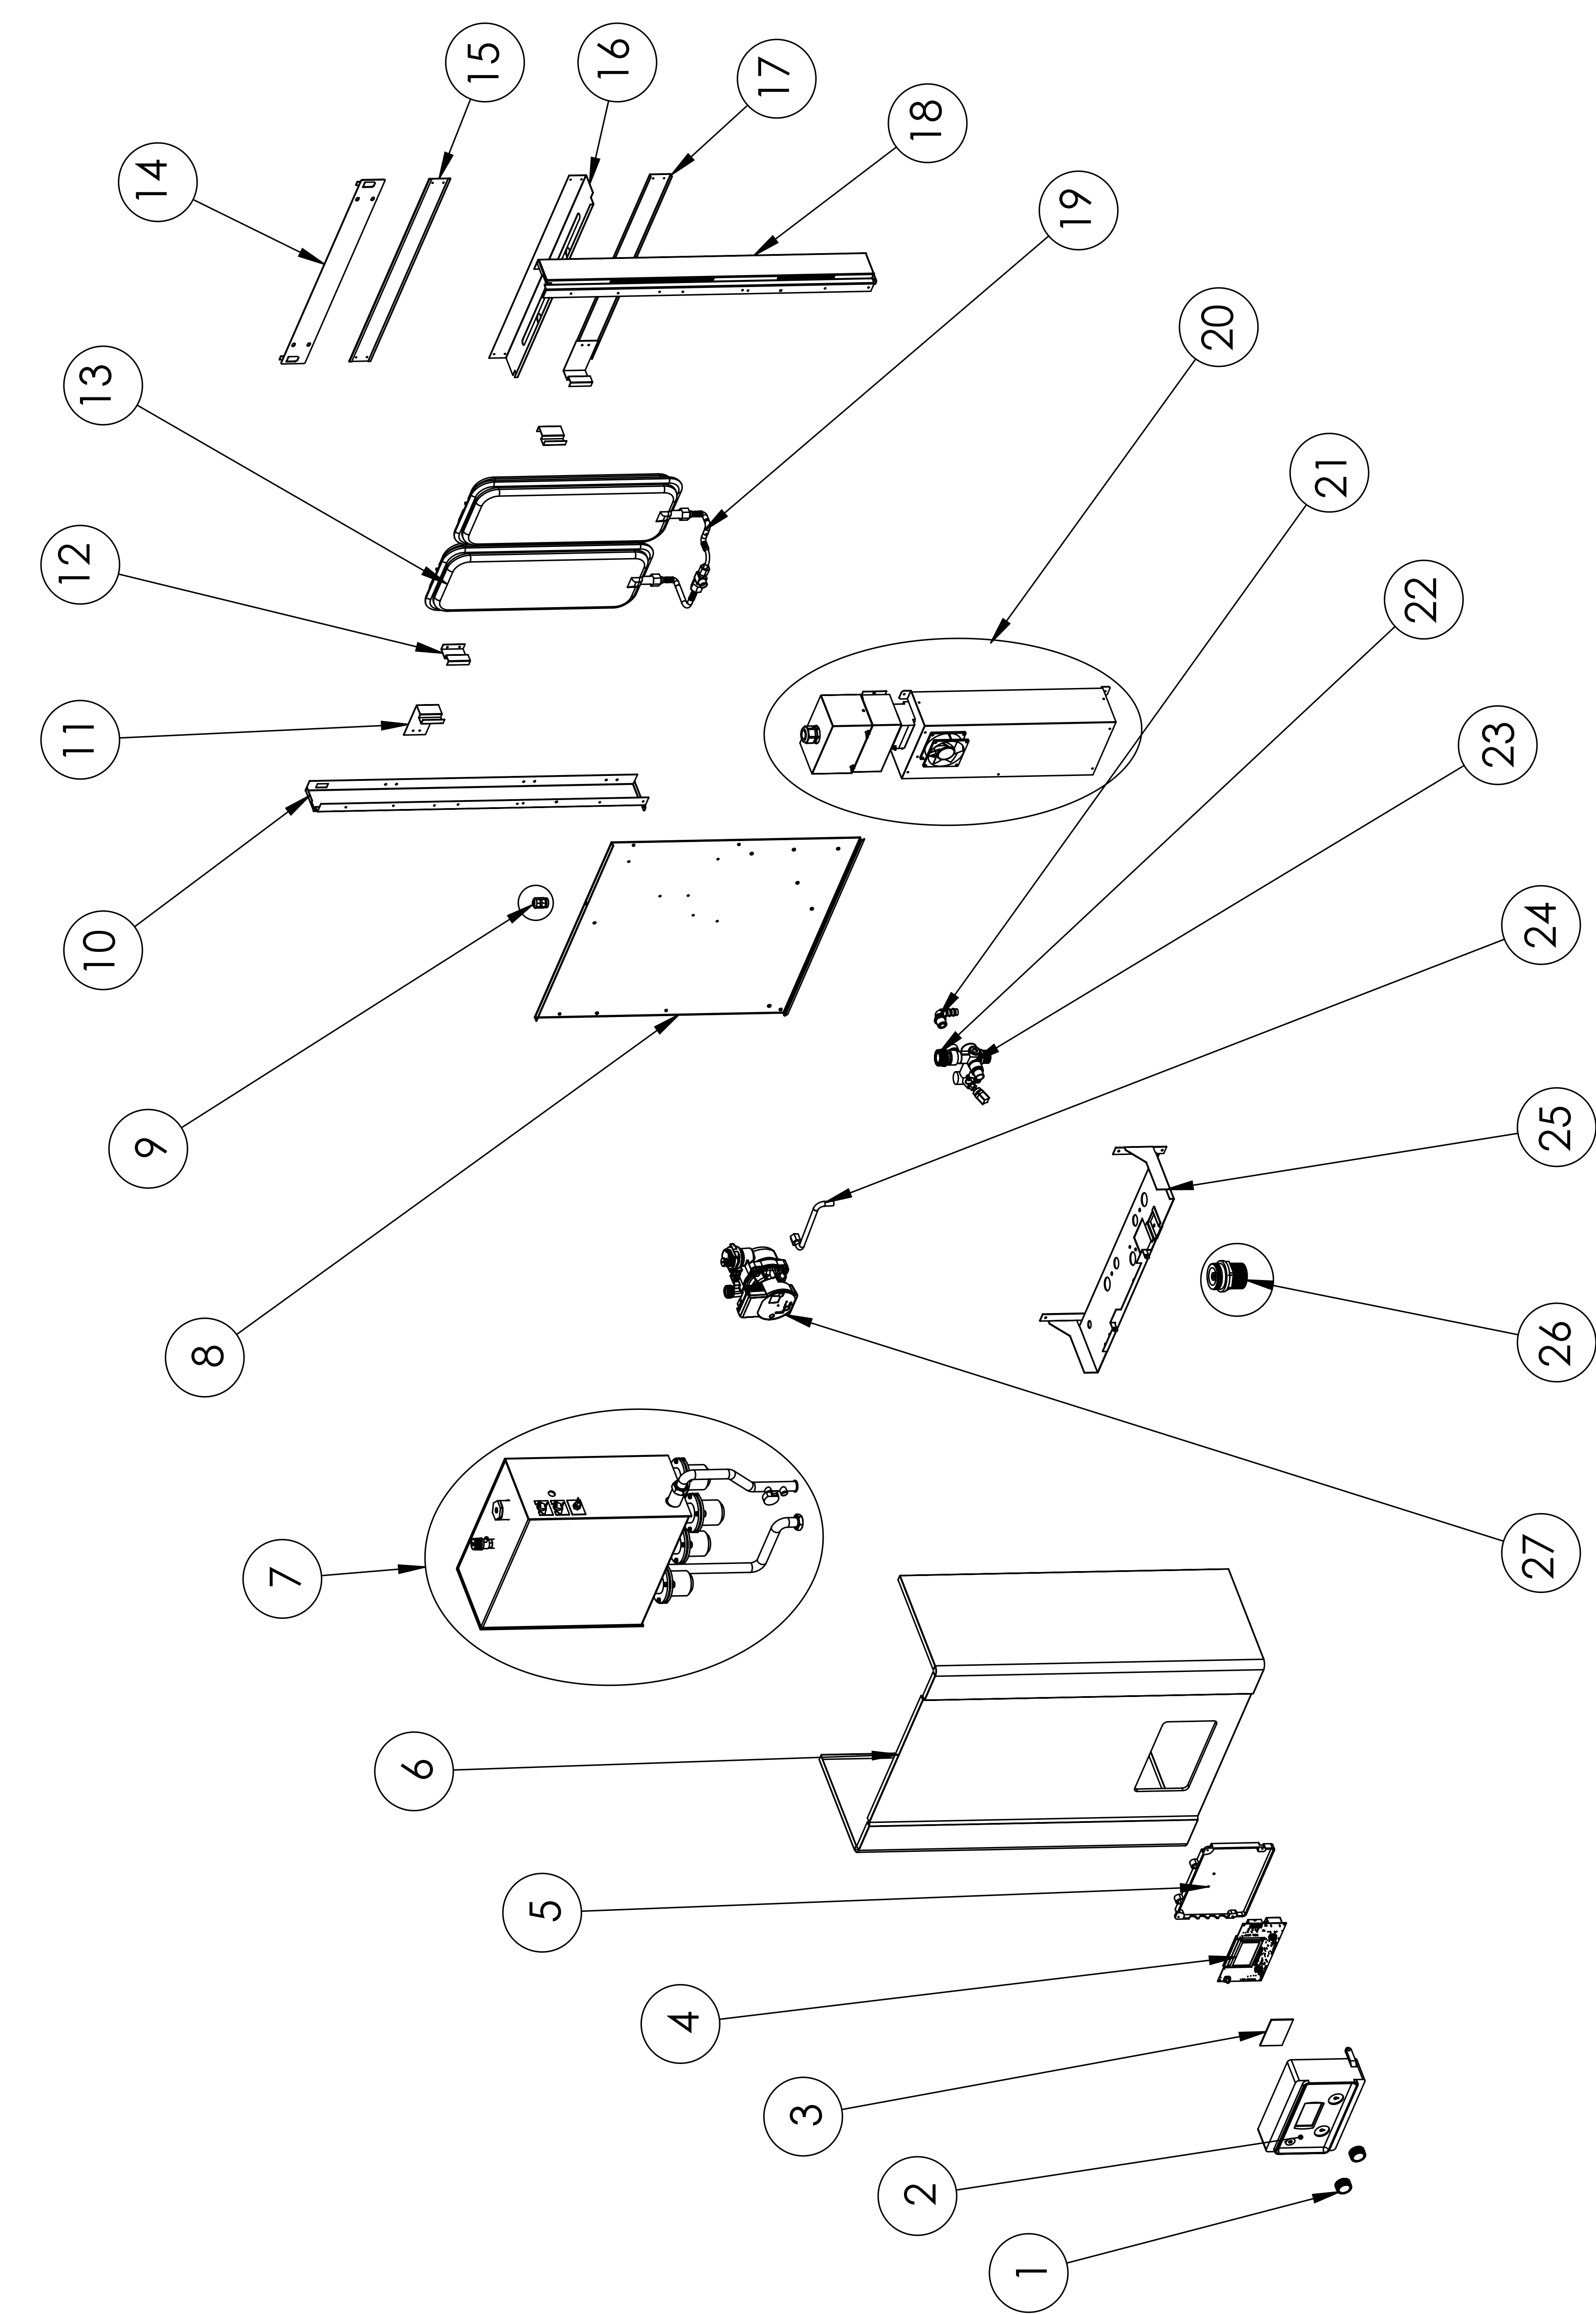


❖ The manufacturer reserves the right to make changes to the parts and design of the boiler.

12.1 MAIN HEAT EXCHANGER GROUP DETAIL (50-80 kW MODELS)

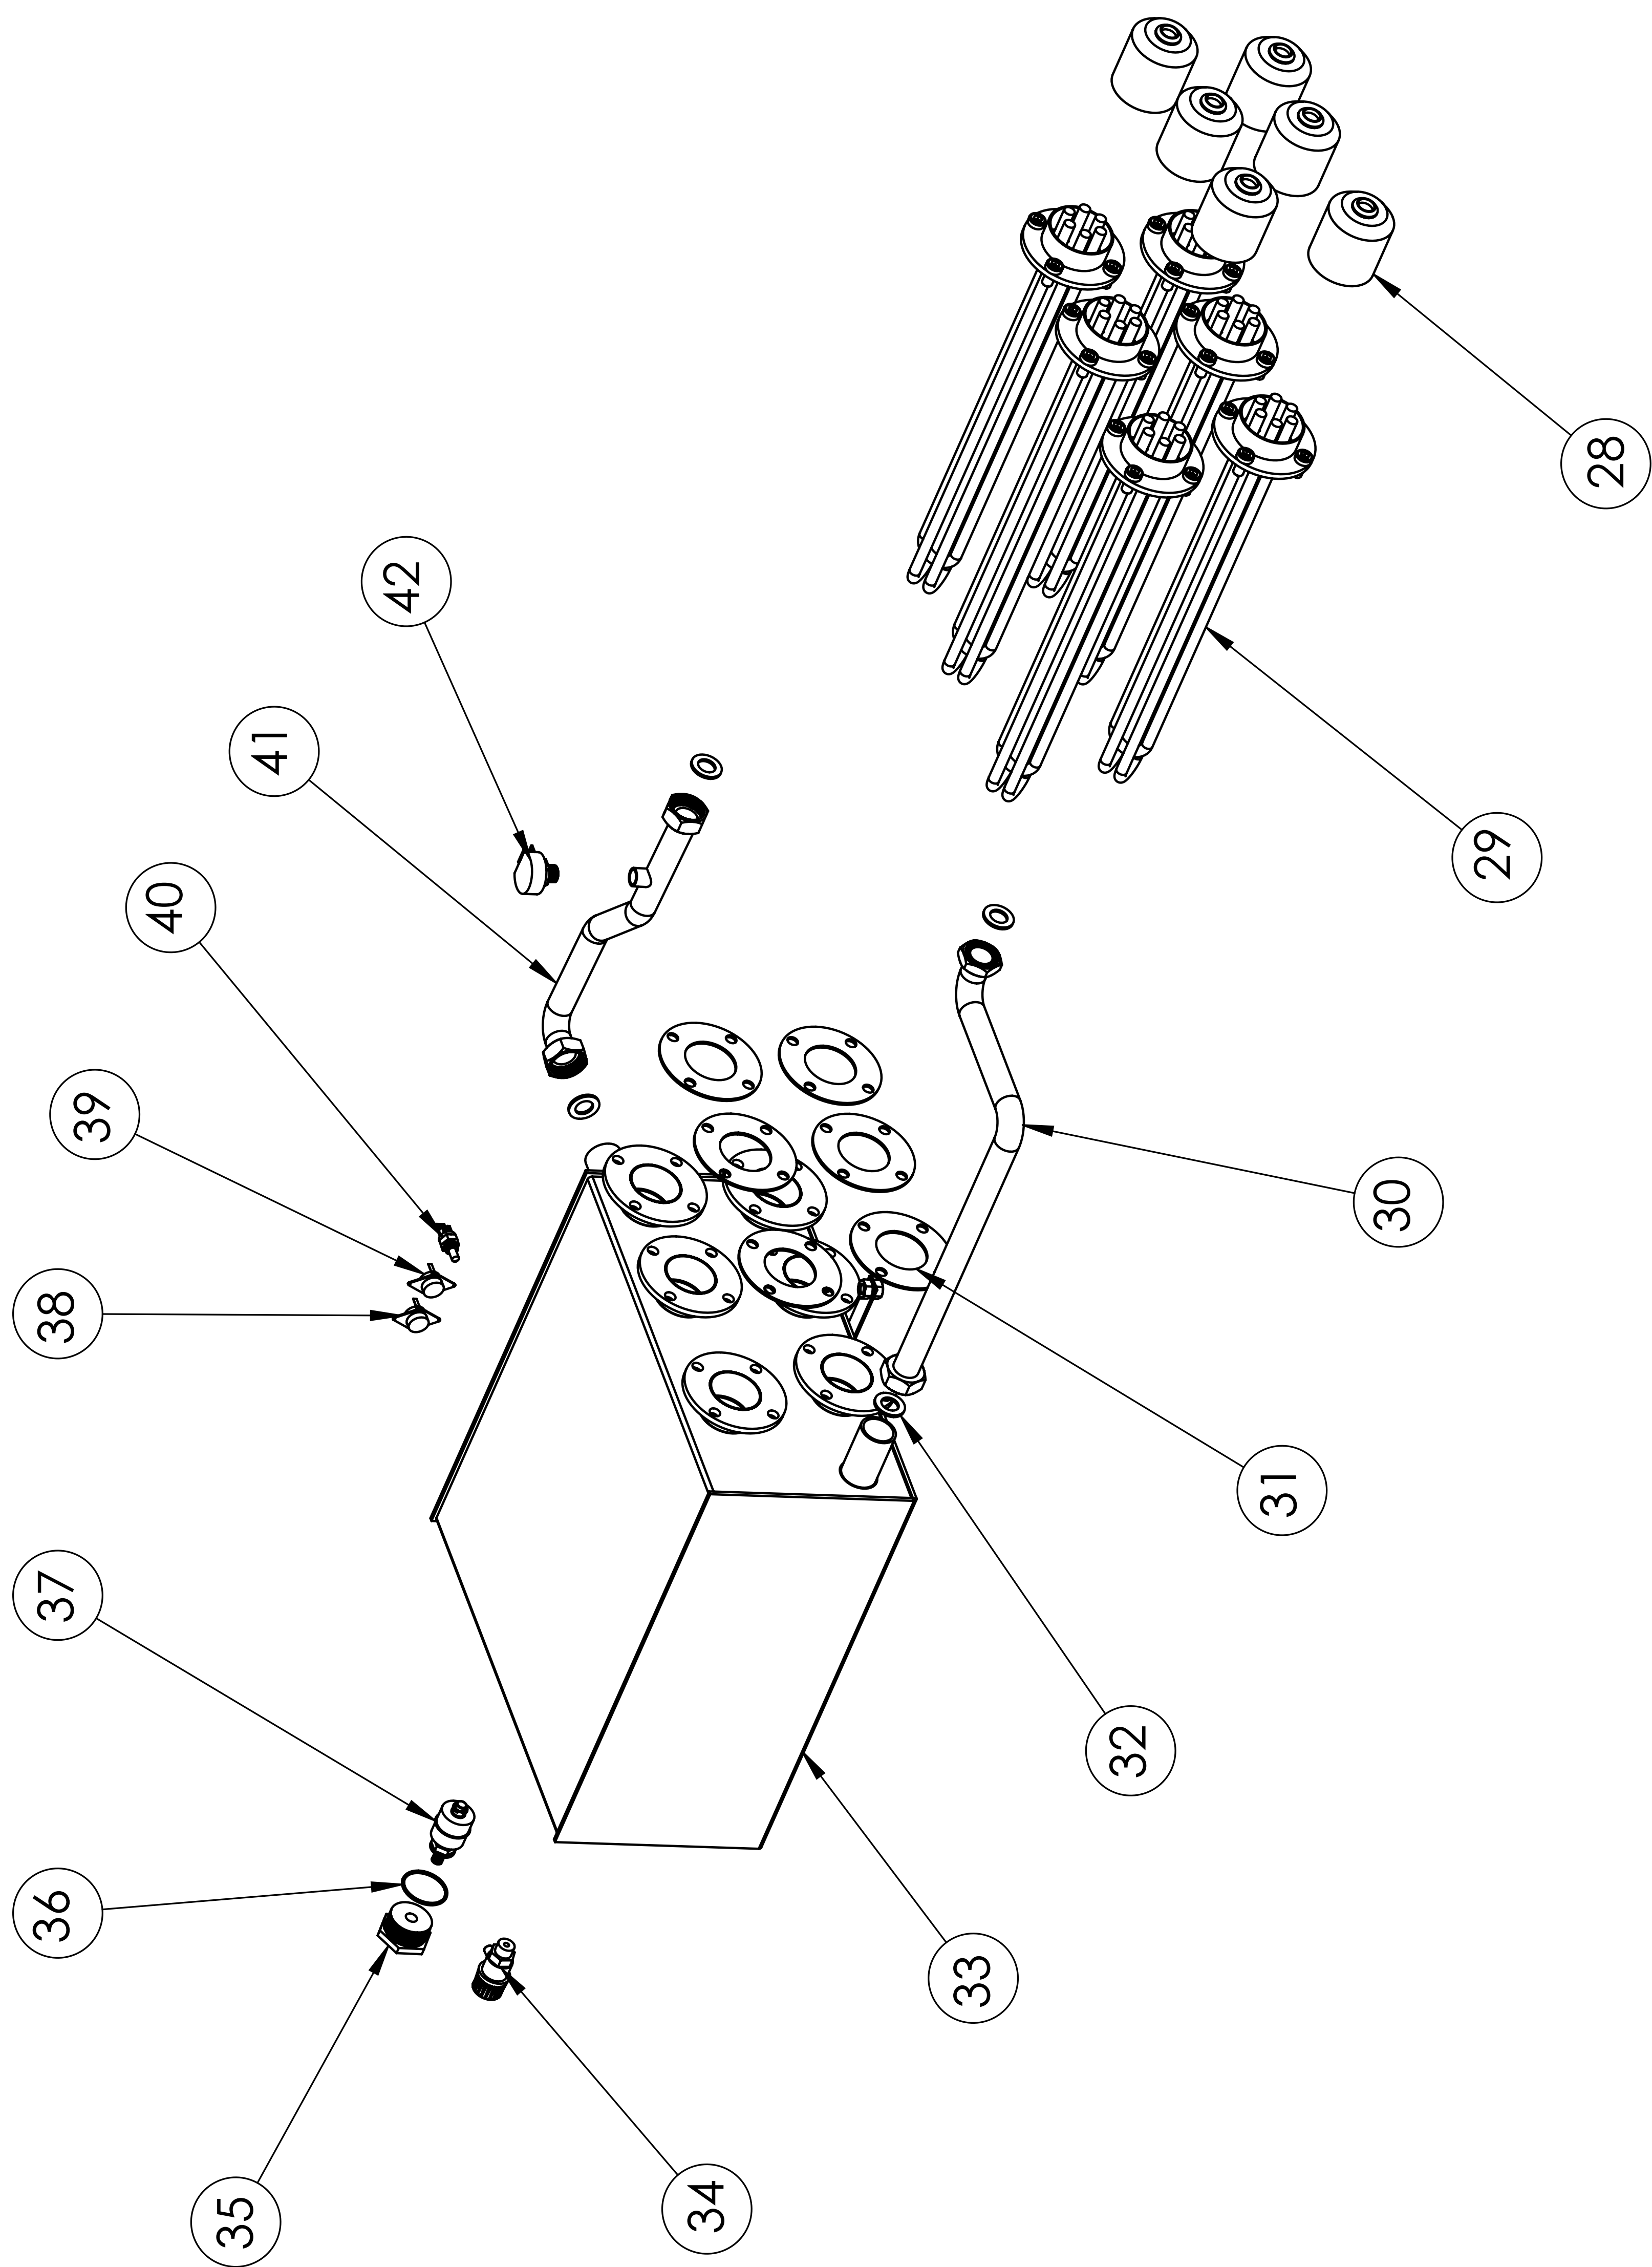


12.2 RELAY BOARD GROUP DETAIL(50-80 kW MODELS)

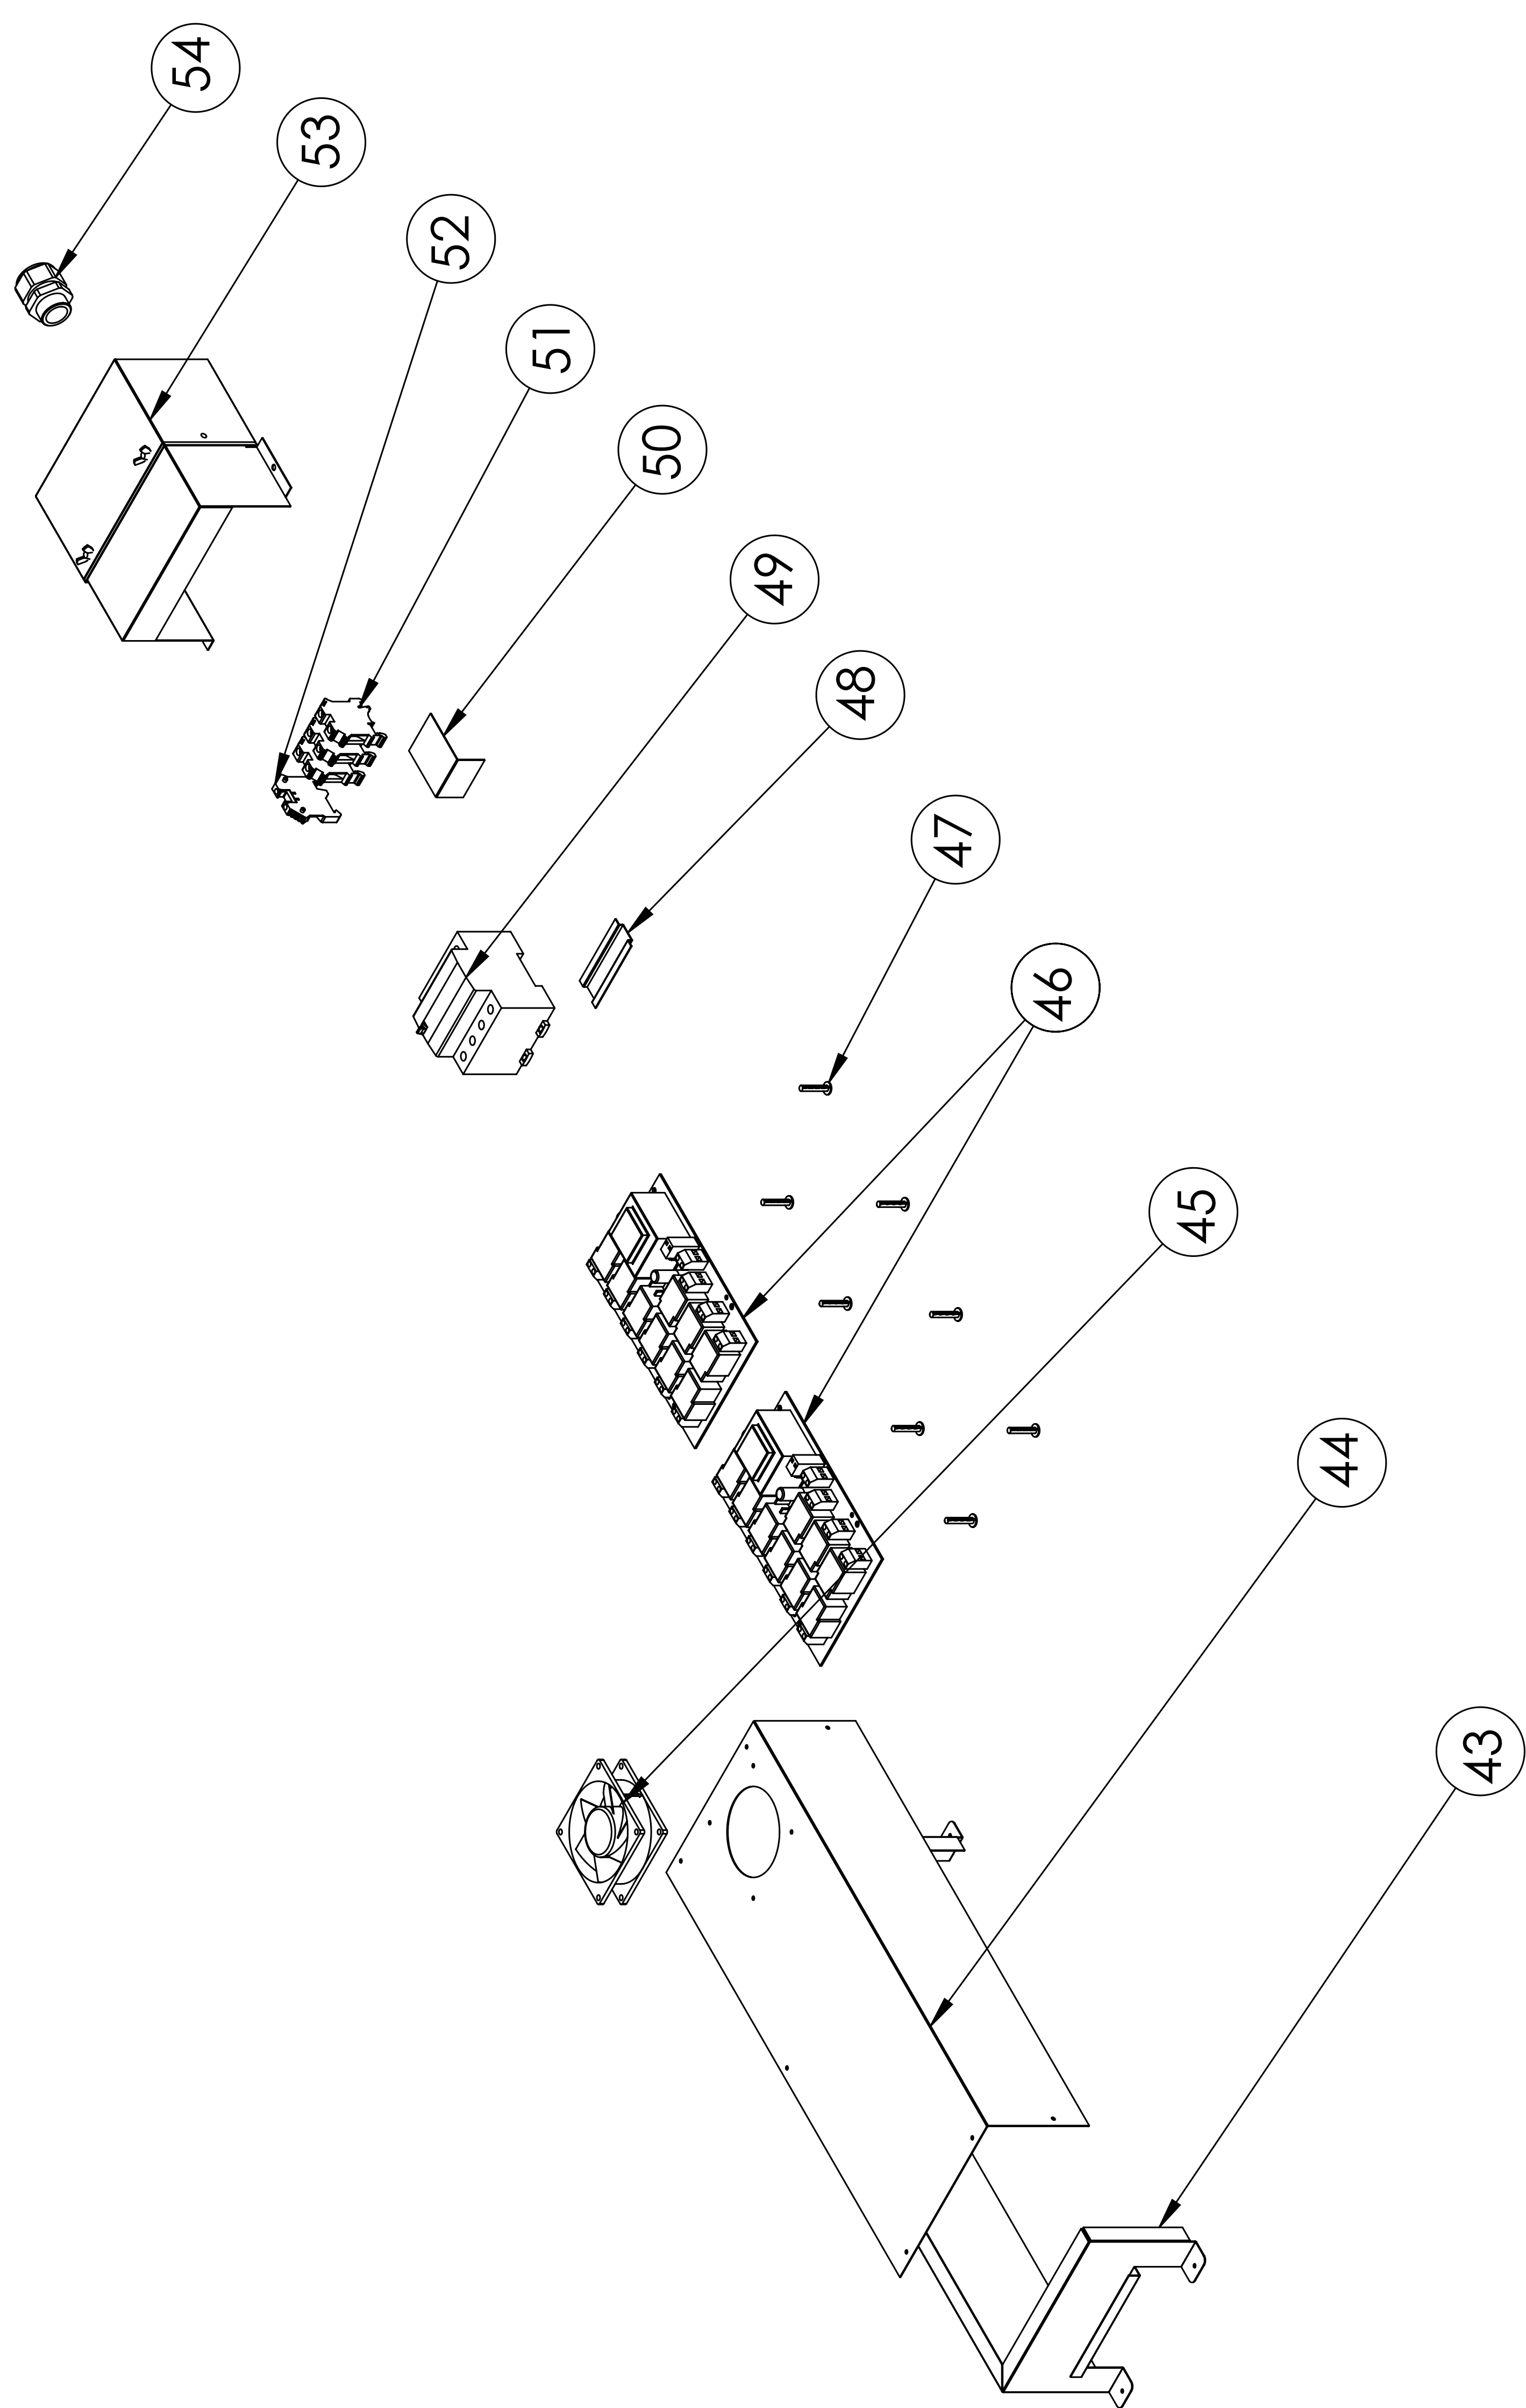

12.3 EXPLODED VIEW PARTS LIST (50-80 kW MODELS)


- | | |
|-------------------------------------|--|
| 1. Control knobs | 31. Heating element gasket |
| 2. Control panel | 32. 3/4" gasket |
| 3. LCD screen glass | 33. Main heat exchanger |
| 4. Mainboard | 34. Manuel air vent |
| 5. Control panel rear cover | 35. Float water level sensor connector |
| 6. Front boiler cover | 36. Float sensor o-ring |
| 7. Main heat exchanger group | 37. Float water level sensor |
| 8. Boiler main chassis | 38. Limit thermostat |
| 9. Earth connection | 39. Safety thermostat |
| 10. Left chassis | 40. CH temperature NTC sensor |
| 11. Expansion tank fixer1 | 41. Copper return pipe |
| 12. Expansion tank fixer 2 | 42. Water pressure sensor |
| 13. Expansion tank | 43. Relay board lower cover |
| 14. Wall mounting plate | 44. Relay board upper cover |
| 15. Upper support plate | 45. Relay board cooling fan |
| 16. Expansion tank support plate | 46. Relay boards |
| 17. Lower support plate | 47. Plastic spacers |
| 18. Right chassis | 48. RCD mounting rail |
| 19. Expansion tank dual copper pipe | 49. RCD device |
| 20. Relay board group | 50. Terminals support |
| 21. Safety valve discharge hose | 51. Phase cable terminals |
| 22. 3-Bar safety valve | 52. Neutral cable terminal |
| 23. Return manifold | 53. RCD device protective cover |
| 24. Expansion tank copper pipe | 54. Cable gland |
| 25. Hydrolic group mounting plate | |
| 26. Flow line connector | |
| 27. Circulation pump | |
| 28. Insulator caps | |
| 29. Heating elements | |
| 30. Copper flow pipe | |

13. EXPLODED VIEW (100 kW MODEL)

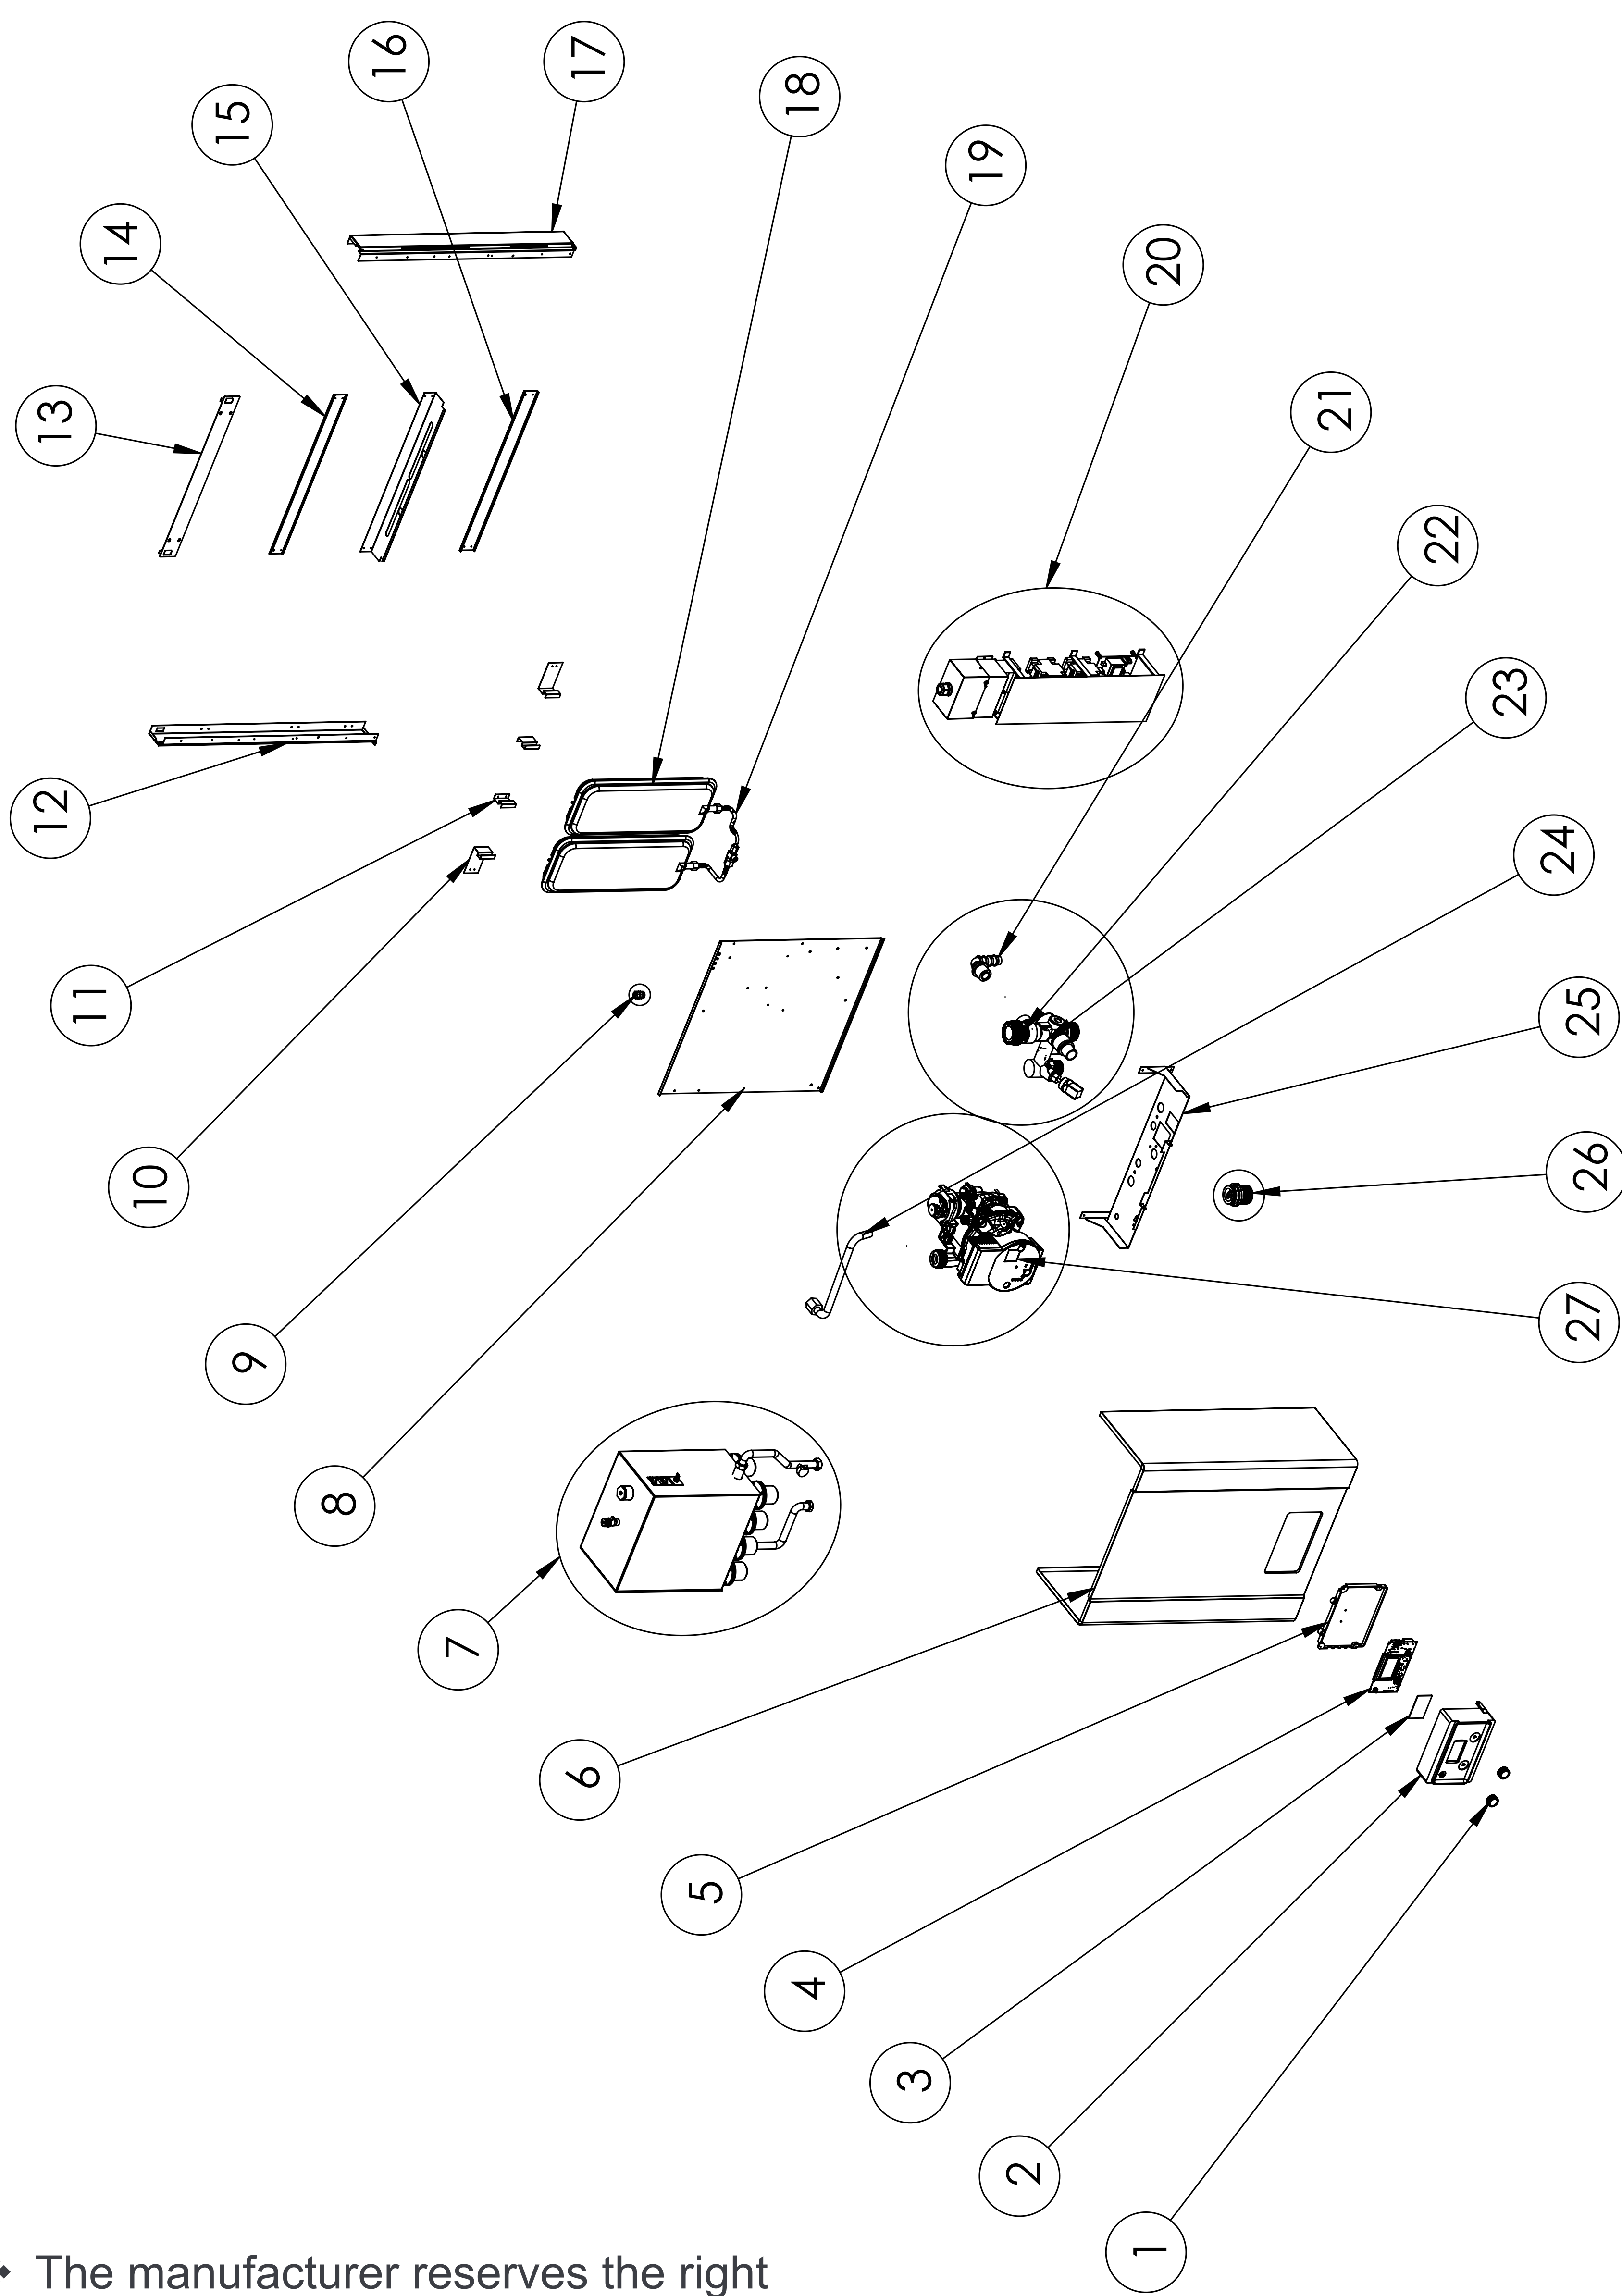


❖ The manufacturer reserves the right to make changes to the parts and design of the boiler.

13.1 MAIN HEAT EXCHANGER GROUP DETAIL (100 kW MODEL)

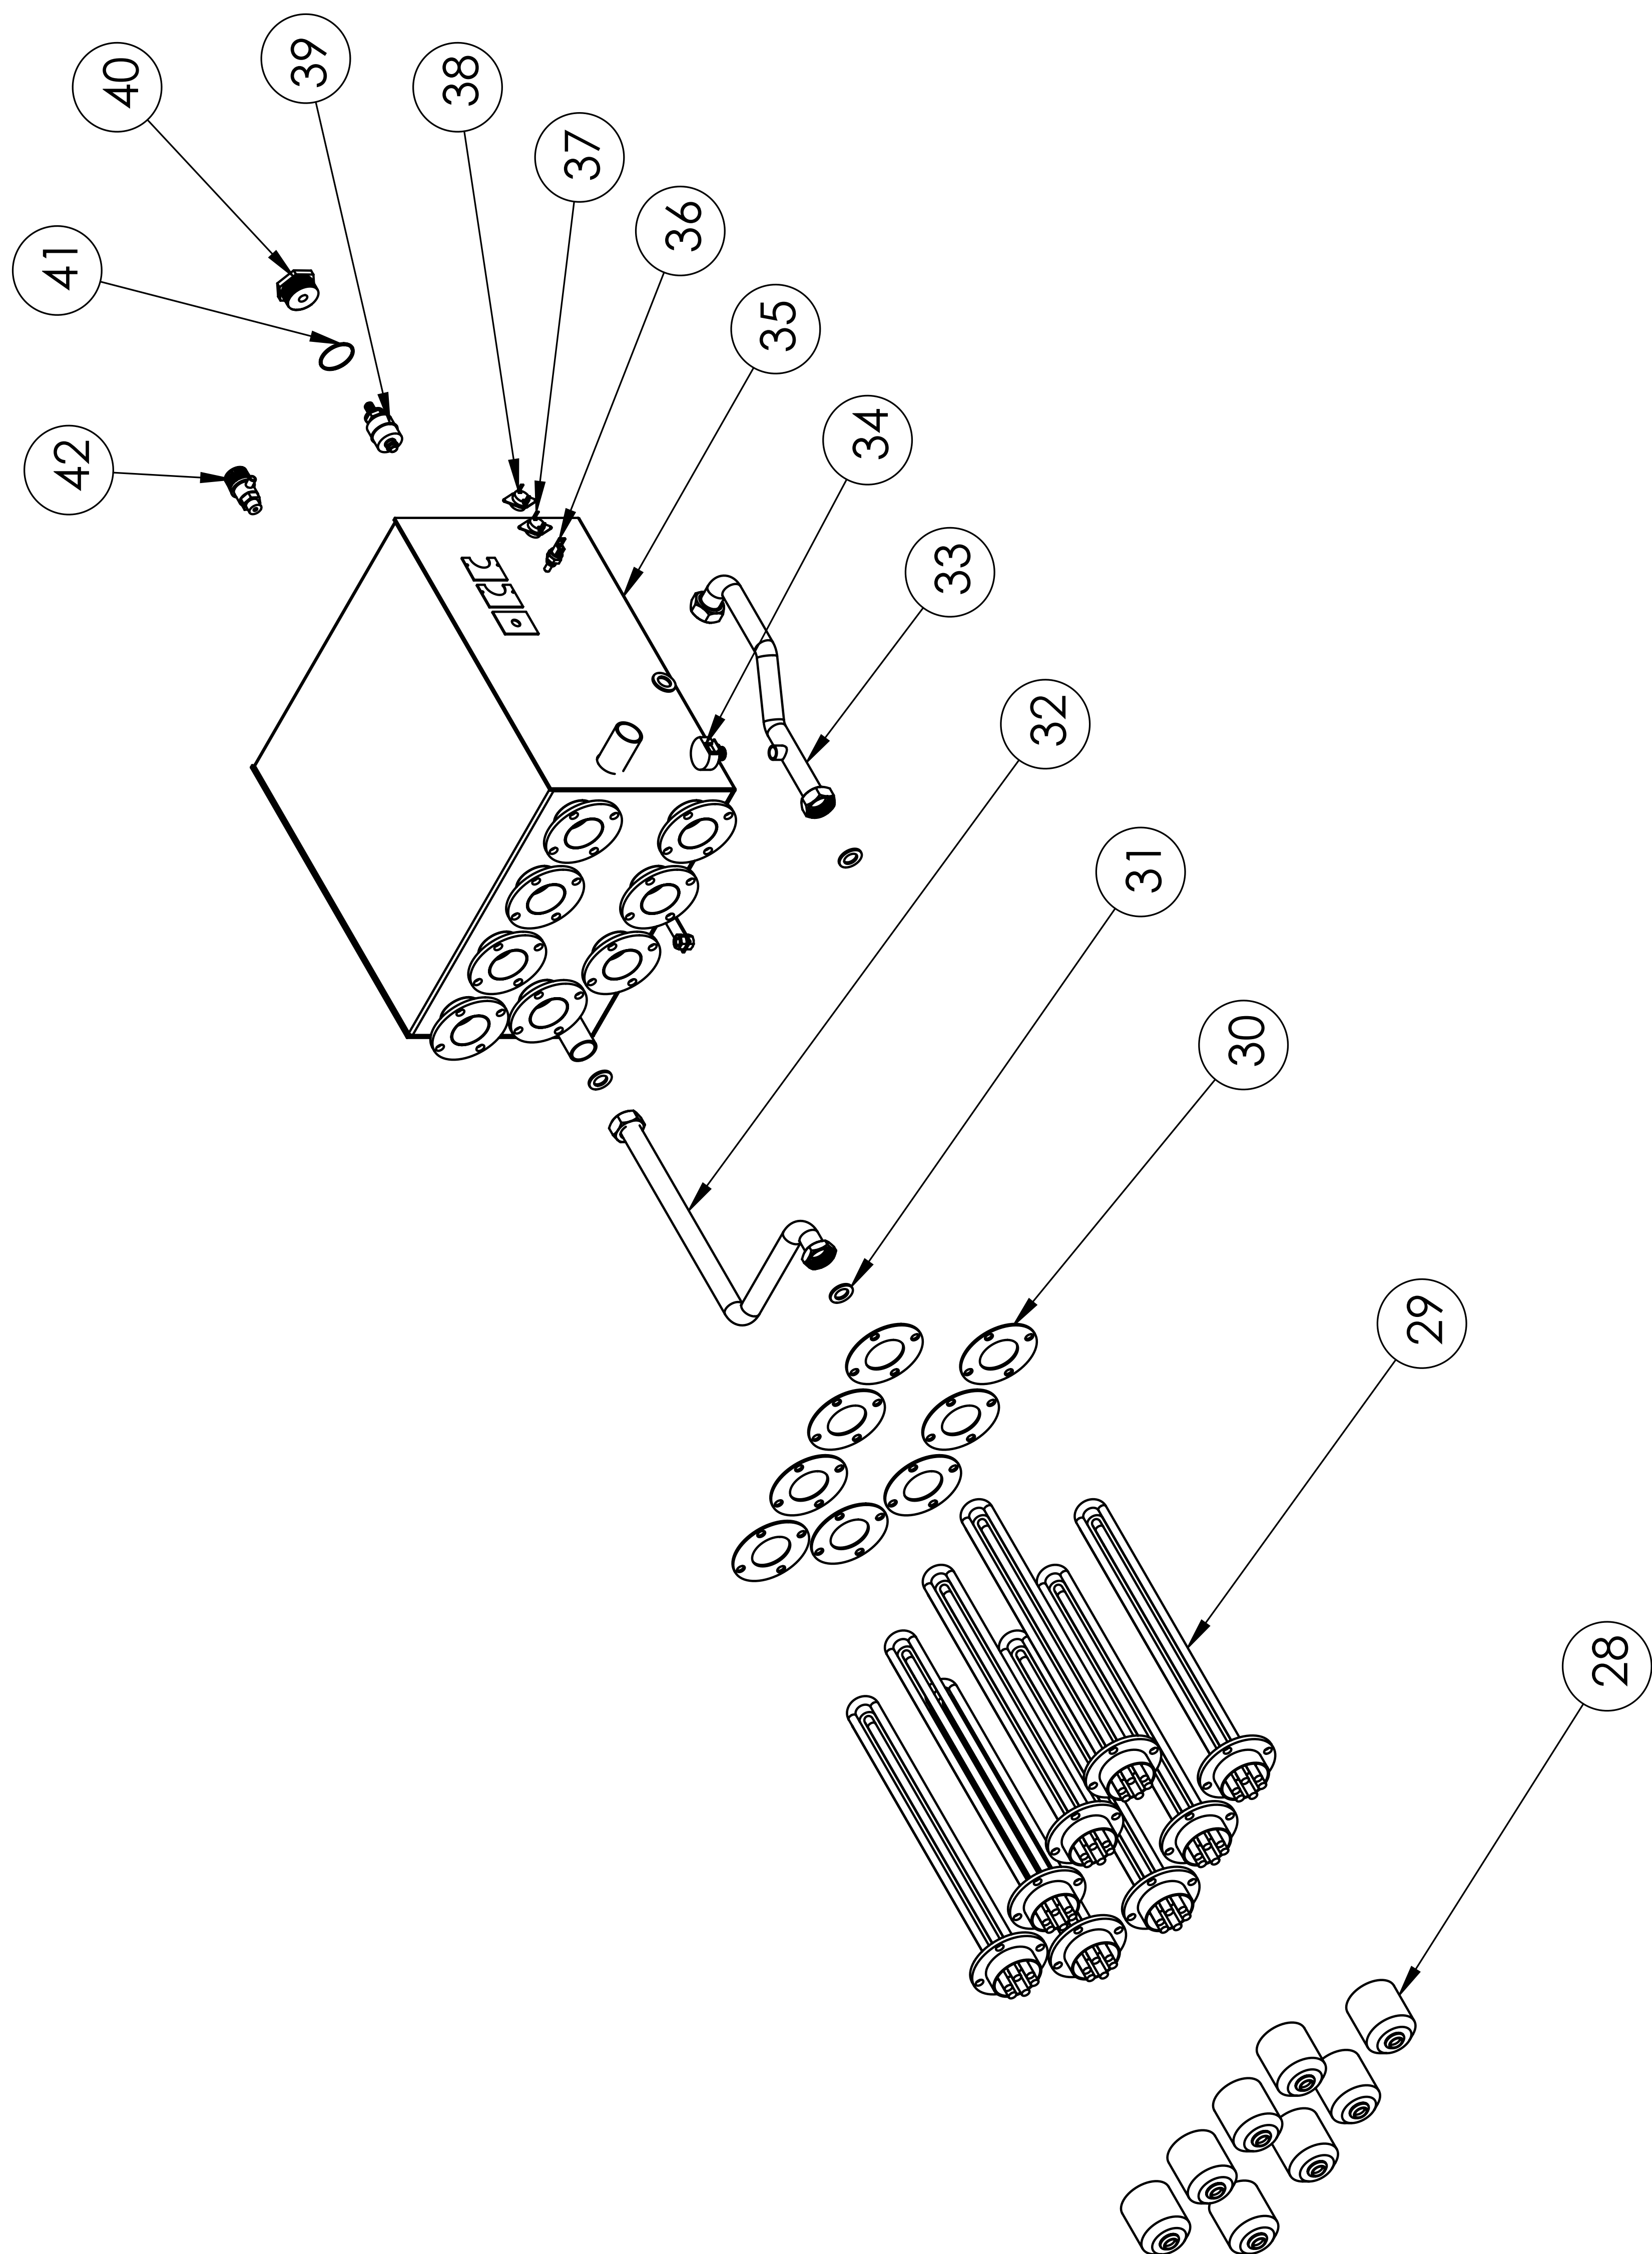

13.2 RELAY BOARD GROUP DETAIL (100 kW MODEL)

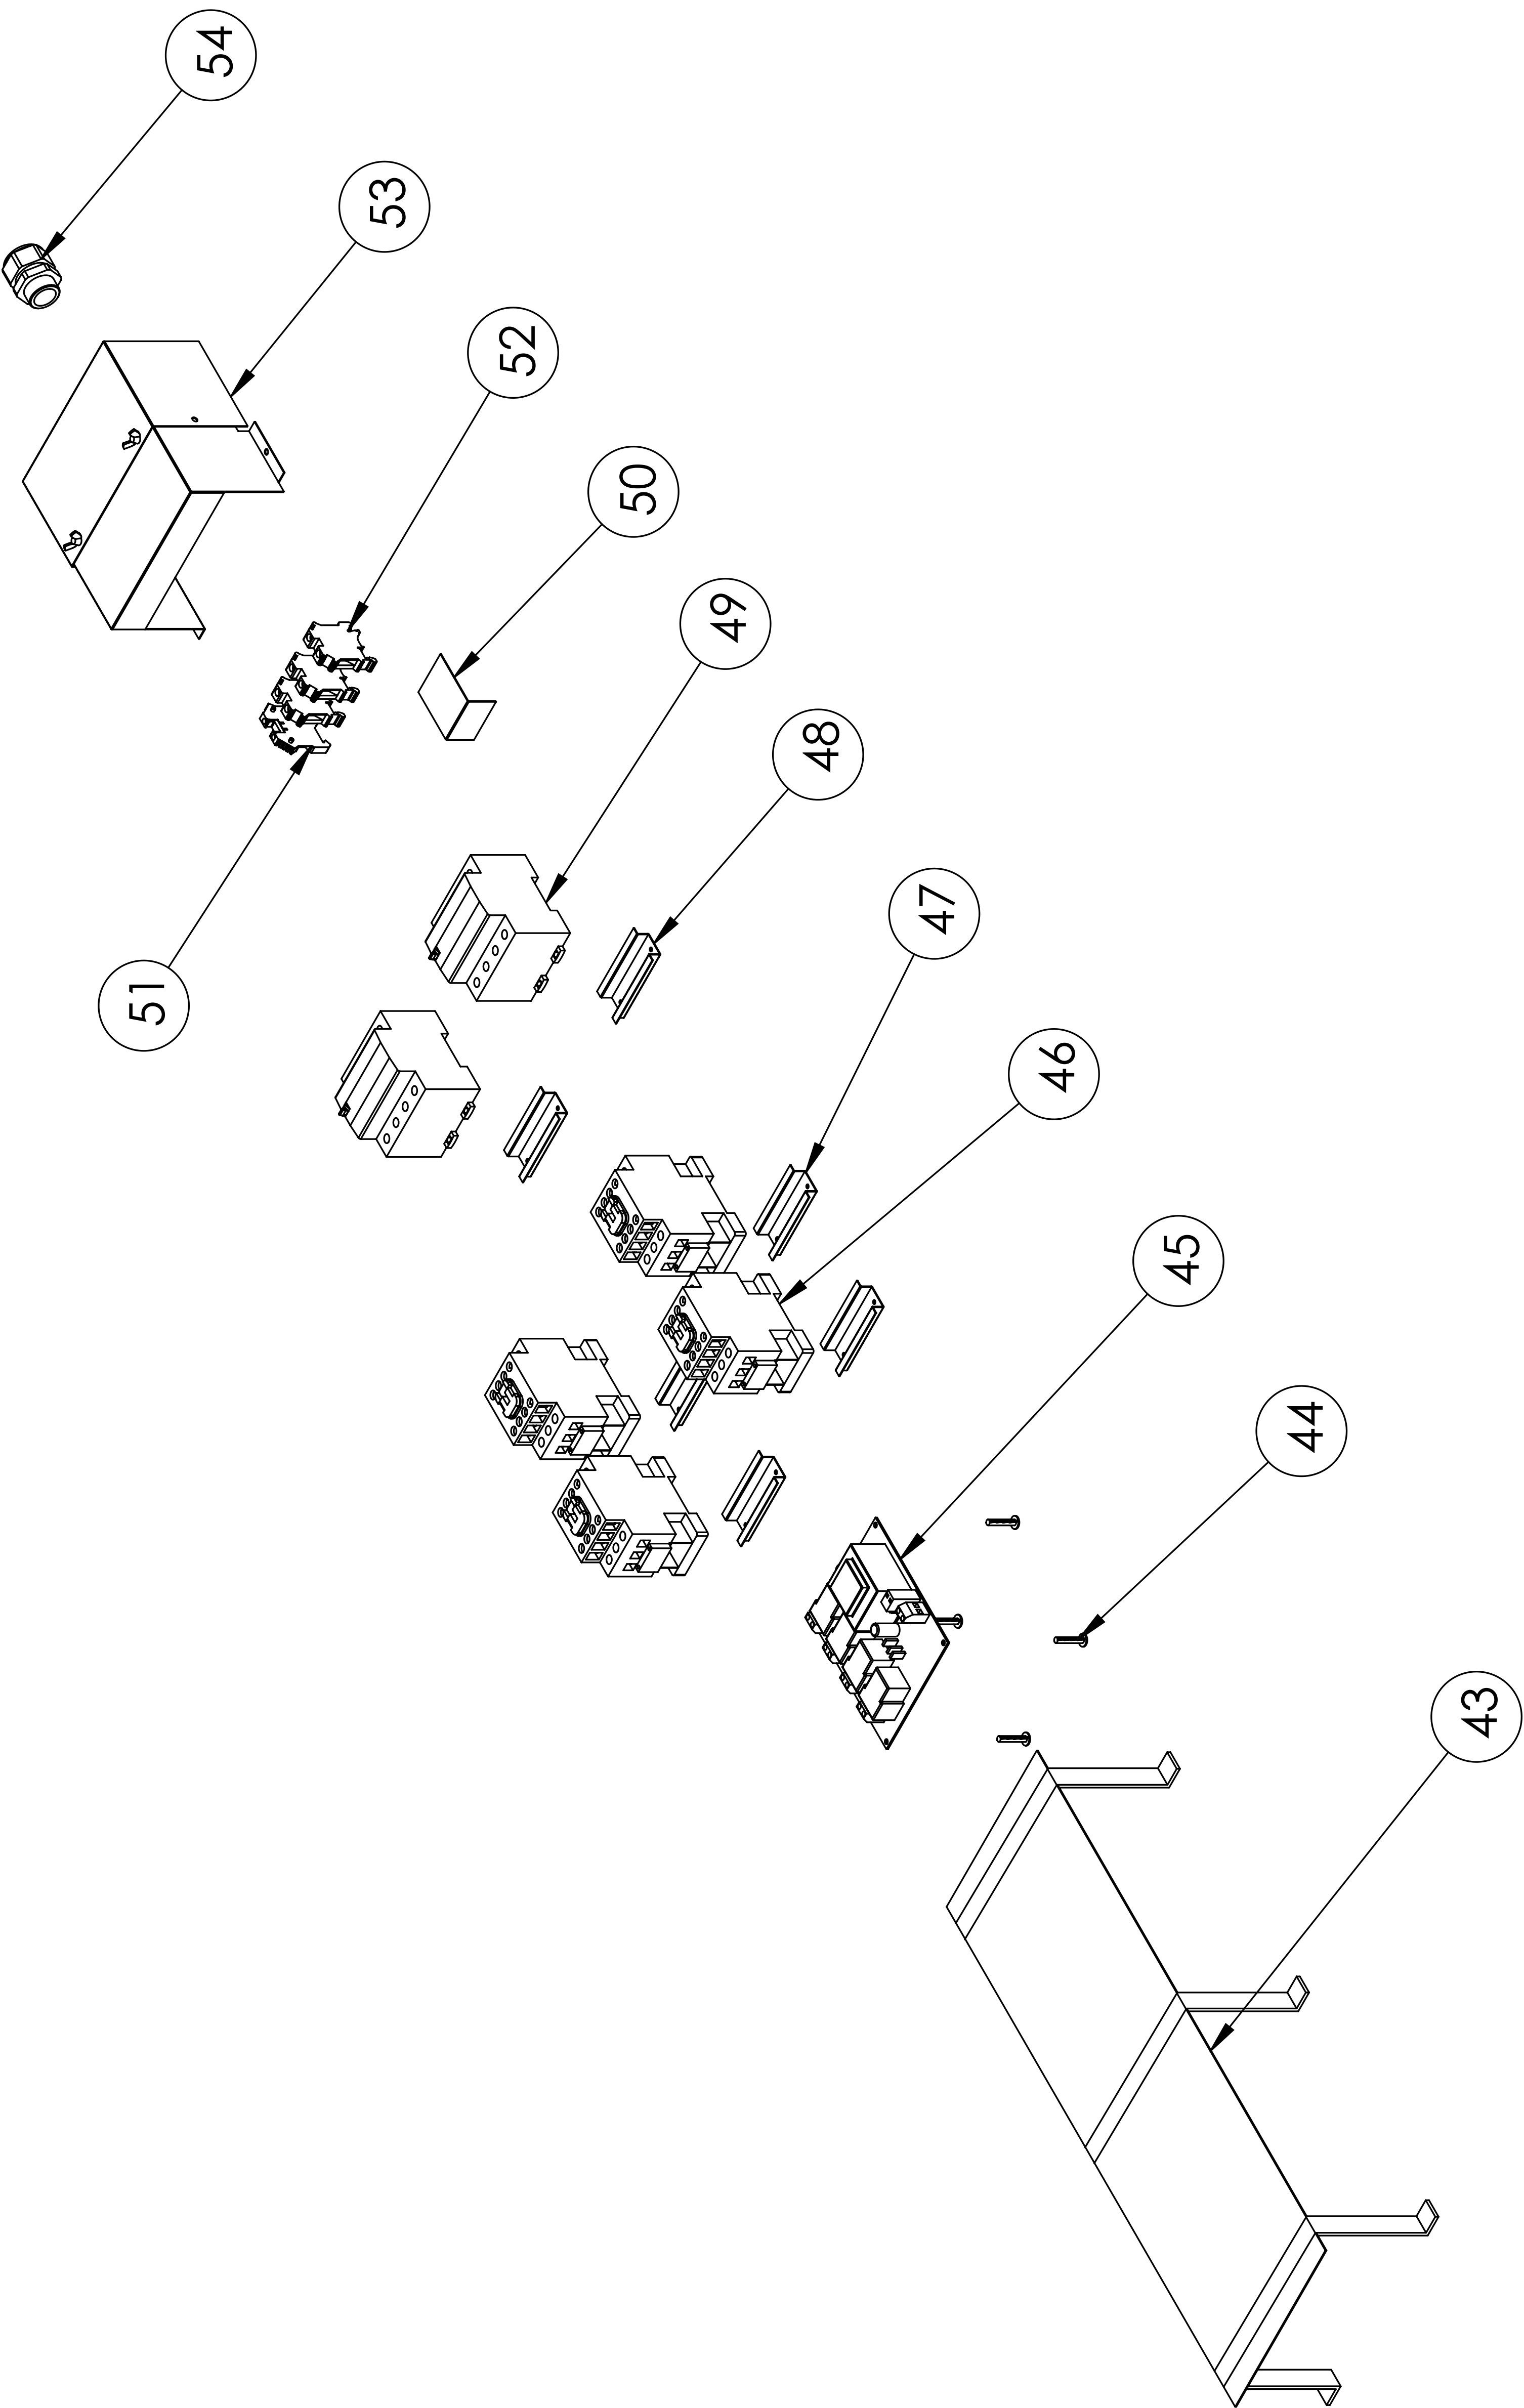


13.3 EXPLODED VIEW PARTS LIST (100 kW MODEL)

- | | |
|-------------------------------------|---------------------------------|
| 1. Control knobs | 31. 3/4" gasket |
| 2. Control panel | 32. Copper flow pipe |
| 3. LCD screen glass | 33. Copper return pipe |
| 4. Mainboard | 34. Water pressure sensor |
| 5. Control panel rear cover | 35. Main heat exchanger |
| 6. Front boiler cover | 36. CH temperature NTC sensor |
| 7. Main heat exchanger group | 37. Safety thermostat |
| 8. Boiler main chassis | 38. Limit thermostat |
| 9. Earth connection | 39. Float water level sensor |
| 10. Expansion tank fixer 1 | 40. Float sensor connector |
| 11. Expansion tank fixer 2 | 41. Float sensor o-ring |
| 12. Left chassis | 42. Manual air vent |
| 13. Wall mounting plate | 43. Relay board cover |
| 14. Upper support plate | 44. Plastic spacers |
| 15. Expansion tank support plate | 45. Relay board |
| 16. Lower support plate | 46. Contactors |
| 17. Right chassis | 47. Contactor mounting rail |
| 18. Expansion tank | 48. RCD mounting rail |
| 19. Expansion tank dual copper pipe | 49. RCD device |
| 20. Relay board group | 50. Terminals support |
| 21. Safety valve discharge hose | 51. Neutral cable terminal |
| 22. 3-Bar safety valve | 52. Phase cable terminals |
| 23. Return manifold | 53. RCD device protective cover |
| 24. Expansion tank copper pipe | 54. Cable gland |
| 25. Hydraulic group mounting plate | |
| 26. Flow line connector | |
| 27. Circulation pump | |
| 28. Insulator caps | |
| 29. Heating elements | |
| 30. Heating element gasket | |

14. DECOMISSIONING

- Use the on/off button to switch off the boiler.
- Disconnect the boiler from the power grid.
- Close the water inlet valve and all valves of the installation.
- Drain the water inside the boiler by turning the safety valve knob. The water will be discharged from the drain tube.
- Disconnect the installation connections and remove the boiler from the wall hanger.

15. DISPOSAL

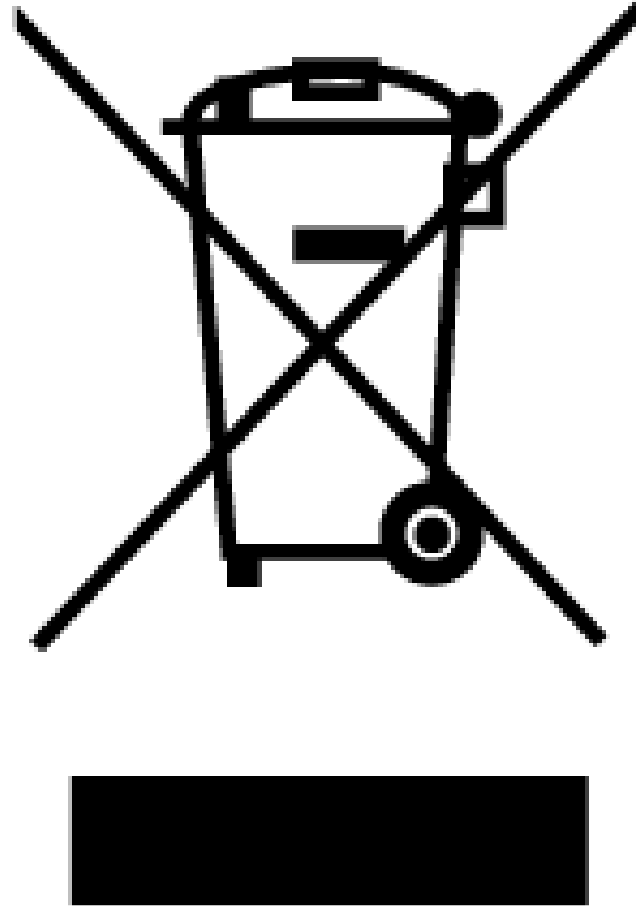	The european directive 2012/19 /UE on wasted electrical and electronic equipments (WEEE), requires that household electrical appliances must not be disposed of in the normal unsorted municipal waste stream. appliances must be collected separately in order to optimize the recovery and recycling of the materials they contain, and reduce the impact on human health and the environment. The crossed out “wheeled bin” symbol on the product reminds you of your obligation, that when you disposed of the appliances, it must be separately collected. Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance.
DISPOSAL: Do not dispose this product as unsorted municipal waste. Collection of such waste separately for special treatment is necessary.	

16. ERP PRODUCT FISCHE

MODEL(S): VOLTIUS Series Electric Boilers
CONDENSING BOILER: NO
LOW TEMP. BOILER: NO
BI BOILER: NO
CO-GENERATION SPACE HEATER: NO
COMBINATION HEATER: NO

16.1 ERP PRODUCT INFORMATION

(In accordance with EU regulation no. 813/2013, 814/2013)

SPECIFICATIONS	Unit	MODEL												
		Voltius 6	Voltius 10	Voltius 12	Voltius 15	Voltius 18	Voltius 24	Voltius 30	Voltius 35	Voltius 40	Voltius 50	Voltius 60	Voltius 80	Voltius 100
Product Description		Electric Boiler												
Brand		The Electric Heating Company Ltd												
Seasonal Space Heating Energy Efficiency Class		D	D	D	D	D	D	D	D	D	D	D	D	D
Nominal rated heat output (Prated)	kW	6	10	12	15	18	24	30	35	40	50	60	80	100
Space heating –Annual energy consumption*	GJ	19	32	38	47	57	76	95	110	127	158	190	253	316
Seasonal space heating energy efficiencyi (ηs)	%	39	39	38	38	38.5	38.5	38.5	37.5	37.5	39	39	38.5	38
Aux. Energy consumption at full load (elmax)	kW	0.075	0.075	0.075	0.075	0.075	0.075	0.075	0.075	0.075	0.075	0.075	0.075	0.075
Aux. Energy consumption at partial loadi (elmin)	kW	0.045	0.045	0.045	0.045	0.045	0.045	0.045	0.045	0.045	0.045	0.045	0.045	0.045
Energy consumption in standby mode (Psb)	kW	0.005	0.005	0.005	0.005	0.005	0.005	0.005	0.005	0.005	0.005	0.005	0.005	0.005
Standby heat loss (Pstby)	kW	0.05	0.05	0.07	0.11	0.11	0.07	0.07	0.07	0.07	0.11	0.11	0.11	0.11
Sound level, L _{WA}	dB	22	28	32	35	36	36	36	38	38	42	42	42	48
Special precautions for assembly, installation and maintenance	Before any assembly, installation or maintenance, the user and installation manual should be read carefully and the instructions should be followed.													
All data contained in the product information have been determined by applying the specifications of the relevant European directives. Product information listed in different places may result in different test conditions. Only the data contained in this product information is valid.														
* for average climatic conditions														

Notes;



Electric heating Company Ltd
Unit 40, Block 5, Third Road, Blantyre Industrial Estate, Blantyre,
Glasgow, G72 0UP

Tel: 01698 820533 Fax: 01698 825697

www.electric-heatingcompany.co.uk